

SERVICE MANUAL

COMPACT DISC
STEREO SYSTEM

BASIC TAPE MECHANISM : AZM-1 A2NM
BASIC CD MECHANISM : DA23LN


SYSTEM	STEREO RECEIVER	CASSETTE DECK/ CD PLAYER	SPEAKER	REMOTE CONTROLLER
XR-M800	RX-LM800	FD-LM800	SX-LM810	RC-AAT22
XR-M801	RX-LM801	FD-LM801		

- This Service Manual contains the additional information "DISASSEMBLY INSTRUCTIONS" and "TEST MODE" for the model XR-M800/M801 (K,EZ). If requiring the other information, see Service Manual of XR-M800/801 (K,EZ), (S/M Code No. 09-00B-437-1R1).


DISASSEMBLY INSTRUCTIONS <FD-LM800/LM801>

1. Removing the Ornament Parts


1) Remove the two screws.

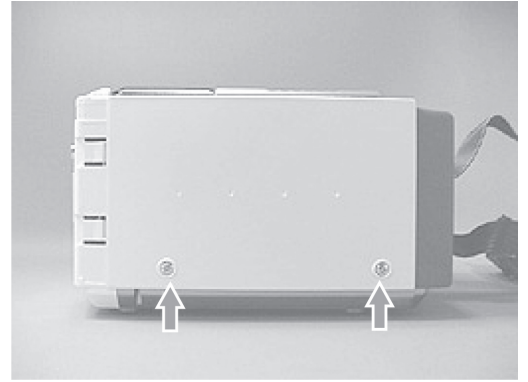



2) Remove the two screws.

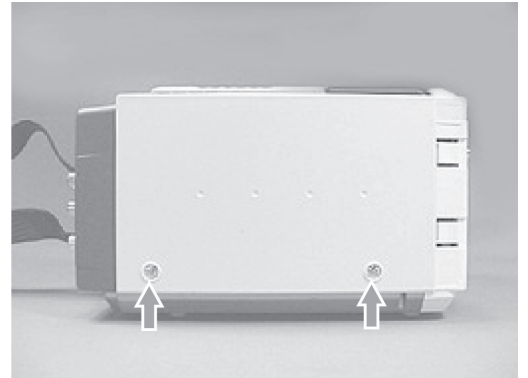

3) Remove the eight screws ① and remove the PANEL, REAR.

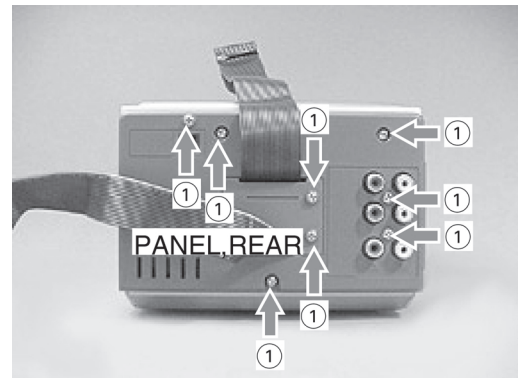


4) Remove the FFC from the connector ① and remove PANEL, TOP ②.

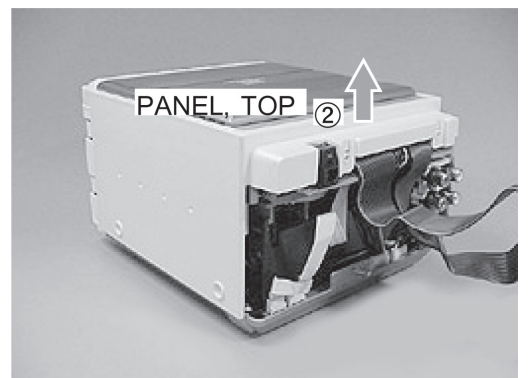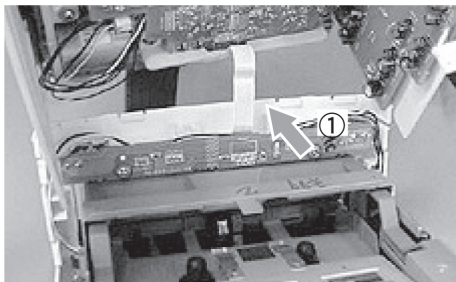


2. Removing the CD Block

- 1) Remove the two screws and remove the entire CD block.

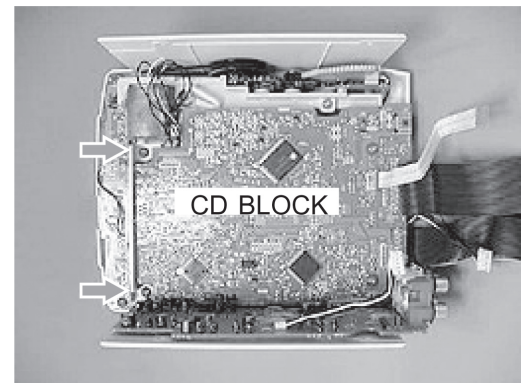


- 2) The figure shows the status after the CD block is removed.

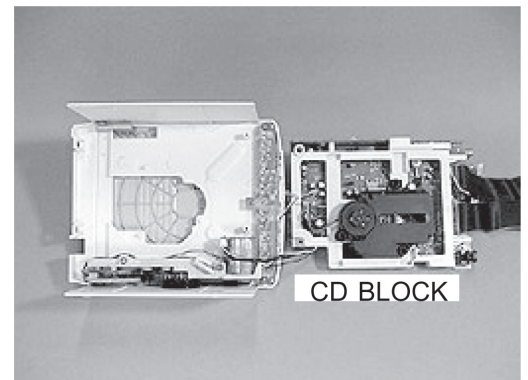


3. Removing the DECK Block


- 1) Remove the screw.

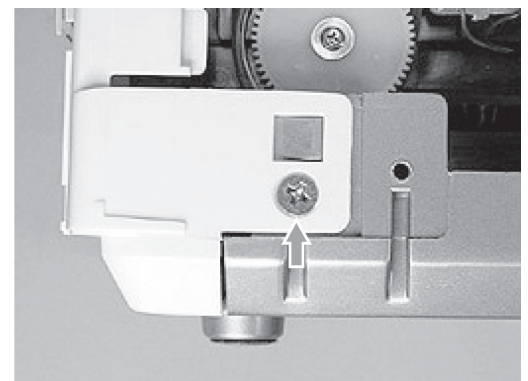


- 2) Remove the screw.

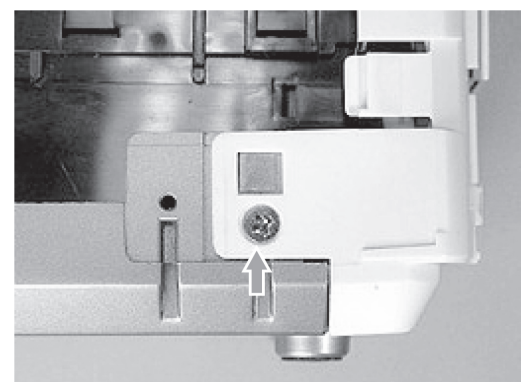

- 3) Remove the four screws ①, remove the FRONT block ② and remove the DECK block.

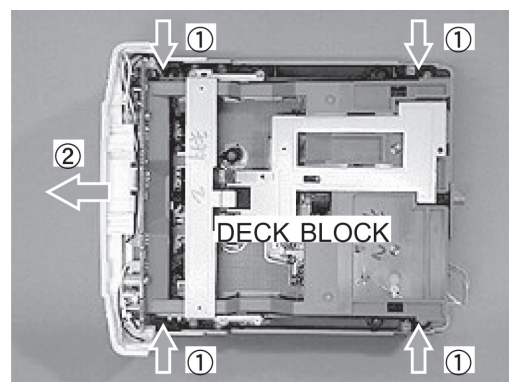

- 4) The figure shows the status after the DECK block is removed.

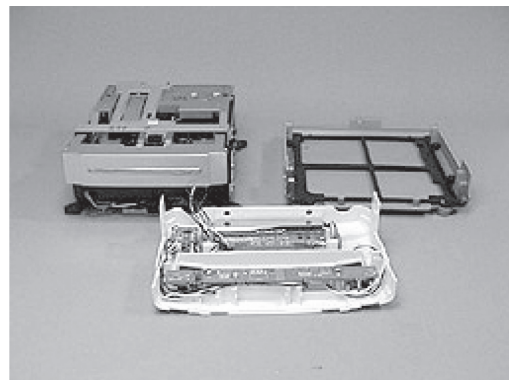

CD TEST MODE

1. How to Start the CD Test Mode

While pressing the function button, insert the AC plug to the wall outlet. All the indicators on the display light, which means that the test mode starts up.

2. How to Exit the CD Test Mode

Disconnect the AC plug.

3. Function Descriptions and Application of the CD Test Mode

No	Mode	Operation	FL indication	Function	Checking item
1	Start mode		All indicators light		<ul style="list-style-type: none"> Checking FL Checking microprocessor
2	Search mode	■	CD	<ul style="list-style-type: none"> FL lights Continuous focus search *1 *2 	<ul style="list-style-type: none"> APC circuit Laser current Focus search waveform Focus error waveform (FOK and FZC are not monitored in the search mode)
3	Play mode	◀ ▶	Normal time display	<ul style="list-style-type: none"> Normal playback If TOC cannot be read, focus search of “2” is continued 	<ul style="list-style-type: none"> Focus servo Tracking servo Sled servo Spindle servo FOK RF waveform
4	Traverse mode		Normal time display	<ul style="list-style-type: none"> Tracking servo OFF/ON. Each time is pressed, the tracking servo repeats turning off/on. 	<ul style="list-style-type: none"> Tracking servo Traverse waveform
5	Sled mode	◀◀ ▶▶	CD TEST	<ul style="list-style-type: none"> Pickup moves to the outermost track *3 Pickup moves to the innermost track (normal operation during playback) 	<ul style="list-style-type: none"> Sled circuit Mechanism

*1: The driver IC heats up and the protection circuit starts working when the focus search is continued for 10 minutes or longer. There can be a case that operations cannot be performed correctly.


In such a case, turn off the main power. After cooling down the machine, restart the machine.

*2: Before performing the visual check of the lens operation, slightly open the CD lid by hand. If you press the OPEN button and open the CD lid, the search mode exists.

*3: Be careful not to damage the gear because the sled motor rotates while the FF or REW button is being pressed even if the pick-up is located in the innermost track or the outermost track.

4. Overview of Operation

Each operation mode can be operated one mode after another using each button in the order starting from the “Start” mode that is shown by the arrow mark in the illustration.

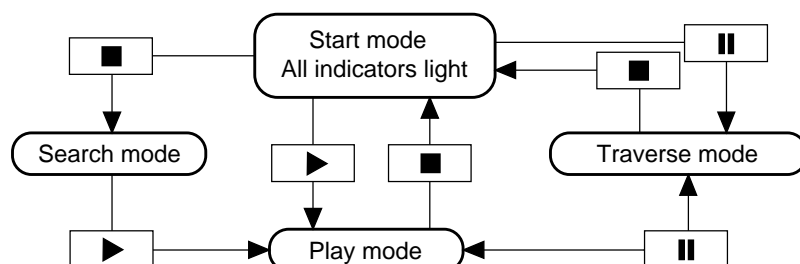

アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111



XR-M800 K
XR-M801 EZ

SERVICE MANUAL

COMPACT DISC
STEREO SYSEEM

aiwa

S/M Code No. 09-009-437-1T1

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	ACCESSORY		87-006-225-010		ANT, LOOP ANT NC2	KSM	RX-SLM800
O	ACCESSORY		87-006-225-010		ANT, LOOP ANT NC2	EZSM	RX-SLM801
O	ACCESSORY		87-006-225-010	1D	ANT, LOOP ANT NC2	KSM	RX-SLM800
O	ACCESSORY		87-006-225-010	1D	ANT, LOOP ANT NC2	EZSM	RX-SLM801
O	ACCESSORY		87-A90-118-010		ANT, WIRE FM (Z)	KSM	RX-SLM800
O	ACCESSORY		87-A90-118-010		ANT, WIRE FM (Z)	EZSM	RX-SLM801
O	ACCESSORY		87-A90-118-010	OE	ANT, WIRE FM (Z)	KSM	RX-SLM800
O	ACCESSORY		87-A90-118-010	OE	ANT, WIRE FM (Z)	EZSM	RX-SLM801
O	ACCESSORY		8A-CL2-950-010		RC UNIT, RC-AAT22	KSM	RX-SLM800
O	ACCESSORY		8A-CL2-950-010		RC UNIT, RC-AAT22	EZSM	RX-SLM801
O	ACCESSORY		8A-CL2-950-010	--	RC UNIT, RC-AAT22	KSM	RX-SLM800
O	ACCESSORY		8A-CL2-950-010	--	RC UNIT, RC-AAT22	EZSM	RX-SLM801
X	ACCESSORY		8Z-CL1-951-010	1B	C-IC, KS51850-H1DS	KSM	RX-SLM800
X	ACCESSORY		8Z-CL1-951-010	1B	C-IC, KS51850-H1DS	EZSM	RX-SLM801
O	ACCESSORY		8Z-CL1-951-010		C-IC, KS51850-H1DS	KSM	RX-SLM800
O	ACCESSORY		8Z-CL1-951-010		C-IC, KS51850-H1DS	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-001-010		CABI, FR (AMP)	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-001-010		CABI, FR (AMP)	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-001-010	--	CABI, FR (AMP)	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-001-010	--	CABI, FR (AMP)	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-003-010		CABI, TOP (AMP)	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-003-010		CABI, TOP (AMP)	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-003-010	--	CABI, TOP (AMP)	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-003-010	--	CABI, TOP (AMP)	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-004-010		CABI, BOTTOM (AMP)	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-004-010		CABI, BOTTOM (AMP)	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-004-010	--	CABI, BOTTOM (AMP)	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-004-010	--	CABI, BOTTOM (AMP)	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-005-010		PANEL, FR (AMP)	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-005-010		PANEL, FR (AMP)	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-005-010	--	PANEL, FR (AMP)	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-005-010	--	PANEL, FR (AMP)	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-006-010		PANEL, TOP (AMP)	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-006-010		PANEL, TOP (AMP)	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-006-010	--	PANEL, TOP (AMP)	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-006-010	--	PANEL, TOP (AMP)	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-007-010		WINDOW, LCD	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-007-010		WINDOW, LCD	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-007-010	--	WINDOW, LCD	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-007-010	--	WINDOW, LCD	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-008-010		REFLECTOR, FR	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-008-010		REFLECTOR, FR	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-008-010	--	REFLECTOR, FR	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-008-010	--	REFLECTOR, FR	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-009-010		WINDOW, ST-BY	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-009-010		WINDOW, ST-BY	EZSM	RX-SLM801
O	APPEARANCE		8A-CU2-009-010	--	WINDOW, ST-BY	KSM	RX-SLM800
O	APPEARANCE		8A-CU2-009-010	--	WINDOW, ST-BY	EZSM	RX-SLM801
O	APPEARANCE		8A-CUC-005-010		CABI, REAR AMP (12)	KSM	RX-SLM800
O	APPEARANCE		8A-CUC-005-010		CABI, REAR AMP (12)	EZSM	RX-SLM801
O	APPEARANCE		8A-CUC-005-010	--	CABI, REAR AMP (12)	KSM	RX-SLM800
O	APPEARANCE		8A-CUC-005-010	--	CABI, REAR AMP (12)	EZSM	RX-SLM801
O	ELECTRICAL		87-003-317-010		F-BEAD, 15-25-15 E2515MRT	KSM	RX-SLM800
O	ELECTRICAL		87-003-317-010		F-BEAD, 15-25-15 E2515MRT	EZSM	RX-SLM801
O	ELECTRICAL		87-012-199-080		C-CAP, U 220P-50 J CH	KSM	RX-SLM800
O	ELECTRICAL		87-012-199-080		C-CAP, U 220P-50 J CH	EZSM	RX-SLM801
O	ELECTRICAL		87-012-199-080	OE	C-CAP, U 220P-50 J CH	KSM	RX-SLM800
O	ELECTRICAL		87-012-199-080	OE	C-CAP, U 220P-50 J CH	EZSM	RX-SLM801
O	ELECTRICAL		87-085-185-010		BUSHING, AC CORD (E) CM-22B	KSM	RX-SLM800
O	ELECTRICAL		87-085-185-010		BUSHING, AC CORD (E) CM-22B	EZSM	RX-SLM801
!	O ELECTRICAL		87-085-185-010	OE	BUSHING, AC CORD (E) CM-22B	KSM	RX-SLM800
!	O ELECTRICAL		87-085-185-010	OE	BUSHING, AC CORD (E) CM-22B	EZSM	RX-SLM801
O	ELECTRICAL		87-099-811-010		PLUG, ADPTR CONV (K)	KSM	RX-SLM800
!	O ELECTRICAL		87-099-811-010	1E	PLUG, ADPTR CONV (K)	KSM	RX-SLM800
O	ELECTRICAL		87-A11-132-080		CAP, TC U 0.01-50 K B	KSM	RX-SLM800
O	ELECTRICAL		87-A11-132-080		CAP, TC U 0.01-50 K B	EZSM	RX-SLM801
O	ELECTRICAL		87-A11-132-080	OE	CAP, TC U 0.01-50 K B	KSM	RX-SLM800
O	ELECTRICAL		87-A11-132-080	OE	CAP, TC U 0.01-50 K B	EZSM	RX-SLM801
O	ELECTRICAL		87-A80-092-010		AC CORD ASSY, E BLK SUN FAI	EZSM	RX-SLM801
!	O ELECTRICAL		87-A80-092-010	1C	AC CORD ASSY, E BLK SUN FAI	EZSM	RX-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	ELECTRICAL		87-A80-143-010		AC CORD ASSY,E BLK	KSM	RX-SLM800
!	O ELECTRICAL		87-A80-143-010	1C	AC CORD ASSY,E BLK	KSM	RX-SLM800
O	ELECTRICAL		87-A90-978-010	1A	F-BEAD,7.94-12.7-12.7 HF70RH	KSM	RX-SLM800
O	ELECTRICAL		87-A90-978-010	1A	F-BEAD,7.94-12.7-12.7 HF70RH	EZSM	RX-SLM801
X	ELECTRICAL		89-990-030-110		WIRE,U24X0-3-3	KSM	RX-SLM800
X	ELECTRICAL		89-990-030-110		WIRE,U24X0-3-3	EZSM	RX-SLM801
X	ELECTRICAL		89-990-030-110	0E	WIRE,U24X0-3-3	KSM	RX-SLM800
X	ELECTRICAL		89-990-030-110	0E	WIRE,U24X0-3-3	EZSM	RX-SLM801
O	ELECTRICAL		8A-CJ6-620-010		LCD ASSY,ACJ-6	KSM	RX-SLM800
O	ELECTRICAL		8A-CJ6-620-010		LCD ASSY,ACJ-6	EZSM	RX-SLM801
O	ELECTRICAL		8A-CJ6-620-010	2C	LCD ASSY,ACJ-6	KSM	RX-SLM800
O	ELECTRICAL		8A-CJ6-620-010	2C	LCD ASSY,ACJ-6	EZSM	RX-SLM801
O	ELECTRICAL		8Z-CL1-663-010		FAN,MF40D-12-200MM	KSM	RX-SLM800
O	ELECTRICAL		8Z-CL1-663-010		FAN,MF40D-12-200MM	EZSM	RX-SLM801
!	O ELECTRICAL		8Z-CL1-663-010	2M	FAN,MF40D-12-200MM	KSM	RX-SLM800
!	O ELECTRICAL		8Z-CL1-663-010	2M	FAN,MF40D-12-200MM	EZSM	RX-SLM801
X	ELECTRICAL		8Z-CL1-677-010		SHLD-PLATE,TU	KSM	RX-SLM800
X	ELECTRICAL		8Z-CL1-677-010		SHLD-PLATE,TU	EZSM	RX-SLM801
X	ELECTRICAL		8Z-CL1-677-010	0E	SHLD-PLATE,TU	KSM	RX-SLM800
X	ELECTRICAL		8Z-CL1-677-010	0E	SHLD-PLATE,TU	EZSM	RX-SLM801
X	ELECTRICAL		A8-ZZA-193-030		ZZA-1 ZRDS RPNM	EZSM	RX-SLM801
X	ELECTRICAL		A8-ZZA-193-030	--	ZZA-1 ZRDS RPNM	EZSM	RX-SLM801
X	ELECTRICAL		A8-ZZA-194-030		ZZA-1 EZKG RPNM	KSM	RX-SLM800
X	ELECTRICAL		A8-ZZA-194-030	--	ZZA-1 EZKG RPNM	KSM	RX-SLM800
X	ELECTRICAL	*	8Z-CL1-662-010		TUBE,UL 12-140	KSM	RX-SLM800
X	ELECTRICAL	*	8Z-CL1-662-010		TUBE,UL 12-140	EZSM	RX-SLM801
X	ELECTRICAL	*	8Z-CL1-662-010	0E	TUBE,UL 12-140	KSM	RX-SLM800
X	ELECTRICAL	*	8Z-CL1-662-010	0E	TUBE,UL 12-140	EZSM	RX-SLM801
X	ELECTRICAL	*	8Z-CL1-664-010		TUBE,UL 8-190	KSM	RX-SLM800
X	ELECTRICAL	*	8Z-CL1-664-010		TUBE,UL 8-190	KSM	RX-SLM800
X	ELECTRICAL	*	8Z-CL1-664-010		TUBE,UL 8-190	EZSM	RX-SLM801
X	ELECTRICAL	*	8Z-CL1-664-010		TUBE,UL 8-190	EZSM	RX-SLM801
X	ELECTRICAL	*	8Z-CL1-664-010	0E	TUBE,UL 8-190	KSM	RX-SLM800
X	ELECTRICAL	*	8Z-CL1-664-010	0E	TUBE,UL 8-190	EZSM	RX-SLM801
O	ELECTRICAL	PT 0001	8Z-CL1-623-010		PT,E	KSM	RX-SLM800
O	ELECTRICAL	PT 0001	8Z-CL1-623-010		PT,E	EZSM	RX-SLM801
O	ELECTRICAL	PT 0001	8Z-CL1-623-010	2P	PT,E	KSM	RX-SLM800
O	ELECTRICAL	PT 0001	8Z-CL1-623-010	2P	PT,E	EZSM	RX-SLM801
O	KEY FRONT	C 0301	87-010-405-080		CAP,E 10-50 M 11L SME	KSM	RX-SLM800
O	KEY FRONT	C 0301	87-010-405-080		CAP,E 10-50 M 11L SME	EZSM	RX-SLM801
O	KEY FRONT	C 0301	87-010-405-080	0E	CAP,E 10-50 M 11L SME	KSM	RX-SLM800
O	KEY FRONT	C 0301	87-010-405-080	0E	CAP,E 10-50 M 11L SME	EZSM	RX-SLM801
O	KEY FRONT	C 0305	87-010-194-080		C-CAP,S 0.047-25 Z F	KSM	RX-SLM800
O	KEY FRONT	C 0305	87-010-194-080		C-CAP,S 0.047-25 Z F	EZSM	RX-SLM801
O	KEY FRONT	C 0305	87-010-194-080	0E	C-CAP,S 0.047-25 Z F	KSM	RX-SLM800
O	KEY FRONT	C 0305	87-010-194-080	0E	C-CAP,S 0.047-25 Z F	EZSM	RX-SLM801
O	KEY FRONT	CN 0301	87-099-553-010		CONN,4P H TUC-P	KSM	RX-SLM800
O	KEY FRONT	CN 0301	87-099-553-010		CONN,4P H TUC-P	EZSM	RX-SLM801
O	KEY FRONT	CN 0301	87-099-553-010	0E	CONN,4P H TUC-P	KSM	RX-SLM800
O	KEY FRONT	CN 0301	87-099-553-010	0E	CONN,4P H TUC-P	EZSM	RX-SLM801
O	KEY FRONT	CN 0302	87-A60-619-010		CONN,2P V 2MM JMT	KSM	RX-SLM800
O	KEY FRONT	CN 0302	87-A60-619-010		CONN,2P V 2MM JMT	EZSM	RX-SLM801
O	KEY FRONT	CN 0302	87-A60-619-010	0E	CONN,2P V 2MM JMT	KSM	RX-SLM800
O	KEY FRONT	CN 0302	87-A60-619-010	0E	CONN,2P V 2MM JMT	EZSM	RX-SLM801
O	KEY FRONT	CN 0303	87-A60-619-010		CONN,2P V 2MM JMT	KSM	RX-SLM800
O	KEY FRONT	CN 0303	87-A60-619-010		CONN,2P V 2MM JMT	EZSM	RX-SLM801
O	KEY FRONT	CN 0303	87-A60-619-010	0E	CONN,2P V 2MM JMT	KSM	RX-SLM800
O	KEY FRONT	CN 0303	87-A60-619-010	0E	CONN,2P V 2MM JMT	EZSM	RX-SLM801
O	KEY FRONT	CN 0306	87-A60-899-010		CONN,6P V BLK FMN-BTRK	KSM	RX-SLM800
O	KEY FRONT	CN 0306	87-A60-899-010		CONN,6P V BLK FMN-BTRK	EZSM	RX-SLM801
!	O KEY FRONT	CN 0306	87-A60-899-010	0E	CONN,6P V BLK FMN-BTRK	KSM	RX-SLM800
!	O KEY FRONT	CN 0306	87-A60-899-010	0E	CONN,6P V BLK FMN-BTRK	EZSM	RX-SLM801
O	KEY FRONT	CN 0307	87-099-564-010		CONN,4P V TUC-P4P-B1	KSM	RX-SLM800
O	KEY FRONT	CN 0307	87-099-564-010		CONN,4P V TUC-P4P-B1	EZSM	RX-SLM801
!	O KEY FRONT	CN 0307	87-099-564-010	0E	CONN,4P V TUC-P4P-B1	KSM	RX-SLM800
!	O KEY FRONT	CN 0307	87-099-564-010	0E	CONN,4P V TUC-P4P-B1	EZSM	RX-SLM801
O	KEY FRONT	CNA0301	88-805-020-790		CONN ASSY,2P 70MM	KSM	RX-SLM800
O	KEY FRONT	CNA0301	88-805-020-790		CONN ASSY,2P 70MM	EZSM	RX-SLM801

PARTS LIST

! = △ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	KEY FRONT	CNA0301	88-805-020-790	0E	CONN ASSY, 2P 70MM	KSM	RX-SLM800
O	KEY FRONT	CNA0301	88-805-020-790	0E	CONN ASSY, 2P 70MM	EZSM	RX-SLM801
O	KEY FRONT	CNA0302	88-805-020-790		CONN ASSY, 2P 70MM	KSM	RX-SLM800
O	KEY FRONT	CNA0302	88-805-020-790		CONN ASSY, 2P 70MM	EZSM	RX-SLM801
O	KEY FRONT	CNA0302	88-805-020-790	0E	CONN ASSY, 2P 70MM	KSM	RX-SLM800
O	KEY FRONT	CNA0302	88-805-020-790	0E	CONN ASSY, 2P 70MM	EZSM	RX-SLM801
S	KEY FRONT	D 0301	87-070-345-080		DIODE, 1N4148	KSM	RX-SLM800
S	KEY FRONT	D 0301	87-070-345-080		DIODE, 1N4148	EZSM	RX-SLM801
S	KEY FRONT	D 0301	87-070-345-080	0E	DIODE, 1N4148	KSM	RX-SLM800
S	KEY FRONT	D 0301	87-070-345-080	0E	DIODE, 1N4148	EZSM	RX-SLM801
S	KEY FRONT	D 0302	87-017-931-080		ZENER, MTZJ5.6B	KSM	RX-SLM800
S	KEY FRONT	D 0302	87-017-931-080		ZENER, MTZJ5.6B	EZSM	RX-SLM801
S	KEY FRONT	D 0302	87-017-931-080	0E	ZENER, MTZJ5.6B	KSM	RX-SLM800
S	KEY FRONT	D 0302	87-017-931-080	0E	ZENER, MTZJ5.6B	EZSM	RX-SLM801
X	KEY FRONT	JR 0301	88-118-000-080		C-JUMPER, S	KSM	RX-SLM800
X	KEY FRONT	JR 0301	88-118-000-080		C-JUMPER, S	EZSM	RX-SLM801
X	KEY FRONT	JR 0301	88-118-000-080	0E	C-JUMPER, S	KSM	RX-SLM800
X	KEY FRONT	JR 0301	88-118-000-080	0E	C-JUMPER, S	EZSM	RX-SLM801
O	KEY FRONT	LED0301	87-A40-317-080		LED, SLR-342VCT31 RED	KSM	RX-SLM800
O	KEY FRONT	LED0301	87-A40-317-080		LED, SLR-342VCT31 RED	EZSM	RX-SLM801
O	KEY FRONT	LED0301	87-A40-317-080	0E	LED, SLR-342VCT31 RED	KSM	RX-SLM800
O	KEY FRONT	LED0301	87-A40-317-080	0E	LED, SLR-342VCT31 RED	EZSM	RX-SLM801
O	KEY FRONT	LED0302	87-A40-786-080		LED, SMLS1BE16WTP4 BLU/UMB	KSM	RX-SLM800
O	KEY FRONT	LED0302	87-A40-786-080		LED, SMLS1BE16WTP4 BLU/UMB	EZSM	RX-SLM801
O	KEY FRONT	LED0302	87-A40-786-080	1E	LED, SMLS1BE16WTP4 BLU/UMB	KSM	RX-SLM800
O	KEY FRONT	LED0302	87-A40-786-080	1E	LED, SMLS1BE16WTP4 BLU/UMB	EZSM	RX-SLM801
O	KEY FRONT	LED0303	87-A40-786-080		LED, SMLS1BE16WTP4 BLU/UMB	KSM	RX-SLM800
O	KEY FRONT	LED0303	87-A40-786-080		LED, SMLS1BE16WTP4 BLU/UMB	EZSM	RX-SLM801
O	KEY FRONT	LED0303	87-A40-786-080	1E	LED, SMLS1BE16WTP4 BLU/UMB	KSM	RX-SLM800
O	KEY FRONT	LED0303	87-A40-786-080	1E	LED, SMLS1BE16WTP4 BLU/UMB	EZSM	RX-SLM801
O	KEY FRONT	LED0331	87-A40-678-010		LED, SELU1E10CXM BLUE-DEF	KSM	RX-SLM800
O	KEY FRONT	LED0331	87-A40-678-010		LED, SELU1E10CXM BLUE-DEF	EZSM	RX-SLM801
O	KEY FRONT	LED0331	87-A40-678-010	1D	LED, SELU1E10CXM BLUE-DEF	KSM	RX-SLM800
O	KEY FRONT	LED0331	87-A40-678-010	1D	LED, SELU1E10CXM BLUE-DEF	EZSM	RX-SLM801
O	KEY FRONT	LED0332	87-A40-678-010		LED, SELU1E10CXM BLUE-DEF	KSM	RX-SLM800
O	KEY FRONT	LED0332	87-A40-678-010		LED, SELU1E10CXM BLUE-DEF	EZSM	RX-SLM801
O	KEY FRONT	LED0332	87-A40-678-010	1D	LED, SELU1E10CXM BLUE-DEF	KSM	RX-SLM800
O	KEY FRONT	LED0332	87-A40-678-010	1D	LED, SELU1E10CXM BLUE-DEF	EZSM	RX-SLM801
S	KEY FRONT	Q 0301	87-A30-087-080		C-FET, 2SK2158	KSM	RX-SLM800
S	KEY FRONT	Q 0301	87-A30-087-080		C-FET, 2SK2158	EZSM	RX-SLM801
S	KEY FRONT	Q 0301	87-A30-087-080	0E	C-FET, 2SK2158	KSM	RX-SLM800
S	KEY FRONT	Q 0301	87-A30-087-080	0E	C-FET, 2SK2158	EZSM	RX-SLM801
S	KEY FRONT	Q 0302	87-026-580-080		C-TR, DTA123JK	KSM	RX-SLM800
S	KEY FRONT	Q 0302	87-026-580-080		C-TR, DTA123JK	EZSM	RX-SLM801
S	KEY FRONT	Q 0302	87-026-580-080	0E	C-TR, DTA123JK	KSM	RX-SLM800
S	KEY FRONT	Q 0302	87-026-580-080	0E	C-TR, DTA123JK	EZSM	RX-SLM801
S	KEY FRONT	Q 0303	87-026-580-080		C-TR, DTA123JK	KSM	RX-SLM800
S	KEY FRONT	Q 0303	87-026-580-080		C-TR, DTA123JK	EZSM	RX-SLM801
S	KEY FRONT	Q 0303	87-026-580-080	0E	C-TR, DTA123JK	KSM	RX-SLM800
S	KEY FRONT	Q 0303	87-026-580-080	0E	C-TR, DTA123JK	EZSM	RX-SLM801
S	KEY FRONT	Q 0304	87-026-580-080		C-TR, DTA123JK	KSM	RX-SLM800
S	KEY FRONT	Q 0304	87-026-580-080		C-TR, DTA123JK	EZSM	RX-SLM801
S	KEY FRONT	Q 0304	87-026-580-080	0E	C-TR, DTA123JK	KSM	RX-SLM800
S	KEY FRONT	Q 0304	87-026-580-080	0E	C-TR, DTA123JK	EZSM	RX-SLM801
S	KEY FRONT	Q 0305	87-026-610-080		TR, KTC3198GR	KSM	RX-SLM800
S	KEY FRONT	Q 0305	87-026-610-080		TR, KTC3198GR	EZSM	RX-SLM801
S	KEY FRONT	Q 0305	87-026-610-080	0E	TR, KTC3198GR	KSM	RX-SLM800
S	KEY FRONT	Q 0305	87-026-610-080	0E	TR, KTC3198GR	EZSM	RX-SLM801
S	KEY FRONT	Q 0306	87-A30-075-080		C-TR, 2SA1235F	KSM	RX-SLM800
S	KEY FRONT	Q 0306	87-A30-075-080		C-TR, 2SA1235F	EZSM	RX-SLM801
S	KEY FRONT	Q 0306	87-A30-075-080	0E	C-TR, 2SA1235F	KSM	RX-SLM800
S	KEY FRONT	Q 0306	87-A30-075-080	0E	C-TR, 2SA1235F	EZSM	RX-SLM801
S	KEY FRONT	Q 0307	87-A30-073-080		C-TR, RT1N 141C	KSM	RX-SLM800
S	KEY FRONT	Q 0307	87-A30-073-080		C-TR, RT1N 141C	EZSM	RX-SLM801
S	KEY FRONT	Q 0307	87-A30-073-080	0E	C-TR, RT1N 141C	KSM	RX-SLM800
S	KEY FRONT	Q 0307	87-A30-073-080	0E	C-TR, RT1N 141C	EZSM	RX-SLM801
S	KEY FRONT	Q 0308	87-026-580-080		C-TR, DTA123JK	KSM	RX-SLM800
S	KEY FRONT	Q 0308	87-026-580-080		C-TR, DTA123JK	EZSM	RX-SLM801
S	KEY FRONT	Q 0308	87-026-580-080	0E	C-TR, DTA123JK	KSM	RX-SLM800
S	KEY FRONT	Q 0308	87-026-580-080	0E	C-TR, DTA123JK	EZSM	RX-SLM801

! = SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

-5-

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	KEY FRONT	R 0326	88-130-121-080	0E	RES,120-1/4W J	KSM	RX-SLM800
X	KEY FRONT	R 0326	88-130-121-080	0E	RES,120-1/4W J	EZSM	RX-SLM801
X	KEY FRONT	R 0327	88-130-101-080		RES,100-1/4W J	KSM	RX-SLM800
X	KEY FRONT	R 0327	88-130-101-080		RES,100-1/4W J	EZSM	RX-SLM801
X	KEY FRONT	R 0327	88-130-101-080	0E	RES,100-1/4W J	KSM	RX-SLM800
X	KEY FRONT	R 0327	88-130-101-080	0E	RES,100-1/4W J	EZSM	RX-SLM801
X	KEY FRONT	R 0328	88-130-221-080		RES,220-1/4W J	KSM	RX-SLM800
X	KEY FRONT	R 0328	88-130-221-080		RES,220-1/4W J	EZSM	RX-SLM801
X	KEY FRONT	R 0328	88-130-221-080	0E	RES,220-1/4W J	KSM	RX-SLM800
X	KEY FRONT	R 0328	88-130-221-080	0E	RES,220-1/4W J	EZSM	RX-SLM801
X	KEY FRONT	R 0329	88-130-221-080		RES,220-1/4W J	KSM	RX-SLM800
X	KEY FRONT	R 0329	88-130-221-080		RES,220-1/4W J	EZSM	RX-SLM801
X	KEY FRONT	R 0329	88-130-221-080	0E	RES,220-1/4W J	KSM	RX-SLM800
X	KEY FRONT	R 0329	88-130-221-080	0E	RES,220-1/4W J	EZSM	RX-SLM801
X	KEY FRONT	R 0334	88-121-103-080		RES,10K-1/8W J	KSM	RX-SLM800
X	KEY FRONT	R 0334	88-121-103-080		RES,10K-1/8W J	EZSM	RX-SLM801
X	KEY FRONT	R 0334	88-121-103-080	0E	RES,10K-1/8W J	KSM	RX-SLM800
X	KEY FRONT	R 0334	88-121-103-080	0E	RES,10K-1/8W J	EZSM	RX-SLM801
X	KEY FRONT	R 0335	88-118-392-080		C-RES,S 3.9K-1/10W J	KSM	RX-SLM800
X	KEY FRONT	R 0335	88-118-392-080		C-RES,S 3.9K-1/10W J	EZSM	RX-SLM801
X	KEY FRONT	R 0335	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	KSM	RX-SLM800
X	KEY FRONT	R 0335	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	EZSM	RX-SLM801
X	MECHANICAL		8A-CU2-211-010		CHAS,MAIN (AMP)	KSM	RX-SLM800
X	MECHANICAL		8A-CU2-211-010		CHAS,MAIN (AMP)	EZSM	RX-SLM801
X	MECHANICAL		8A-CU2-211-010	--	CHAS,MAIN (AMP)	KSM	RX-SLM800
X	MECHANICAL		8A-CU2-211-010	--	CHAS,MAIN (AMP)	EZSM	RX-SLM801
X	OTHER		8A-CU2-619-010		PWB,LED 1	KSM	RX-SLM800
X	OTHER		8A-CU2-619-010		PWB,LED 1	EZSM	RX-SLM801
X	OTHER		8A-CU2-619-010	--	PWB,LED 1	KSM	RX-SLM800
X	OTHER		8A-CU2-619-010	--	PWB,LED 1	EZSM	RX-SLM801
X	OTHER		8A-CU2-620-010		PWB,LED 2	KSM	RX-SLM800
X	OTHER		8A-CU2-620-010		PWB,LED 2	EZSM	RX-SLM801
X	OTHER		8A-CU2-620-010	--	PWB,LED 2	KSM	RX-SLM800
X	OTHER		8A-CU2-620-010	--	PWB,LED 2	EZSM	RX-SLM801
X	OTHER		8A-CU2-621-010		PWB,LED 3	KSM	RX-SLM800
X	OTHER		8A-CU2-621-010		PWB,LED 3	EZSM	RX-SLM801
X	OTHER		8A-CU2-621-010	--	PWB,LED 3	KSM	RX-SLM800
X	OTHER		8A-CU2-621-010	--	PWB,LED 3	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-611-010		PWB,COMB MAIN	KSM	RX-SLM800
X	OTHER	*	8A-CU2-611-010		PWB,COMB MAIN	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-611-010	1F	PWB,COMB MAIN	KSM	RX-SLM800
X	OTHER	*	8A-CU2-611-010	1F	PWB,COMB MAIN	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-612-010		PWB,POWER	KSM	RX-SLM800
X	OTHER	*	8A-CU2-612-010		PWB,POWER	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-612-010	--	PWB,POWER	KSM	RX-SLM800
X	OTHER	*	8A-CU2-612-010	--	PWB,POWER	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-613-010		PWB,POW AMP	KSM	RX-SLM800
X	OTHER	*	8A-CU2-613-010		PWB,POW AMP	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-613-010	--	PWB,POW AMP	KSM	RX-SLM800
X	OTHER	*	8A-CU2-613-010	--	PWB,POW AMP	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-614-010		PWB,MAIN PT	KSM	RX-SLM800
X	OTHER	*	8A-CU2-614-010		PWB,MAIN PT	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-614-010	--	PWB,MAIN PT	KSM	RX-SLM800
X	OTHER	*	8A-CU2-614-010	--	PWB,MAIN PT	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-615-010		PWB,SUB PT	KSM	RX-SLM800
X	OTHER	*	8A-CU2-615-010		PWB,SUB PT	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-615-010	--	PWB,SUB PT	KSM	RX-SLM800
X	OTHER	*	8A-CU2-615-010	--	PWB,SUB PT	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-616-010		PWB,TU INT	KSM	RX-SLM800
X	OTHER	*	8A-CU2-616-010		PWB,TU INT	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-616-010	--	PWB,TU INT	KSM	RX-SLM800
X	OTHER	*	8A-CU2-616-010	--	PWB,TU INT	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-617-010		PWB,FRONT	KSM	RX-SLM800
X	OTHER	*	8A-CU2-617-010		PWB,FRONT	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-617-010	--	PWB,FRONT	KSM	RX-SLM800
X	OTHER	*	8A-CU2-617-010	--	PWB,FRONT	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-618-010		PWB,JACK	KSM	RX-SLM800
X	OTHER	*	8A-CU2-618-010		PWB,JACK	EZSM	RX-SLM801
X	OTHER	*	8A-CU2-618-010	--	PWB,JACK	KSM	RX-SLM800
X	OTHER	*	8A-CU2-618-010	--	PWB,JACK	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	OTHER	C	0182	87-010-322-080	C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0182	87-010-322-080	C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0182	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0182	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0183	87-010-322-080	C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0183	87-010-322-080	C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0183	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0183	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0184	87-010-322-080	C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0184	87-010-322-080	C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0184	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0184	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0185	87-010-322-080	C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0185	87-010-322-080	C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0185	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0185	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0186	87-010-322-080	C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0186	87-010-322-080	C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0186	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0186	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0187	87-010-322-080	C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0187	87-010-322-080	C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0187	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0187	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0188	87-010-322-080	C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0188	87-010-322-080	C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0188	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0188	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0189	87-010-322-080	C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0189	87-010-322-080	C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0189	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0189	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0190	87-010-322-080	C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0190	87-010-322-080	C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0190	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	KSM RX-SLM800
O	OTHER	C	0190	87-010-322-080	OE C-CAP,S	100P-50 J CH GRM	EZSM RX-SLM801
O	OTHER	C	0501	87-010-198-080	C-CAP,S	0.022-25 K B C2012	KSM RX-SLM800
O	OTHER	C	0501	87-010-198-080	C-CAP,S	0.022-25 K B C2012	EZSM RX-SLM801
O	OTHER	C	0501	87-010-198-080	OE C-CAP,S	0.022-25 K B C2012	KSM RX-SLM800
O	OTHER	C	0501	87-010-198-080	OE C-CAP,S	0.022-25 K B C2012	EZSM RX-SLM801
O	OTHER	C	0502	87-010-198-080	C-CAP,S	0.022-25 K B C2012	KSM RX-SLM800
O	OTHER	C	0502	87-010-198-080	C-CAP,S	0.022-25 K B C2012	EZSM RX-SLM801
O	OTHER	C	0502	87-010-198-080	OE C-CAP,S	0.022-25 K B C2012	KSM RX-SLM800
O	OTHER	C	0502	87-010-198-080	OE C-CAP,S	0.022-25 K B C2012	EZSM RX-SLM801
O	OTHER	C	0504	87-010-190-080	C-CAP,S	0.01-50 Z F C2012	KSM RX-SLM800
O	OTHER	C	0504	87-010-190-080	C-CAP,S	0.01-50 Z F C2012	EZSM RX-SLM801
O	OTHER	C	0504	87-010-190-080	OE C-CAP,S	0.01-50 Z F C2012	KSM RX-SLM800
O	OTHER	C	0504	87-010-190-080	OE C-CAP,S	0.01-50 Z F C2012	EZSM RX-SLM801
O	OTHER	CN	0104	87-099-563-010	CONN,20P	TUC-P20X-B1	EZSM RX-SLM801
O	OTHER	CN	0104	87-099-563-010	1A CONN,20P	TUC-P20X-B1	EZSM RX-SLM801
O	OTHER	CN	0105	87-099-562-010	CONN,18P	TUC-P18X-B1	KSM RX-SLM800
O	OTHER	CN	0105	87-099-562-010	1A CONN,18P	TUC-P18X-B1	KSM RX-SLM800
O	OTHER	CN	0114	87-099-570-010	CONN,13P	V TUC-P13P-B1	KSM RX-SLM800
!	O	CN	0114	87-099-570-010	1A CONN,13P	V TUC-P13P-B1	KSM RX-SLM800
O	OTHER	CN	0115	87-A60-624-010	CONN,7P	V 2MM JMT	KSM RX-SLM800
O	OTHER	CN	0115	87-A60-624-010	CONN,7P	V 2MM JMT	EZSM RX-SLM801
O	OTHER	CN	0115	87-A60-671-010	OE CONN,7P	H 2MM JMT	KSM RX-SLM800
O	OTHER	CN	0115	87-A60-671-010	OE CONN,7P	H 2MM JMT	EZSM RX-SLM801
O	OTHER	CN	0116	87-099-574-010	CONN,20P	TUC-P20P-B1	EZSM RX-SLM801
O	OTHER	CN	0116	87-099-574-010	OE CONN,20P	TUC-P20P-B1	EZSM RX-SLM801
O	OTHER	CN	0117	87-A60-189-010	CONN,16P	V TUC-P16P-B1	EZSM RX-SLM801
!	O	CN	0117	87-A60-189-010	OE CONN,16P	V TUC-P16P-B1	EZSM RX-SLM801
O	OTHER	CN	0118	87-099-573-010	CONN,18P	TUC-P18P-B1	KSM RX-SLM800
O	OTHER	CN	0118	87-099-573-010	OE CONN,18P	TUC-P18P-B1	KSM RX-SLM800
O	OTHER	CN	0119	87-A60-675-010	CONN,11P	H 2MM JMT	KSM RX-SLM800
O	OTHER	CN	0119	87-A60-675-010	CONN,11P	H 2MM JMT	EZSM RX-SLM801
O	OTHER	CN	0119	87-A60-675-010	OE CONN,11P	H 2MM JMT	KSM RX-SLM800
O	OTHER	CN	0119	87-A60-675-010	OE CONN,11P	H 2MM JMT	EZSM RX-SLM801
O	OTHER	J	0502	87-A60-782-010	CONN,19P	H FG	KSM RX-SLM800
O	OTHER	J	0502	87-A60-782-010	CONN,19P	H FG	EZSM RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	OTHER	J 0502	87-A60-782-010	1B	CONN,19P H FG	KSM	RX-SLM800
O	OTHER	J 0502	87-A60-782-010	1B	CONN,19P H FG	EZSM	RX-SLM801
X	OTHER	JR 0501	88-118-000-080		C-JUMPER,S	KSM	RX-SLM800
X	OTHER	JR 0501	88-118-000-080		C-JUMPER,S	EZSM	RX-SLM801
X	OTHER	JR 0501	88-118-000-080	0E	C-JUMPER,S	KSM	RX-SLM800
X	OTHER	JR 0501	88-118-000-080	0E	C-JUMPER,S	EZSM	RX-SLM801
X	OTHER	JR 0502	88-118-000-080		C-JUMPER,S	KSM	RX-SLM800
X	OTHER	JR 0502	88-118-000-080		C-JUMPER,S	EZSM	RX-SLM801
X	OTHER	JR 0502	88-118-000-080	0E	C-JUMPER,S	KSM	RX-SLM800
X	OTHER	JR 0502	88-118-000-080	0E	C-JUMPER,S	EZSM	RX-SLM801
S	OTHER	Q 0510	87-A30-087-080		C-FET,2SK2158	KSM	RX-SLM800
S	OTHER	Q 0510	87-A30-087-080		C-FET,2SK2158	EZSM	RX-SLM801
S	OTHER	Q 0510	87-A30-087-080	0E	C-FET,2SK2158	KSM	RX-SLM800
S	OTHER	Q 0510	87-A30-087-080	0E	C-FET,2SK2158	EZSM	RX-SLM801
X	OTHER	R 0189	88-118-102-080		C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	OTHER	R 0189	88-118-102-080		C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	OTHER	R 0189	88-118-102-080	0E	C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	OTHER	R 0189	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	OTHER	R 0190	88-118-102-080		C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	OTHER	R 0190	88-118-102-080		C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	OTHER	R 0190	88-118-102-080	0E	C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	OTHER	R 0190	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	OTHER	R 0501	88-118-183-080		C-RES,S 18K-1/10W J	KSM	RX-SLM800
X	OTHER	R 0501	88-118-183-080		C-RES,S 18K-1/10W J	EZSM	RX-SLM801
X	OTHER	R 0501	88-118-183-080	0E	C-RES,S 18K-1/10W J	KSM	RX-SLM800
X	OTHER	R 0501	88-118-183-080	0E	C-RES,S 18K-1/10W J	EZSM	RX-SLM801
X	OTHER	R 0502	88-121-223-080		RES,22K-1/8W J	KSM	RX-SLM800
X	OTHER	R 0502	88-121-223-080		RES,22K-1/8W J	EZSM	RX-SLM801
X	OTHER	R 0502	88-121-223-080	0E	RES,22K-1/8W J	KSM	RX-SLM800
X	OTHER	R 0502	88-121-223-080	0E	RES,22K-1/8W J	EZSM	RX-SLM801
X	OTHER	R 0510	88-118-104-080		C-RES,S 100K-1/10W J	EZSM	RX-SLM801
X	OTHER	R 0510	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZSM	RX-SLM801
X	OTHER	R 0511	88-118-105-080		C-RES,S 1M-1/10W J	EZSM	RX-SLM801
X	OTHER	R 0511	88-118-105-080	0E	C-RES,S 1M-1/10W J	EZSM	RX-SLM801
X	OTHER	W 0502	8Z-CL1-668-010		WIRE,FASTON ASSY CL1	KSM	RX-SLM800
X	OTHER	W 0502	8Z-CL1-668-010		WIRE,FASTON ASSY CL1	EZSM	RX-SLM801
X	OTHER	W 0502	8Z-CL1-668-010	1A	WIRE,FASTON ASSY CL1	KSM	RX-SLM800
X	OTHER	W 0502	8Z-CL1-668-010	1A	WIRE,FASTON ASSY CL1	EZSM	RX-SLM801
O	OTHERS		86-NF6-211-010		HLDR,IC T1.6	KSM	RX-SLM800
O	OTHERS		86-NF6-211-010		HLDR,IC T1.6	EZSM	RX-SLM801
O	OTHERS		8A-CJ6-021-010		REFLECTOR,LCD	KSM	RX-SLM800
O	OTHERS		8A-CJ6-021-010		REFLECTOR,LCD	EZSM	RX-SLM801
O	OTHERS		8A-CJ6-021-010	1C	REFLECTOR,LCD	KSM	RX-SLM800
O	OTHERS		8A-CJ6-021-010	1C	REFLECTOR,LCD	EZSM	RX-SLM801
O	OTHERS		8A-CJ6-212-010		HLDR,LCD	KSM	RX-SLM800
O	OTHERS		8A-CJ6-212-010		HLDR,LCD	EZSM	RX-SLM801
O	OTHERS		8A-CJ6-212-010	0E	HLDR,LCD	KSM	RX-SLM800
O	OTHERS		8A-CJ6-212-010	0E	HLDR,LCD	EZSM	RX-SLM801
X	OTHERS		8A-CJ6-218-010		SH, 23-3.5-0.15 W/ADH	KSM	RX-SLM800
X	OTHERS		8A-CJ6-218-010		SH, 23-3.5-0.15 W/ADH	EZSM	RX-SLM801
X	OTHERS		8A-CJ6-218-010	0E	SH, 23-3.5-0.15 W/ADH	KSM	RX-SLM800
X	OTHERS		8A-CJ6-218-010	0E	SH, 23-3.5-0.15 W/ADH	EZSM	RX-SLM801
O	OTHERS		8A-CU2-202-010		HLDR,ST-BY	KSM	RX-SLM800
O	OTHERS		8A-CU2-202-010		HLDR,ST-BY	EZSM	RX-SLM801
O	OTHERS		8A-CU2-202-010	--	HLDR,ST-BY	KSM	RX-SLM800
O	OTHERS		8A-CU2-202-010	--	HLDR,ST-BY	EZSM	RX-SLM801
O	OTHERS		8A-CU2-203-010		HLDR,PT	KSM	RX-SLM800
O	OTHERS		8A-CU2-203-010		HLDR,PT	EZSM	RX-SLM801
O	OTHERS		8A-CU2-203-010	--	HLDR,PT	KSM	RX-SLM800
O	OTHERS		8A-CU2-203-010	--	HLDR,PT	EZSM	RX-SLM801
O	OTHERS		8A-CU2-205-010		GUIDE,LED A	KSM	RX-SLM800
O	OTHERS		8A-CU2-205-010		GUIDE,LED A	EZSM	RX-SLM801
O	OTHERS		8A-CU2-205-010	--	GUIDE,LED A	KSM	RX-SLM800
O	OTHERS		8A-CU2-205-010	--	GUIDE,LED A	EZSM	RX-SLM801
X	OTHERS		8A-CU2-207-010		HT-SINK,A	KSM	RX-SLM800
X	OTHERS		8A-CU2-207-010		HT-SINK,A	EZSM	RX-SLM801
X	OTHERS		8A-CU2-207-010	--	HT-SINK,A	KSM	RX-SLM800
X	OTHERS		8A-CU2-207-010	--	HT-SINK,A	EZSM	RX-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	OTHERS		8A-CU2-210-010		FOOT, ACJ-2	KSM	RX-SLM800
O	OTHERS		8A-CU2-210-010		FOOT, ACJ-2	EZSM	RX-SLM801
O	OTHERS		8A-CU2-210-010	0E	FOOT, ACJ-2	KSM	RX-SLM800
O	OTHERS		8A-CU2-210-010	0E	FOOT, ACJ-2	EZSM	RX-SLM801
X	OTHERS		8A-CU2-213-010		HT-SINK, FIN	KSM	RX-SLM800
X	OTHERS		8A-CU2-213-010		HT-SINK, FIN	EZSM	RX-SLM801
X	OTHERS		8A-CU2-213-010	--	HT-SINK, FIN	KSM	RX-SLM800
X	OTHERS		8A-CU2-213-010	--	HT-SINK, FIN	EZSM	RX-SLM801
X	OTHERS		8A-CU2-214-010		HT-SINK, ASSY	KSM	RX-SLM800
X	OTHERS		8A-CU2-214-010		HT-SINK, ASSY	EZSM	RX-SLM801
X	OTHERS		8A-CU2-215-010		SH, SUB-PT	KSM	RX-SLM800
X	OTHERS		8A-CU2-215-010		SH, SUB-PT	EZSM	RX-SLM801
X	OTHERS		8A-CU2-216-010		PLATE, SHLD TOP A	KSM	RX-SLM800
X	OTHERS		8A-CU2-216-010		PLATE, SHLD TOP A	EZSM	RX-SLM801
X	OTHERS		8A-CU2-217-010		PLATE, SHLD TOP B	KSM	RX-SLM800
X	OTHERS		8A-CU2-217-010		PLATE, SHLD TOP B	EZSM	RX-SLM801
X	OTHERS		8A-CU2-218-010		PLATE, SHLD PT	KSM	RX-SLM800
X	OTHERS		8A-CU2-218-010		PLATE, SHLD PT	EZSM	RX-SLM801
O	OTHERS	*	8A-CJ6-202-010		GUIDE, LCD	KSM	RX-SLM800
O	OTHERS	*	8A-CJ6-202-010		GUIDE, LCD	EZSM	RX-SLM801
X	OTHERS	*	8A-CJ6-214-010		SH, LCD	KSM	RX-SLM800
X	OTHERS	*	8A-CJ6-214-010		SH, LCD	KSM	RX-SLM800
X	OTHERS	*	8A-CJ6-214-010		SH, LCD	EZSM	RX-SLM801
X	OTHERS	*	8A-CJ6-214-010		SH, LCD	EZSM	RX-SLM801
X	OTHERS	*	8A-CJ6-214-010	1A	SH, LCD	KSM	RX-SLM800
X	OTHERS	*	8A-CJ6-214-010	1A	SH, LCD	KSM	RX-SLM800
X	OTHERS	*	8A-CJ6-214-010	1A	SH, LCD	EZSM	RX-SLM801
X	OTHERS	*	8A-CJ6-214-010	1A	SH, LCD	EZSM	RX-SLM801
O	OTHERS	*	8A-CU2-206-010		GUIDE, LED B	KSM	RX-SLM800
O	OTHERS	*	8A-CU2-206-010		GUIDE, LED B	KSM	RX-SLM800
O	OTHERS	*	8A-CU2-206-010		GUIDE, LED B	EZSM	RX-SLM801
O	OTHERS	*	8A-CU2-206-010		GUIDE, LED B	EZSM	RX-SLM801
O	OTHERS	*	8A-CU2-206-010	--	GUIDE, LED B	KSM	RX-SLM800
O	OTHERS	*	8A-CU2-206-010	--	GUIDE, LED B	KSM	RX-SLM800
O	OTHERS	*	8A-CU2-206-010	--	GUIDE, LED B	EZSM	RX-SLM801
O	OTHERS	*	8A-CU2-206-010	--	GUIDE, LED B	EZSM	RX-SLM801
X	PACKING		87-B40-092-010	0E	BAG, PV 0.025-440-500 PL	KSM	RX-SLM800
X	PACKING		87-B40-092-010	0E	BAG, PV 0.025-440-500 PL	EZSM	RX-SLM801
G	X PACKING		87-B40-092-010		BAG, PV 0.025-440-500 PL	KSM	RX-SLM800
G	X PACKING		87-B40-092-010		BAG, PV 0.025-440-500 PL	EZSM	RX-SLM801
X	PACKING		8A-CU2-855-010	--	CUSHION, LEFT ACU2M	KSM	RX-SLM800
X	PACKING		8A-CU2-855-010	--	CUSHION, LEFT ACU2M	EZSM	RX-SLM801
G	X PACKING		8A-CU2-855-010		CUSHION, LEFT ACU2M	KSM	RX-SLM800
G	X PACKING		8A-CU2-855-010		CUSHION, LEFT ACU2M	EZSM	RX-SLM801
X	PACKING		8A-CU2-856-010	--	CUSHION, RIGHT ACU2M	KSM	RX-SLM800
X	PACKING		8A-CU2-856-010	--	CUSHION, RIGHT ACU2M	EZSM	RX-SLM801
G	X PACKING		8A-CU2-856-010		CUSHION, RIGHT ACU2M	KSM	RX-SLM800
G	X PACKING		8A-CU2-856-010		CUSHION, RIGHT ACU2M	EZSM	RX-SLM801
X	PACKING		8A-CU2-857-010	--	BOX, ACCESS ACU2M	KSM	RX-SLM800
X	PACKING		8A-CU2-857-010	--	BOX, ACCESS ACU2M	EZSM	RX-SLM801
G	X PACKING		8A-CU2-857-010		BOX, ACCESS ACU2M	KSM	RX-SLM800
G	X PACKING		8A-CU2-857-010		BOX, ACCESS ACU2M	EZSM	RX-SLM801
X	PACKING		8A-CUC-851-010	1A	SLEEVE, RX-SLM800 KSM	KSM	RX-SLM800
G	X PACKING		8A-CUC-851-010		SLEEVE, RX-SLM800 KSM	KSM	RX-SLM800
X	PACKING		8A-CUC-852-010	1A	SLEEVE, RX-SLM801 EZSM	EZSM	RX-SLM801
G	X PACKING		8A-CUC-852-010		SLEEVE, RX-SLM801 EZSM	EZSM	RX-SLM801
X	PACKING		93-704-325-010	0E	SH, FOAMED-MAT 0.31-300-300	KSM	RX-SLM800
X	PACKING		93-704-325-010	0E	SH, FOAMED-MAT 0.31-300-300	EZSM	RX-SLM801
G	X PACKING		93-704-325-010		SH, FOAMED-MAT 0.31-300-300	KSM	RX-SLM800
G	X PACKING		93-704-325-010		SH, FOAMED-MAT 0.31-300-300	EZSM	RX-SLM801
X	PLATE		87-B40-016-010	0E	BAG, PP (BAR-CODE)	KSM	RX-SLM800
X	PLATE		87-B40-016-010	0E	BAG, PP (BAR-CODE)	EZSM	RX-SLM801
G	X PLATE		87-B40-016-010		BAG, PP (BAR-CODE)	KSM	RX-SLM800
G	X PLATE		87-B40-016-010		BAG, PP (BAR-CODE)	EZSM	RX-SLM801
X	PLATE		87-B40-283-010	0E	LBL, BAR-CODE B 35X8	KSM	RX-SLM800
X	PLATE		87-B40-283-010	0E	LBL, BAR-CODE B 35X8	EZSM	RX-SLM801
G	X PLATE		87-B40-283-010		LBL, BAR-CODE B 35X8	KSM	RX-SLM800
G	X PLATE		87-B40-283-010		LBL, BAR-CODE B 35X8	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	PLATE		8A-CUC-003-010		LBL, SPEC KSM(800)	KSM	RX-SLM800
X	PLATE		8A-CUC-003-010	--	LBL, SPEC KSM(800)	KSM	RX-SLM800
X	PLATE		8A-CUC-004-010		LBL, SPEC EZSM(801)	EZSM	RX-SLM801
X	PLATE		8A-CUC-004-010	--	LBL, SPEC EZSM(801)	EZSM	RX-SLM801
O	POWER		87-067-579-010		BVT2+3-8 W/O SL0T	KSM	RX-SLM800
O	POWER		87-067-579-010		BVT2+3-8 W/O SL0T	EZSM	RX-SLM801
O	POWER		87-067-579-010	OE	BVT2+3-8 W/O SL0T	KSM	RX-SLM800
O	POWER		87-067-579-010	OE	BVT2+3-8 W/O SL0T	EZSM	RX-SLM801
X	POWER	*	8A-CU2-208-010		HT-SINK, B	KSM	RX-SLM800
X	POWER	*	8A-CU2-208-010		HT-SINK, B	EZSM	RX-SLM801
X	POWER		8A-CU2-208-010	--	HT-SINK, B	KSM	RX-SLM800
X	POWER		8A-CU2-208-010	--	HT-SINK, B	EZSM	RX-SLM801
O	POWER	C 0102	87-016-051-090		CAP, E 2200-35 M SMG	KSM	RX-SLM800
O	POWER	C 0102	87-016-051-090		CAP, E 2200-35 M SMG	EZSM	RX-SLM801
O	POWER	C 0102	87-016-051-090	1B	CAP, E 2200-35 M SMG	KSM	RX-SLM800
O	POWER	C 0102	87-016-051-090	1B	CAP, E 2200-35 M SMG	EZSM	RX-SLM801
O	POWER	C 0103	87-016-051-090		CAP, E 2200-35 M SMG	KSM	RX-SLM800
O	POWER	C 0103	87-016-051-090		CAP, E 2200-35 M SMG	EZSM	RX-SLM801
O	POWER	C 0103	87-016-051-090	1B	CAP, E 2200-35 M SMG	KSM	RX-SLM800
O	POWER	C 0103	87-016-051-090	1B	CAP, E 2200-35 M SMG	EZSM	RX-SLM801
X	POWER	C 0104	88-700-850-080		CAP, M 0.047-50 J AMZ	KSM	RX-SLM800
X	POWER	C 0104	88-700-850-080		CAP, M 0.047-50 J AMZ	EZSM	RX-SLM801
X	POWER	C 0104	88-700-850-080	OE	CAP, M 0.047-50 J AMZ	KSM	RX-SLM800
X	POWER	C 0104	88-700-850-080	OE	CAP, M 0.047-50 J AMZ	EZSM	RX-SLM801
X	POWER	C 0105	88-700-850-080		CAP, M 0.047-50 J AMZ	KSM	RX-SLM800
X	POWER	C 0105	88-700-850-080		CAP, M 0.047-50 J AMZ	EZSM	RX-SLM801
X	POWER	C 0105	88-700-850-080	OE	CAP, M 0.047-50 J AMZ	KSM	RX-SLM800
X	POWER	C 0105	88-700-850-080	OE	CAP, M 0.047-50 J AMZ	EZSM	RX-SLM801
O	POWER	C 0106	87-010-196-080		C-CAP, S 0.1-25 Z F C2012	KSM	RX-SLM800
O	POWER	C 0106	87-010-196-080		C-CAP, S 0.1-25 Z F C2012	EZSM	RX-SLM801
O	POWER	C 0106	87-010-196-080	OE	C-CAP, S 0.1-25 Z F C2012	KSM	RX-SLM800
O	POWER	C 0106	87-010-196-080	OE	C-CAP, S 0.1-25 Z F C2012	EZSM	RX-SLM801
O	POWER	C 0107	87-010-196-080		C-CAP, S 0.1-25 Z F C2012	KSM	RX-SLM800
O	POWER	C 0107	87-010-196-080		C-CAP, S 0.1-25 Z F C2012	EZSM	RX-SLM801
O	POWER	C 0107	87-010-196-080	OE	C-CAP, S 0.1-25 Z F C2012	KSM	RX-SLM800
O	POWER	C 0107	87-010-196-080	OE	C-CAP, S 0.1-25 Z F C2012	EZSM	RX-SLM801
O	POWER	C 0108	87-010-196-080		C-CAP, S 0.1-25 Z F C2012	KSM	RX-SLM800
O	POWER	C 0108	87-010-196-080		C-CAP, S 0.1-25 Z F C2012	EZSM	RX-SLM801
O	POWER	C 0108	87-010-196-080	OE	C-CAP, S 0.1-25 Z F C2012	KSM	RX-SLM800
O	POWER	C 0108	87-010-196-080	OE	C-CAP, S 0.1-25 Z F C2012	EZSM	RX-SLM801
O	POWER	C 0109	87-010-196-080		C-CAP, S 0.1-25 Z F C2012	KSM	RX-SLM800
O	POWER	C 0109	87-010-196-080		C-CAP, S 0.1-25 Z F C2012	EZSM	RX-SLM801
O	POWER	C 0109	87-010-196-080	OE	C-CAP, S 0.1-25 Z F C2012	KSM	RX-SLM800
O	POWER	C 0109	87-010-196-080	OE	C-CAP, S 0.1-25 Z F C2012	EZSM	RX-SLM801
O	POWER	C 0110	87-010-928-090		CAP, E 4700-25 M SMG	KSM	RX-SLM800
O	POWER	C 0110	87-010-928-090		CAP, E 4700-25 M SMG	EZSM	RX-SLM801
!	O POWER	C 0110	87-010-928-090	1B	CAP, E 4700-25 M SMG	KSM	RX-SLM800
!	O POWER	C 0110	87-010-928-090	1B	CAP, E 4700-25 M SMG	EZSM	RX-SLM801
O	POWER	C 0111	87-012-140-080		C-CAP, S 470P-50 J CH	KSM	RX-SLM800
O	POWER	C 0111	87-012-140-080		C-CAP, S 470P-50 J CH	EZSM	RX-SLM801
O	POWER	C 0111	87-012-140-080	OE	C-CAP, S 470P-50 J CH	KSM	RX-SLM800
O	POWER	C 0111	87-012-140-080	OE	C-CAP, S 470P-50 J CH	EZSM	RX-SLM801
O	POWER	C 0113	87-010-247-080		CAP, E 100-50 M SME	KSM	RX-SLM800
O	POWER	C 0113	87-010-247-080		CAP, E 100-50 M SME	EZSM	RX-SLM801
O	POWER	C 0113	87-010-247-080	OE	CAP, E 100-50 M SME	KSM	RX-SLM800
O	POWER	C 0113	87-010-247-080	OE	CAP, E 100-50 M SME	EZSM	RX-SLM801
O	POWER	C 0114	87-010-112-080		CAP, E 100-16 M 11L SME	KSM	RX-SLM800
O	POWER	C 0114	87-010-112-080		CAP, E 100-16 M 11L SME	EZSM	RX-SLM801
O	POWER	C 0114	87-010-112-080	OE	CAP, E 100-16 M 11L SME	KSM	RX-SLM800
O	POWER	C 0114	87-010-112-080	OE	CAP, E 100-16 M 11L SME	EZSM	RX-SLM801
O	POWER	C 0115	87-010-235-080		CAP, E 470-16 M SME	KSM	RX-SLM800
O	POWER	C 0115	87-010-235-080		CAP, E 470-16 M SME	EZSM	RX-SLM801
O	POWER	C 0115	87-010-235-080	OE	CAP, E 470-16 M SME	KSM	RX-SLM800
O	POWER	C 0115	87-010-235-080	OE	CAP, E 470-16 M SME	EZSM	RX-SLM801
O	POWER	C 0132	87-010-260-080		CAP, E 47-25 M 11L SME	KSM	RX-SLM800
O	POWER	C 0132	87-010-260-080		CAP, E 47-25 M 11L SME	EZSM	RX-SLM801
O	POWER	C 0132	87-010-260-080	OE	CAP, E 47-25 M 11L SME	KSM	RX-SLM800
O	POWER	C 0132	87-010-260-080	OE	CAP, E 47-25 M 11L SME	EZSM	RX-SLM801
O	POWER	C 0133	87-010-403-080		CAP, E 3.3-50 M 11L SME	KSM	RX-SLM800
O	POWER	C 0133	87-010-403-080		CAP, E 3.3-50 M 11L SME	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O POWER		C 0133	87-010-403-080	OE	CAP,E 3.3-50 M 11L SME	KSM	RX-SLM800
O POWER		C 0133	87-010-403-080	OE	CAP,E 3.3-50 M 11L SME	EZSM	RX-SLM801
O POWER		C 0135	87-010-381-080		CAP,E 330-16 M SME	KSM	RX-SLM800
O POWER		C 0135	87-010-381-080		CAP,E 330-16 M SME	EZSM	RX-SLM801
O POWER		C 0135	87-010-381-080	OE	CAP,E 330-16 M SME	KSM	RX-SLM800
O POWER		C 0135	87-010-381-080	OE	CAP,E 330-16 M SME	EZSM	RX-SLM801
O POWER		C 0136	87-010-101-080		CAP,E 220-16 M SME	KSM	RX-SLM800
O POWER		C 0136	87-010-101-080		CAP,E 220-16 M SME	EZSM	RX-SLM801
O POWER		C 0136	87-010-101-080	OE	CAP,E 220-16 M SME	KSM	RX-SLM800
O POWER		C 0136	87-010-101-080	OE	CAP,E 220-16 M SME	EZSM	RX-SLM801
O POWER		C 0137	87-010-235-080		CAP,E 470-16 M SME	KSM	RX-SLM800
O POWER		C 0137	87-010-235-080		CAP,E 470-16 M SME	EZSM	RX-SLM801
O POWER		C 0137	87-010-235-080	OE	CAP,E 470-16 M SME	KSM	RX-SLM800
O POWER		C 0137	87-010-235-080	OE	CAP,E 470-16 M SME	EZSM	RX-SLM801
O POWER		C 0219	87-010-184-080		C-CAP,S 3300P-50 K B C2012	KSM	RX-SLM800
O POWER		C 0219	87-010-184-080		C-CAP,S 3300P-50 K B C2012	EZSM	RX-SLM801
O POWER		C 0219	87-010-184-080	OE	C-CAP,S 3300P-50 K B C2012	KSM	RX-SLM800
O POWER		C 0219	87-010-184-080	OE	C-CAP,S 3300P-50 K B C2012	EZSM	RX-SLM801
O POWER		C 0220	87-010-184-080		C-CAP,S 3300P-50 K B C2012	KSM	RX-SLM800
O POWER		C 0220	87-010-184-080		C-CAP,S 3300P-50 K B C2012	EZSM	RX-SLM801
O POWER		C 0220	87-010-184-080	OE	C-CAP,S 3300P-50 K B C2012	KSM	RX-SLM800
O POWER		C 0220	87-010-184-080	OE	C-CAP,S 3300P-50 K B C2012	EZSM	RX-SLM801
O POWER		C 0281	87-010-401-080		CAP,E 1-50 M 11L SME	KSM	RX-SLM800
O POWER		C 0281	87-010-401-080		CAP,E 1-50 M 11L SME	EZSM	RX-SLM801
O POWER		C 0281	87-010-401-080	OE	CAP,E 1-50 M 11L SME	KSM	RX-SLM800
O POWER		C 0281	87-010-401-080	OE	CAP,E 1-50 M 11L SME	EZSM	RX-SLM801
O POWER		C 0282	87-010-263-080		CAP,E 100-10 M 11L SME	KSM	RX-SLM800
O POWER		C 0282	87-010-263-080		CAP,E 100-10 M 11L SME	EZSM	RX-SLM801
O POWER		C 0282	87-010-263-080	OE	CAP,E 100-10 M 11L SME	KSM	RX-SLM800
O POWER		C 0282	87-010-263-080	OE	CAP,E 100-10 M 11L SME	EZSM	RX-SLM801
O POWER		C 0283	87-010-380-080		CAP,E 47-16 M 11L SME	KSM	RX-SLM800
O POWER		C 0283	87-010-380-080		CAP,E 47-16 M 11L SME	EZSM	RX-SLM801
O POWER		C 0283	87-010-380-080	OE	CAP,E 47-16 M 11L SME	KSM	RX-SLM800
O POWER		C 0283	87-010-380-080	OE	CAP,E 47-16 M 11L SME	EZSM	RX-SLM801
O POWER		C 0284	87-010-260-080		CAP,E 47-25 M 11L SME	KSM	RX-SLM800
O POWER		C 0284	87-010-260-080		CAP,E 47-25 M 11L SME	EZSM	RX-SLM801
O POWER		C 0284	87-010-260-080	OE	CAP,E 47-25 M 11L SME	KSM	RX-SLM800
O POWER		C 0284	87-010-260-080	OE	CAP,E 47-25 M 11L SME	EZSM	RX-SLM801
O POWER		CN 0101	87-A60-813-010		CONN,8P H BLK TAC-L8P	KSM	RX-SLM800
O POWER		CN 0101	87-A60-813-010		CONN,8P H BLK TAC-L8P	EZSM	RX-SLM801
O POWER		CN 0101	87-A60-813-010	OE	CONN,8P H BLK TAC-L8P	KSM	RX-SLM800
O POWER		CN 0101	87-A60-813-010	OE	CONN,8P H BLK TAC-L8P	EZSM	RX-SLM801
O POWER		CN 0102	87-A60-813-010		CONN,8P H BLK TAC-L8P	KSM	RX-SLM800
O POWER		CN 0102	87-A60-813-010		CONN,8P H BLK TAC-L8P	EZSM	RX-SLM801
O POWER		CN 0102	87-A60-813-010	OE	CONN,8P H BLK TAC-L8P	KSM	RX-SLM800
O POWER		CN 0102	87-A60-813-010	OE	CONN,8P H BLK TAC-L8P	EZSM	RX-SLM801
O POWER		CN 0203	87-A60-109-010		CONN,2P V S2M-2W	KSM	RX-SLM800
O POWER		CN 0203	87-A60-109-010		CONN,2P V S2M-2W	EZSM	RX-SLM801
! O POWER		CN 0203	87-A60-109-010	OE	CONN,2P V S2M-2W	KSM	RX-SLM800
! O POWER		CN 0203	87-A60-109-010	OE	CONN,2P V S2M-2W	EZSM	RX-SLM801
O POWER		CNA0101	8A-CU2-660-010		CONN ASSY,11P 2MM	KSM	RX-SLM800
O POWER		CNA0101	8A-CU2-660-010		CONN ASSY,11P 2MM	EZSM	RX-SLM801
O POWER		CNA0101	8A-CU2-660-010	1B	CONN ASSY,11P 2MM	KSM	RX-SLM800
O POWER		CNA0101	8A-CU2-660-010	1B	CONN ASSY,11P 2MM	EZSM	RX-SLM801
O POWER		CNA0303	8A-CU2-661-010		CONN ASSY,7P 2MM	KSM	RX-SLM800
O POWER		CNA0303	8A-CU2-661-010		CONN ASSY,7P 2MM	EZSM	RX-SLM801
O POWER		CNA0303	8A-CU2-661-010	--	CONN ASSY,7P 2MM	KSM	RX-SLM800
O POWER		CNA0303	8A-CU2-661-010	--	CONN ASSY,7P 2MM	EZSM	RX-SLM801
S POWER		D 0108	87-070-178-090		DIODE,1N5402-BD54	KSM	RX-SLM800
S POWER		D 0108	87-070-178-090		DIODE,1N5402-BD54	EZSM	RX-SLM801
S POWER		D 0108	87-070-178-090	OE	DIODE,1N5402-BD54	KSM	RX-SLM800
S POWER		D 0108	87-070-178-090	OE	DIODE,1N5402-BD54	EZSM	RX-SLM801
S POWER		D 0109	87-070-178-090		DIODE,1N5402-BD54	KSM	RX-SLM800
S POWER		D 0109	87-070-178-090		DIODE,1N5402-BD54	EZSM	RX-SLM801
S POWER		D 0109	87-070-178-090	OE	DIODE,1N5402-BD54	KSM	RX-SLM800
S POWER		D 0109	87-070-178-090	OE	DIODE,1N5402-BD54	EZSM	RX-SLM801
S POWER		D 0110	87-070-178-090		DIODE,1N5402-BD54	KSM	RX-SLM800
S POWER		D 0110	87-070-178-090		DIODE,1N5402-BD54	EZSM	RX-SLM801
S POWER		D 0110	87-070-178-090	OE	DIODE,1N5402-BD54	KSM	RX-SLM800
S POWER		D 0110	87-070-178-090	OE	DIODE,1N5402-BD54	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
S	POWER	D 0111	87-070-178-090		DIODE,1N5402-BD54	KSM	RX-SLM800
S	POWER	D 0111	87-070-178-090		DIODE,1N5402-BD54	EZSM	RX-SLM801
S	POWER	D 0111	87-070-178-090	0E	DIODE,1N5402-BD54	KSM	RX-SLM800
S	POWER	D 0111	87-070-178-090	0E	DIODE,1N5402-BD54	EZSM	RX-SLM801
S	POWER	D 0112	87-070-274-080		DIODE,1N4003 SEM	KSM	RX-SLM800
S	POWER	D 0112	87-070-274-080		DIODE,1N4003 SEM	EZSM	RX-SLM801
S	POWER	D 0112	87-070-274-080	0E	DIODE,1N4003 SEM	KSM	RX-SLM800
S	POWER	D 0112	87-070-274-080	0E	DIODE,1N4003 SEM	EZSM	RX-SLM801
S	POWER	D 0113	87-070-274-080		DIODE,1N4003 SEM	KSM	RX-SLM800
S	POWER	D 0113	87-070-274-080		DIODE,1N4003 SEM	EZSM	RX-SLM801
S	POWER	D 0113	87-070-274-080	0E	DIODE,1N4003 SEM	KSM	RX-SLM800
S	POWER	D 0113	87-070-274-080	0E	DIODE,1N4003 SEM	EZSM	RX-SLM801
S	POWER	D 0114	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER	D 0114	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER	D 0114	87-070-345-080	0E	DIODE,1N4148	KSM	RX-SLM800
S	POWER	D 0114	87-070-345-080	0E	DIODE,1N4148	EZSM	RX-SLM801
S	POWER	D 0115	87-A40-345-080		ZENER,MTZJ10C	KSM	RX-SLM800
S	POWER	D 0115	87-A40-345-080		ZENER,MTZJ10C	EZSM	RX-SLM801
S	POWER	D 0115	87-A40-345-080	0E	ZENER,MTZJ10C	KSM	RX-SLM800
S	POWER	D 0115	87-A40-345-080	0E	ZENER,MTZJ10C	EZSM	RX-SLM801
S	POWER	D 0131	87-A40-269-080		C-DIODE,MC2836	KSM	RX-SLM800
S	POWER	D 0131	87-A40-269-080		C-DIODE,MC2836	EZSM	RX-SLM801
S	POWER	D 0131	87-A40-269-080	0E	C-DIODE,MC2836	KSM	RX-SLM800
S	POWER	D 0131	87-A40-269-080	0E	C-DIODE,MC2836	EZSM	RX-SLM801
S	POWER	D 0132	87-A40-270-080		C-DIODE,MC2838	KSM	RX-SLM800
S	POWER	D 0132	87-A40-270-080		C-DIODE,MC2838	EZSM	RX-SLM801
S	POWER	D 0132	87-A40-270-080	0E	C-DIODE,MC2838	KSM	RX-SLM800
S	POWER	D 0132	87-A40-270-080	0E	C-DIODE,MC2838	EZSM	RX-SLM801
S	POWER	D 0133	87-A40-004-080		ZENER,MTZJ16A	KSM	RX-SLM800
S	POWER	D 0133	87-A40-004-080		ZENER,MTZJ16A	EZSM	RX-SLM801
S	POWER	D 0133	87-A40-004-080	0E	ZENER,MTZJ16A	KSM	RX-SLM800
S	POWER	D 0133	87-A40-004-080	0E	ZENER,MTZJ16A	EZSM	RX-SLM801
S	POWER	D 0134	87-070-274-080		DIODE,1N4003 SEM	KSM	RX-SLM800
S	POWER	D 0134	87-070-274-080		DIODE,1N4003 SEM	EZSM	RX-SLM801
S	POWER	D 0134	87-070-274-080	0E	DIODE,1N4003 SEM	KSM	RX-SLM800
S	POWER	D 0134	87-070-274-080	0E	DIODE,1N4003 SEM	EZSM	RX-SLM801
S	POWER	D 0136	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER	D 0136	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER	D 0136	87-070-345-080	0E	DIODE,1N4148	KSM	RX-SLM800
S	POWER	D 0136	87-070-345-080	0E	DIODE,1N4148	EZSM	RX-SLM801
S	POWER	D 0151	87-070-274-080		DIODE,1N4003 SEM	KSM	RX-SLM800
S	POWER	D 0151	87-070-274-080		DIODE,1N4003 SEM	EZSM	RX-SLM801
S	POWER	D 0152	87-070-274-080		DIODE,1N4003 SEM	KSM	RX-SLM800
S	POWER	D 0152	87-070-274-080		DIODE,1N4003 SEM	EZSM	RX-SLM801
S	POWER	D 0153	87-070-274-080		DIODE,1N4003 SEM	KSM	RX-SLM800
S	POWER	D 0153	87-070-274-080		DIODE,1N4003 SEM	EZSM	RX-SLM801
S	POWER	D 0154	87-070-274-080		DIODE,1N4003 SEM	KSM	RX-SLM800
S	POWER	D 0154	87-070-274-080		DIODE,1N4003 SEM	EZSM	RX-SLM801
S	POWER	D 0281	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER	D 0281	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER	D 0281	87-070-345-080	0E	DIODE,1N4148	KSM	RX-SLM800
S	POWER	D 0281	87-070-345-080	0E	DIODE,1N4148	EZSM	RX-SLM801
S	POWER	D 0282	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER	D 0282	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER	D 0282	87-070-345-080	0E	DIODE,1N4148	KSM	RX-SLM800
S	POWER	D 0282	87-070-345-080	0E	DIODE,1N4148	EZSM	RX-SLM801
S	POWER	D 0286	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER	D 0286	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER	D 0286	87-070-345-080	0E	DIODE,1N4148	KSM	RX-SLM800
S	POWER	D 0286	87-070-345-080	0E	DIODE,1N4148	EZSM	RX-SLM801
O	POWER	J 0201	87-A60-420-010		JACK,3.5 ST (MSC)	KSM	RX-SLM800
O	POWER	J 0201	87-A60-420-010		JACK,3.5 ST (MSC)	EZSM	RX-SLM801
O	POWER	J 0201	87-A60-420-010	1A	JACK,3.5 ST (MSC)	KSM	RX-SLM800
O	POWER	J 0201	87-A60-420-010	1A	JACK,3.5 ST (MSC)	EZSM	RX-SLM801
O	POWER	J 0202	87-099-801-010		JACK,PIN 1P BLK W/O SW	KSM	RX-SLM800
O	POWER	J 0202	87-099-801-010		JACK,PIN 1P BLK W/O SW	EZSM	RX-SLM801
!	O POWER	J 0202	87-099-801-010	0E	JACK,PIN 1P BLK W/O SW	KSM	RX-SLM800
!	O POWER	J 0202	87-099-801-010	0E	JACK,PIN 1P BLK W/O SW	EZSM	RX-SLM801
!	O POWER	J 0501	87-009-065-010	1B	CONN,15P H FG	KSM	RX-SLM800
!	O POWER	J 0501	87-009-065-010	1B	CONN,15P H FG	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER	J 0501	87-009-065-010		CONN,15P H FG	KSM	RX-SLM800
X	POWER	J 0501	87-009-065-010		CONN,15P H FG	EZSM	RX-SLM801
X	POWER	JR 0101	88-118-000-080		C-JUMPER,S	KSM	RX-SLM800
X	POWER	JR 0101	88-118-000-080		C-JUMPER,S	EZSM	RX-SLM801
X	POWER	JR 0101	88-118-000-080	OE	C-JUMPER,S	KSM	RX-SLM800
X	POWER	JR 0101	88-118-000-080	OE	C-JUMPER,S	EZSM	RX-SLM801
X	POWER	JR 0202	88-129-000-080		C-JUMPER,3216	KSM	RX-SLM800
X	POWER	JR 0202	88-129-000-080		C-JUMPER,3216	EZSM	RX-SLM801
X	POWER	JR 0202	88-129-000-080	OE	C-JUMPER,3216	KSM	RX-SLM800
X	POWER	JR 0202	88-129-000-080	OE	C-JUMPER,3216	EZSM	RX-SLM801
X	POWER	JR 0203	88-129-000-080		C-JUMPER,3216	KSM	RX-SLM800
X	POWER	JR 0203	88-129-000-080		C-JUMPER,3216	EZSM	RX-SLM801
X	POWER	JR 0203	88-129-000-080	OE	C-JUMPER,3216	KSM	RX-SLM800
X	POWER	JR 0203	88-129-000-080	OE	C-JUMPER,3216	EZSM	RX-SLM801
X	POWER	JR 0204	88-129-000-080		C-JUMPER,3216	KSM	RX-SLM800
X	POWER	JR 0204	88-129-000-080		C-JUMPER,3216	EZSM	RX-SLM801
X	POWER	JR 0204	88-129-000-080	OE	C-JUMPER,3216	KSM	RX-SLM800
X	POWER	JR 0204	88-129-000-080	OE	C-JUMPER,3216	EZSM	RX-SLM801
X	POWER	JR 0205	88-129-000-080		C-JUMPER,3216	KSM	RX-SLM800
X	POWER	JR 0205	88-129-000-080		C-JUMPER,3216	EZSM	RX-SLM801
X	POWER	JR 0205	88-129-000-080	OE	C-JUMPER,3216	KSM	RX-SLM800
X	POWER	JR 0205	88-129-000-080	OE	C-JUMPER,3216	EZSM	RX-SLM801
X	POWER	JR 0206	88-118-000-080		C-JUMPER,S	KSM	RX-SLM800
X	POWER	JR 0206	88-118-000-080		C-JUMPER,S	EZSM	RX-SLM801
X	POWER	JR 0206	88-118-000-080	OE	C-JUMPER,S	KSM	RX-SLM800
X	POWER	JR 0206	88-118-000-080	OE	C-JUMPER,S	EZSM	RX-SLM801
X	POWER	JR 0209	88-118-000-080		C-JUMPER,S	KSM	RX-SLM800
X	POWER	JR 0209	88-118-000-080		C-JUMPER,S	EZSM	RX-SLM801
X	POWER	JR 0209	88-118-000-080	OE	C-JUMPER,S	KSM	RX-SLM800
X	POWER	JR 0209	88-118-000-080	OE	C-JUMPER,S	EZSM	RX-SLM801
X	POWER	JR 0213	88-118-000-080		C-JUMPER,S	KSM	RX-SLM800
X	POWER	JR 0213	88-118-000-080		C-JUMPER,S	EZSM	RX-SLM801
O	POWER	L 0203	87-003-098-080		COIL,2.2UH K LAL02	KSM	RX-SLM800
O	POWER	L 0203	87-003-098-080		COIL,2.2UH K LAL02	EZSM	RX-SLM801
X	POWER	L 0203	88-100-000-010	OE	PLATING-JW, 0.58 SN95	KSM	RX-SLM800
X	POWER	L 0203	88-100-000-010	OE	PLATING-JW, 0.58 SN95	EZSM	RX-SLM801
O	POWER	L 0205	87-003-098-080		COIL,2.2UH K LAL02	KSM	RX-SLM800
O	POWER	L 0205	87-003-098-080		COIL,2.2UH K LAL02	EZSM	RX-SLM801
X	POWER	L 0205	88-100-000-010	OE	PLATING-JW, 0.58 SN95	KSM	RX-SLM800
X	POWER	L 0205	88-100-000-010	OE	PLATING-JW, 0.58 SN95	EZSM	RX-SLM801
O	POWER	L 0206	87-003-098-080		COIL,2.2UH K LAL02	KSM	RX-SLM800
O	POWER	L 0206	87-003-098-080		COIL,2.2UH K LAL02	EZSM	RX-SLM801
X	POWER	L 0206	88-100-000-010	OE	PLATING-JW, 0.58 SN95	KSM	RX-SLM800
X	POWER	L 0206	88-100-000-010	OE	PLATING-JW, 0.58 SN95	EZSM	RX-SLM801
X	POWER	PIN0003	87-A60-884-010		PIN,DIAL COATING-SHS	KSM	RX-SLM800
X	POWER	PIN0003	87-A60-884-010		PIN,DIAL COATING-SHS	EZSM	RX-SLM801
X	POWER	PIN0003	87-A60-884-010	OE	PIN,DIAL COATING-SHS	KSM	RX-SLM800
X	POWER	PIN0003	87-A60-884-010	OE	PIN,DIAL COATING-SHS	EZSM	RX-SLM801
S	POWER	Q 0101	89-213-702-010		TR,2SB1370E	KSM	RX-SLM800
S	POWER	Q 0101	89-213-702-010		TR,2SB1370E	EZSM	RX-SLM801
S	POWER	Q 0101	89-213-702-010	1A	TR,2SB1370E	KSM	RX-SLM800
S	POWER	Q 0101	89-213-702-010	1A	TR,2SB1370E	EZSM	RX-SLM801
S	POWER	Q 0102	89-213-702-010		TR,2SB1370E	KSM	RX-SLM800
S	POWER	Q 0102	89-213-702-010		TR,2SB1370E	EZSM	RX-SLM801
S	POWER	Q 0102	89-213-702-010	1A	TR,2SB1370E	KSM	RX-SLM800
S	POWER	Q 0102	89-213-702-010	1A	TR,2SB1370E	EZSM	RX-SLM801
S	POWER	Q 0103	87-026-610-080		TR,KTC3198GR	KSM	RX-SLM800
S	POWER	Q 0103	87-026-610-080		TR,KTC3198GR	EZSM	RX-SLM801
S	POWER	Q 0103	87-026-610-080	OE	TR,KTC3198GR	KSM	RX-SLM800
S	POWER	Q 0103	87-026-610-080	OE	TR,KTC3198GR	EZSM	RX-SLM801
S	POWER	Q 0104	87-A30-076-080		C-TR,2SC3052F	KSM	RX-SLM800
S	POWER	Q 0104	87-A30-076-080		C-TR,2SC3052F	EZSM	RX-SLM801
S	POWER	Q 0104	87-A30-076-080	OE	C-TR,2SC3052F	KSM	RX-SLM800
S	POWER	Q 0104	87-A30-076-080	OE	C-TR,2SC3052F	EZSM	RX-SLM801
S	POWER	Q 0106	87-A30-075-080		C-TR,2SA1235F	KSM	RX-SLM800
S	POWER	Q 0106	87-A30-075-080		C-TR,2SA1235F	EZSM	RX-SLM801
S	POWER	Q 0106	87-A30-075-080	OE	C-TR,2SA1235F	KSM	RX-SLM800
S	POWER	Q 0106	87-A30-075-080	OE	C-TR,2SA1235F	EZSM	RX-SLM801
S	POWER	Q 0107	87-A30-234-080		TR,CSC4115BC	KSM	RX-SLM800
S	POWER	Q 0107	87-A30-234-080		TR,CSC4115BC	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
S	POWER	Q 0107	87-A30-234-080	OE	TR, CSC4115BC	KSM	RX-SLM800
S	POWER	Q 0107	87-A30-234-080	OE	TR, CSC4115BC	EZSM	RX-SLM801
S	POWER	Q 0131	87-A30-076-080		C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER	Q 0131	87-A30-076-080		C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER	Q 0131	87-A30-076-080	OE	C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER	Q 0131	87-A30-076-080	OE	C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER	Q 0132	87-A30-075-080		C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER	Q 0132	87-A30-075-080		C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER	Q 0132	87-A30-075-080	OE	C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER	Q 0132	87-A30-075-080	OE	C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER	Q 0133	87-A30-076-080		C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER	Q 0133	87-A30-076-080		C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER	Q 0133	87-A30-076-080	OE	C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER	Q 0133	87-A30-076-080	OE	C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER	Q 0134	87-A30-075-080		C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER	Q 0134	87-A30-075-080		C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER	Q 0134	87-A30-075-080	OE	C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER	Q 0134	87-A30-075-080	OE	C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER	Q 0135	87-A30-076-080		C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER	Q 0135	87-A30-076-080		C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER	Q 0135	87-A30-076-080	OE	C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER	Q 0135	87-A30-076-080	OE	C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER	Q 0136	87-A30-083-080		TR, CSD1489B	KSM	RX-SLM800
S	POWER	Q 0136	87-A30-083-080		TR, CSD1489B	EZSM	RX-SLM801
S	POWER	Q 0136	87-A30-083-080	OE	TR, CSD1489B	KSM	RX-SLM800
S	POWER	Q 0136	87-A30-083-080	OE	TR, CSD1489B	EZSM	RX-SLM801
S	POWER	Q 0281	87-A30-076-080		C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER	Q 0281	87-A30-076-080		C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER	Q 0281	87-A30-076-080	OE	C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER	Q 0281	87-A30-076-080	OE	C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER	Q 0282	87-026-609-080		TR, KTA1266GR	KSM	RX-SLM800
S	POWER	Q 0282	87-026-609-080		TR, KTA1266GR	EZSM	RX-SLM801
S	POWER	Q 0282	87-026-609-080	OE	TR, KTA1266GR	KSM	RX-SLM800
S	POWER	Q 0282	87-026-609-080	OE	TR, KTA1266GR	EZSM	RX-SLM801
S	POWER	Q 0286	87-026-609-080		TR, KTA1266GR	KSM	RX-SLM800
S	POWER	Q 0286	87-026-609-080		TR, KTA1266GR	EZSM	RX-SLM801
S	POWER	Q 0286	87-026-609-080	OE	TR, KTA1266GR	KSM	RX-SLM800
S	POWER	Q 0286	87-026-609-080	OE	TR, KTA1266GR	EZSM	RX-SLM801
X	POWER	R 0103	88-118-471-080		C-RES, S 470-1/10W J	KSM	RX-SLM800
X	POWER	R 0103	88-118-471-080		C-RES, S 470-1/10W J	EZSM	RX-SLM801
X	POWER	R 0103	88-118-471-080	OE	C-RES, S 470-1/10W J	KSM	RX-SLM800
X	POWER	R 0103	88-118-471-080	OE	C-RES, S 470-1/10W J	EZSM	RX-SLM801
X	POWER	R 0104	88-118-471-080		C-RES, S 470-1/10W J	KSM	RX-SLM800
X	POWER	R 0104	88-118-471-080		C-RES, S 470-1/10W J	EZSM	RX-SLM801
X	POWER	R 0104	88-118-471-080	OE	C-RES, S 470-1/10W J	KSM	RX-SLM800
X	POWER	R 0104	88-118-471-080	OE	C-RES, S 470-1/10W J	EZSM	RX-SLM801
X	POWER	R 0106	88-118-680-080		C-RES, S 68-1/10W J	KSM	RX-SLM800
X	POWER	R 0106	88-118-680-080		C-RES, S 68-1/10W J	EZSM	RX-SLM801
X	POWER	R 0106	88-118-680-080	OE	C-RES, S 68-1/10W J	KSM	RX-SLM800
X	POWER	R 0106	88-118-680-080	OE	C-RES, S 68-1/10W J	EZSM	RX-SLM801
X	POWER	R 0107	88-118-473-080		C-RES, S 47K-1/10W J	KSM	RX-SLM800
X	POWER	R 0107	88-118-473-080		C-RES, S 47K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0107	88-118-473-080	OE	C-RES, S 47K-1/10W J	KSM	RX-SLM800
X	POWER	R 0107	88-118-473-080	OE	C-RES, S 47K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0108	88-118-221-080		C-RES, S 220-1/10W J	KSM	RX-SLM800
X	POWER	R 0108	88-118-221-080		C-RES, S 220-1/10W J	EZSM	RX-SLM801
X	POWER	R 0108	88-118-221-080	OE	C-RES, S 220-1/10W J	KSM	RX-SLM800
X	POWER	R 0108	88-118-221-080	OE	C-RES, S 220-1/10W J	EZSM	RX-SLM801
X	POWER	R 0109	88-118-472-080		C-RES, S 4.7K-1/10W J	KSM	RX-SLM800
X	POWER	R 0109	88-118-472-080		C-RES, S 4.7K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0109	88-118-472-080	OE	C-RES, S 4.7K-1/10W J	KSM	RX-SLM800
X	POWER	R 0109	88-118-472-080	OE	C-RES, S 4.7K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0110	88-118-103-080		C-RES, S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0110	88-118-103-080		C-RES, S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0110	88-118-103-080	OE	C-RES, S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0110	88-118-103-080	OE	C-RES, S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0112	88-118-471-080		C-RES, S 470-1/10W J	KSM	RX-SLM800
X	POWER	R 0112	88-118-471-080		C-RES, S 470-1/10W J	EZSM	RX-SLM801
X	POWER	R 0112	88-118-471-080	OE	C-RES, S 470-1/10W J	KSM	RX-SLM800
X	POWER	R 0112	88-118-471-080	OE	C-RES, S 470-1/10W J	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER	R 0114	88-118-222-080		C-RES,S 2.2K-1/10W J	KSM	RX-SLM800
X	POWER	R 0114	88-118-222-080		C-RES,S 2.2K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0114	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	KSM	RX-SLM800
X	POWER	R 0114	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0115	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0115	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0115	88-118-103-080	OE	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0115	88-118-103-080	OE	C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0117	88-118-471-080		C-RES,S 470-1/10W J	KSM	RX-SLM800
X	POWER	R 0117	88-118-471-080		C-RES,S 470-1/10W J	EZSM	RX-SLM801
X	POWER	R 0117	88-118-471-080	OE	C-RES,S 470-1/10W J	KSM	RX-SLM800
X	POWER	R 0117	88-118-471-080	OE	C-RES,S 470-1/10W J	EZSM	RX-SLM801
X	POWER	R 0118	88-118-101-080		C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER	R 0118	88-118-101-080		C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER	R 0118	88-118-101-080	OE	C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER	R 0118	88-118-101-080	OE	C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER	R 0119	88-118-000-080		C-JUMPER,S	KSM	RX-SLM800
X	POWER	R 0119	88-118-000-080		C-JUMPER,S	EZSM	RX-SLM801
X	POWER	R 0119	88-118-000-080	OE	C-JUMPER,S	KSM	RX-SLM800
X	POWER	R 0119	88-118-000-080	OE	C-JUMPER,S	EZSM	RX-SLM801
X	POWER	R 0120	88-118-101-080		C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER	R 0120	88-118-101-080		C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER	R 0120	88-118-101-080	OE	C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER	R 0120	88-118-101-080	OE	C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER	R 0121	88-118-471-080		C-RES,S 470-1/10W J	KSM	RX-SLM800
X	POWER	R 0121	88-118-471-080		C-RES,S 470-1/10W J	EZSM	RX-SLM801
X	POWER	R 0121	88-118-471-080	OE	C-RES,S 470-1/10W J	KSM	RX-SLM800
X	POWER	R 0121	88-118-471-080	OE	C-RES,S 470-1/10W J	EZSM	RX-SLM801
X	POWER	R 0131	88-118-273-080		C-RES,S 27K-1/10W J	KSM	RX-SLM800
X	POWER	R 0131	88-118-273-080		C-RES,S 27K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0131	88-118-273-080	OE	C-RES,S 27K-1/10W J	KSM	RX-SLM800
X	POWER	R 0131	88-118-273-080	OE	C-RES,S 27K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0132	88-118-273-080		C-RES,S 27K-1/10W J	KSM	RX-SLM800
X	POWER	R 0132	88-118-273-080		C-RES,S 27K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0132	88-118-273-080	OE	C-RES,S 27K-1/10W J	KSM	RX-SLM800
X	POWER	R 0132	88-118-273-080	OE	C-RES,S 27K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0133	88-118-104-080		C-RES,S 100K-1/10W J	KSM	RX-SLM800
X	POWER	R 0133	88-118-104-080		C-RES,S 100K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0133	88-118-104-080	OE	C-RES,S 100K-1/10W J	KSM	RX-SLM800
X	POWER	R 0133	88-118-104-080	OE	C-RES,S 100K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0134	88-118-104-080		C-RES,S 100K-1/10W J	KSM	RX-SLM800
X	POWER	R 0134	88-118-104-080		C-RES,S 100K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0134	88-118-104-080	OE	C-RES,S 100K-1/10W J	KSM	RX-SLM800
X	POWER	R 0134	88-118-104-080	OE	C-RES,S 100K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0135	88-118-153-080		C-RES,S 15K-1/10W J	KSM	RX-SLM800
X	POWER	R 0135	88-118-153-080		C-RES,S 15K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0135	88-118-153-080	OE	C-RES,S 15K-1/10W J	KSM	RX-SLM800
X	POWER	R 0135	88-118-153-080	OE	C-RES,S 15K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0136	88-118-153-080		C-RES,S 15K-1/10W J	KSM	RX-SLM800
X	POWER	R 0136	88-118-153-080		C-RES,S 15K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0136	88-118-153-080	OE	C-RES,S 15K-1/10W J	KSM	RX-SLM800
X	POWER	R 0136	88-118-153-080	OE	C-RES,S 15K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0137	88-118-102-080		C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	POWER	R 0137	88-118-102-080		C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0137	88-118-102-080	OE	C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	POWER	R 0137	88-118-102-080	OE	C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0138	88-118-123-080		C-RES,S 12K-1/10W J	KSM	RX-SLM800
X	POWER	R 0138	88-118-123-080		C-RES,S 12K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0138	88-118-123-080	OE	C-RES,S 12K-1/10W J	KSM	RX-SLM800
X	POWER	R 0138	88-118-123-080	OE	C-RES,S 12K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0148	88-121-102-080		RES,1K-1/8W J	KSM	RX-SLM800
X	POWER	R 0148	88-121-102-080		RES,1K-1/8W J	EZSM	RX-SLM801
X	POWER	R 0148	88-121-102-080	OE	RES,1K-1/8W J	KSM	RX-SLM800
X	POWER	R 0148	88-121-102-080	OE	RES,1K-1/8W J	EZSM	RX-SLM801
X	POWER	R 0149	88-118-333-080		C-RES,S 33K-1/10W J	KSM	RX-SLM800
X	POWER	R 0149	88-118-333-080		C-RES,S 33K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0149	88-118-333-080	OE	C-RES,S 33K-1/10W J	KSM	RX-SLM800
X	POWER	R 0149	88-118-333-080	OE	C-RES,S 33K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0150	88-118-333-080		C-RES,S 33K-1/10W J	KSM	RX-SLM800
X	POWER	R 0150	88-118-333-080		C-RES,S 33K-1/10W J	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER	R 0150	88-118-333-080	OE	C-RES,S 33K-1/10W J	KSM	RX-SLM800
X	POWER	R 0150	88-118-333-080	OE	C-RES,S 33K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0180	88-121-102-080		RES,1K-1/8W J	KSM	RX-SLM800
X	POWER	R 0180	88-121-102-080		RES,1K-1/8W J	EZSM	RX-SLM801
X	POWER	R 0180	88-121-102-080	OE	RES,1K-1/8W J	KSM	RX-SLM800
X	POWER	R 0180	88-121-102-080	OE	RES,1K-1/8W J	EZSM	RX-SLM801
X	POWER	R 0181	88-121-102-080		RES,1K-1/8W J	KSM	RX-SLM800
X	POWER	R 0181	88-121-102-080		RES,1K-1/8W J	EZSM	RX-SLM801
X	POWER	R 0181	88-121-102-080	OE	RES,1K-1/8W J	KSM	RX-SLM800
X	POWER	R 0181	88-121-102-080	OE	RES,1K-1/8W J	EZSM	RX-SLM801
X	POWER	R 0184	88-130-221-080		RES,220-1/4W J	KSM	RX-SLM800
X	POWER	R 0184	88-130-221-080		RES,220-1/4W J	EZSM	RX-SLM801
X	POWER	R 0184	88-130-221-080	OE	RES,220-1/4W J	KSM	RX-SLM800
X	POWER	R 0184	88-130-221-080	OE	RES,220-1/4W J	EZSM	RX-SLM801
X	POWER	R 0191	88-100-000-010		PLATING-JW, 0.58 SN95	KSM	RX-SLM800
X	POWER	R 0191	88-100-000-010		PLATING-JW, 0.58 SN95	EZSM	RX-SLM801
X	POWER	R 0191	88-100-000-010	OE	PLATING-JW, 0.58 SN95	KSM	RX-SLM800
X	POWER	R 0191	88-100-000-010	OE	PLATING-JW, 0.58 SN95	EZSM	RX-SLM801
X	POWER	R 0241	88-130-221-080		RES,220-1/4W J	KSM	RX-SLM800
X	POWER	R 0241	88-130-221-080		RES,220-1/4W J	EZSM	RX-SLM801
X	POWER	R 0241	88-130-221-080	OE	RES,220-1/4W J	KSM	RX-SLM800
X	POWER	R 0241	88-130-221-080	OE	RES,220-1/4W J	EZSM	RX-SLM801
X	POWER	R 0242	88-130-221-080		RES,220-1/4W J	KSM	RX-SLM800
X	POWER	R 0242	88-130-221-080		RES,220-1/4W J	EZSM	RX-SLM801
X	POWER	R 0242	88-130-221-080	OE	RES,220-1/4W J	KSM	RX-SLM800
X	POWER	R 0242	88-130-221-080	OE	RES,220-1/4W J	EZSM	RX-SLM801
X	POWER	R 0243	88-130-221-080		RES,220-1/4W J	KSM	RX-SLM800
X	POWER	R 0243	88-130-221-080		RES,220-1/4W J	EZSM	RX-SLM801
X	POWER	R 0243	88-130-221-080	OE	RES,220-1/4W J	KSM	RX-SLM800
X	POWER	R 0243	88-130-221-080	OE	RES,220-1/4W J	EZSM	RX-SLM801
X	POWER	R 0244	88-130-221-080		RES,220-1/4W J	KSM	RX-SLM800
X	POWER	R 0244	88-130-221-080		RES,220-1/4W J	EZSM	RX-SLM801
X	POWER	R 0244	88-130-221-080	OE	RES,220-1/4W J	KSM	RX-SLM800
X	POWER	R 0244	88-130-221-080	OE	RES,220-1/4W J	EZSM	RX-SLM801
X	POWER	R 0249	88-118-223-080		C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER	R 0249	88-118-223-080		C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0249	88-118-223-080	OE	C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER	R 0249	88-118-223-080	OE	C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0250	88-118-223-080		C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER	R 0250	88-118-223-080		C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0250	88-118-223-080	OE	C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER	R 0250	88-118-223-080	OE	C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0251	88-118-122-080		C-RES,S 1.2K-1/10W J	KSM	RX-SLM800
X	POWER	R 0251	88-118-122-080		C-RES,S 1.2K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0251	88-118-122-080	OE	C-RES,S 1.2K-1/10W J	KSM	RX-SLM800
X	POWER	R 0251	88-118-122-080	OE	C-RES,S 1.2K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0281	88-118-102-080		C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	POWER	R 0281	88-118-102-080		C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0281	88-118-102-080	OE	C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	POWER	R 0281	88-118-102-080	OE	C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0282	88-118-102-080		C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	POWER	R 0282	88-118-102-080		C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0282	88-118-102-080	OE	C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	POWER	R 0282	88-118-102-080	OE	C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0283	88-118-473-080		C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER	R 0283	88-118-473-080		C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0283	88-118-473-080	OE	C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER	R 0283	88-118-473-080	OE	C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0284	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0284	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0284	88-118-103-080	OE	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0284	88-118-103-080	OE	C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0285	88-118-000-080		C-JUMPER,S	KSM	RX-SLM800
X	POWER	R 0285	88-118-000-080		C-JUMPER,S	EZSM	RX-SLM801
X	POWER	R 0285	88-118-000-080	OE	C-JUMPER,S	KSM	RX-SLM800
X	POWER	R 0285	88-118-000-080	OE	C-JUMPER,S	EZSM	RX-SLM801
X	POWER	R 0286	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0286	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0286	88-118-103-080	OE	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0286	88-118-103-080	OE	C-RES,S 10K-1/10W J	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER	R 0287	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0287	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0287	88-118-103-080	OE	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0287	88-118-103-080	OE	C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0288	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0288	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0288	88-118-103-080	OE	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0288	88-118-103-080	OE	C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0289	88-130-101-080		RES,100-1/4W J	KSM	RX-SLM800
X	POWER	R 0289	88-130-101-080		RES,100-1/4W J	EZSM	RX-SLM801
X	POWER	R 0289	88-130-101-080		RES,100-1/4W J	KSM	RX-SLM800
X	POWER	R 0289	88-130-101-080		RES,100-1/4W J	EZSM	RX-SLM801
X	POWER	R 0290	88-130-101-080		RES,100-1/4W J	KSM	RX-SLM800
X	POWER	R 0290	88-130-101-080		RES,100-1/4W J	EZSM	RX-SLM801
X	POWER	R 0290	88-130-101-080	OE	RES,100-1/4W J	KSM	RX-SLM800
X	POWER	R 0290	88-130-101-080	OE	RES,100-1/4W J	EZSM	RX-SLM801
X	POWER	R 0298	88-118-473-080		C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER	R 0298	88-118-473-080		C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0298	88-118-473-080	OE	C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER	R 0298	88-118-473-080	OE	C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0299	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0299	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER	R 0299	88-118-103-080	OE	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER	R 0299	88-118-103-080	OE	C-RES,S 10K-1/10W J	EZSM	RX-SLM801
O	POWER	W 0101	8A-CU2-662-010		F-CABLE,5P 2.5MM 150MM	KSM	RX-SLM800
O	POWER	W 0101	8A-CU2-662-010		F-CABLE,5P 2.5MM 150MM	EZSM	RX-SLM801
O	POWER	W 0101	8A-CU2-662-010	OE	F-CABLE,5P 2.5MM 150MM	KSM	RX-SLM800
O	POWER	W 0101	8A-CU2-662-010	OE	F-CABLE,5P 2.5MM 150MM	EZSM	RX-SLM801
O	POWER	W 0103	8Z-CL1-655-010		F-CABLE,4P 2.5 100MM PWR	KSM	RX-SLM800
O	POWER	W 0103	8Z-CL1-655-010		F-CABLE,4P 2.5 100MM PWR	EZSM	RX-SLM801
O	POWER	W 0103	8Z-CL1-655-010	OE	F-CABLE,4P 2.5 100MM PWR	KSM	RX-SLM800
O	POWER	W 0103	8Z-CL1-655-010	OE	F-CABLE,4P 2.5 100MM PWR	EZSM	RX-SLM801
X	POWER	W 0150	89-920-120-110		WIRE,UD0-12-3/3	KSM	RX-SLM800
X	POWER	W 0150	89-920-120-110		WIRE,UD0-12-3/3	EZSM	RX-SLM801
X	POWER	W 0501	8Z-CL1-668-010		WIRE,FASTON ASSY CL1	KSM	RX-SLM800
X	POWER	W 0501	8Z-CL1-668-010		WIRE,FASTON ASSY CL1	EZSM	RX-SLM801
X	POWER	W 0501	8Z-CL1-668-010	1A	WIRE,FASTON ASSY CL1	KSM	RX-SLM800
X	POWER	W 0501	8Z-CL1-668-010	1A	WIRE,FASTON ASSY CL1	EZSM	RX-SLM801
X	POWER	WH 0102	87-064-117-010		HLDR,WIRE 2.5-5 P 51052-05	KSM	RX-SLM800
X	POWER	WH 0102	87-064-117-010		HLDR,WIRE 2.5-5 P 51052-05	EZSM	RX-SLM801
!	X POWER	WH 0102	87-064-117-010	OE	HLDR,WIRE 2.5-5 P 51052-05	KSM	RX-SLM800
!	X POWER	WH 0102	87-064-117-010	OE	HLDR,WIRE 2.5-5 P 51052-05	EZSM	RX-SLM801
O	POWER	WH 0104	87-A90-507-010		HLDR,WIRE 2.5-4P	KSM	RX-SLM800
O	POWER	WH 0104	87-A90-507-010		HLDR,WIRE 2.5-4P	EZSM	RX-SLM801
O	POWER	WH 0104	87-A90-507-010	OE	HLDR,WIRE 2.5-4P	KSM	RX-SLM800
O	POWER	WH 0104	87-A90-507-010	OE	HLDR,WIRE 2.5-4P	EZSM	RX-SLM801
O	POWER AMP	C 0201	87-010-260-080		CAP,E 47-25 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0201	87-010-260-080		CAP,E 47-25 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0201	87-010-260-080	OE	CAP,E 47-25 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0201	87-010-260-080	OE	CAP,E 47-25 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0202	87-010-260-080		CAP,E 47-25 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0202	87-010-260-080		CAP,E 47-25 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0202	87-010-260-080	OE	CAP,E 47-25 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0202	87-010-260-080	OE	CAP,E 47-25 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0203	87-A10-946-080		C-CAP,S 220P-100 J CH	KSM	RX-SLM800
O	POWER AMP	C 0203	87-A10-946-080		C-CAP,S 220P-100 J CH	EZSM	RX-SLM801
O	POWER AMP	C 0203	87-A10-946-080	OE	C-CAP,S 220P-100 J CH	KSM	RX-SLM800
O	POWER AMP	C 0203	87-A10-946-080	OE	C-CAP,S 220P-100 J CH	EZSM	RX-SLM801
O	POWER AMP	C 0204	87-A10-946-080		C-CAP,S 220P-100 J CH	KSM	RX-SLM800
O	POWER AMP	C 0204	87-A10-946-080		C-CAP,S 220P-100 J CH	EZSM	RX-SLM801
O	POWER AMP	C 0204	87-A10-946-080	OE	C-CAP,S 220P-100 J CH	KSM	RX-SLM800
O	POWER AMP	C 0204	87-A10-946-080	OE	C-CAP,S 220P-100 J CH	EZSM	RX-SLM801
O	POWER AMP	C 0209	87-010-186-080		C-CAP,S 4700P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0209	87-010-186-080		C-CAP,S 4700P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0209	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0209	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0210	87-010-186-080		C-CAP,S 4700P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0210	87-010-186-080		C-CAP,S 4700P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0210	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0210	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	POWER AMP	C 0211	87-012-368-080		C-CAP,S 0.1-50 Z F	KSM	RX-SLM800
O	POWER AMP	C 0211	87-012-368-080		C-CAP,S 0.1-50 Z F	EZSM	RX-SLM801
O	POWER AMP	C 0211	87-012-368-080	OE	C-CAP,S 0.1-50 Z F	KSM	RX-SLM800
O	POWER AMP	C 0211	87-012-368-080	OE	C-CAP,S 0.1-50 Z F	EZSM	RX-SLM801
O	POWER AMP	C 0212	87-012-368-080		C-CAP,S 0.1-50 Z F	KSM	RX-SLM800
O	POWER AMP	C 0212	87-012-368-080		C-CAP,S 0.1-50 Z F	EZSM	RX-SLM801
O	POWER AMP	C 0212	87-012-368-080	OE	C-CAP,S 0.1-50 Z F	KSM	RX-SLM800
O	POWER AMP	C 0212	87-012-368-080	OE	C-CAP,S 0.1-50 Z F	EZSM	RX-SLM801
O	POWER AMP	C 0213	87-010-195-080		C-CAP,S 0.068-25 Z F C2012	KSM	RX-SLM800
O	POWER AMP	C 0213	87-010-195-080		C-CAP,S 0.068-25 Z F C2012	EZSM	RX-SLM801
O	POWER AMP	C 0213	87-010-195-080	OE	C-CAP,S 0.068-25 Z F C2012	KSM	RX-SLM800
O	POWER AMP	C 0213	87-010-195-080	OE	C-CAP,S 0.068-25 Z F C2012	EZSM	RX-SLM801
O	POWER AMP	C 0214	87-010-195-080		C-CAP,S 0.068-25 Z F C2012	KSM	RX-SLM800
O	POWER AMP	C 0214	87-010-195-080		C-CAP,S 0.068-25 Z F C2012	EZSM	RX-SLM801
O	POWER AMP	C 0214	87-010-195-080	OE	C-CAP,S 0.068-25 Z F C2012	KSM	RX-SLM800
O	POWER AMP	C 0214	87-010-195-080	OE	C-CAP,S 0.068-25 Z F C2012	EZSM	RX-SLM801
O	POWER AMP	C 0215	87-010-544-080		CAP,E 0.1-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0215	87-010-544-080		CAP,E 0.1-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0215	87-010-544-080	OE	CAP,E 0.1-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0215	87-010-544-080	OE	CAP,E 0.1-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0216	87-010-544-080		CAP,E 0.1-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0216	87-010-544-080		CAP,E 0.1-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0216	87-010-544-080	OE	CAP,E 0.1-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0216	87-010-544-080	OE	CAP,E 0.1-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0217	87-010-182-080		C-CAP,S 2200P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0217	87-010-182-080		C-CAP,S 2200P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0217	87-010-182-080	OE	C-CAP,S 2200P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0217	87-010-182-080	OE	C-CAP,S 2200P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0218	87-010-182-080		C-CAP,S 2200P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0218	87-010-182-080		C-CAP,S 2200P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0218	87-010-182-080	OE	C-CAP,S 2200P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0218	87-010-182-080	OE	C-CAP,S 2200P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0221	87-010-186-080		C-CAP,S 4700P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0221	87-010-186-080		C-CAP,S 4700P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0221	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0221	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0222	87-010-186-080		C-CAP,S 4700P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0222	87-010-186-080		C-CAP,S 4700P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0222	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0222	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0223	87-010-403-080		CAP,E 3.3-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0223	87-010-403-080		CAP,E 3.3-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0223	87-010-403-080	OE	CAP,E 3.3-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0223	87-010-403-080	OE	CAP,E 3.3-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0224	87-010-403-080		CAP,E 3.3-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0224	87-010-403-080		CAP,E 3.3-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0224	87-010-403-080	OE	CAP,E 3.3-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0224	87-010-403-080	OE	CAP,E 3.3-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0225	87-012-157-080		C-CAP,S 330P-50 J CH GRM	KSM	RX-SLM800
O	POWER AMP	C 0225	87-012-157-080		C-CAP,S 330P-50 J CH GRM	EZSM	RX-SLM801
O	POWER AMP	C 0225	87-012-157-080	OE	C-CAP,S 330P-50 J CH GRM	KSM	RX-SLM800
O	POWER AMP	C 0225	87-012-157-080	OE	C-CAP,S 330P-50 J CH GRM	EZSM	RX-SLM801
O	POWER AMP	C 0226	87-012-157-080		C-CAP,S 330P-50 J CH GRM	KSM	RX-SLM800
O	POWER AMP	C 0226	87-012-157-080		C-CAP,S 330P-50 J CH GRM	EZSM	RX-SLM801
O	POWER AMP	C 0226	87-012-157-080	OE	C-CAP,S 330P-50 J CH GRM	KSM	RX-SLM800
O	POWER AMP	C 0226	87-012-157-080	OE	C-CAP,S 330P-50 J CH GRM	EZSM	RX-SLM801
X	POWER AMP	C 0263	88-266-610-810		CAP,SC 1000P-25 K SR DD400	KSM	RX-SLM800
X	POWER AMP	C 0263	88-266-610-810		CAP,SC 1000P-25 K SR DD400	EZSM	RX-SLM801
X	POWER AMP	C 0263	88-266-610-810	OE	CAP,SC 1000P-25 K SR DD400	KSM	RX-SLM800
X	POWER AMP	C 0263	88-266-610-810	OE	CAP,SC 1000P-25 K SR DD400	EZSM	RX-SLM801
X	POWER AMP	C 0264	88-266-610-810		CAP,SC 1000P-25 K SR DD400	KSM	RX-SLM800
X	POWER AMP	C 0264	88-266-610-810		CAP,SC 1000P-25 K SR DD400	EZSM	RX-SLM801
X	POWER AMP	C 0264	88-266-610-810	OE	CAP,SC 1000P-25 K SR DD400	KSM	RX-SLM800
X	POWER AMP	C 0264	88-266-610-810	OE	CAP,SC 1000P-25 K SR DD400	EZSM	RX-SLM801
O	POWER AMP	C 0265	87-010-546-080		CAP,E 0.33-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0265	87-010-546-080		CAP,E 0.33-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0265	87-010-546-080	OE	CAP,E 0.33-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0265	87-010-546-080	OE	CAP,E 0.33-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0266	87-010-546-080		CAP,E 0.33-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0266	87-010-546-080		CAP,E 0.33-50 M 11L SME	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.


Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	POWER AMP	C 0266	87-010-546-080	OE	CAP,E 0.33-50 M 11L SME	KSM	RX-SLM800
O	POWER AMP	C 0266	87-010-546-080	OE	CAP,E 0.33-50 M 11L SME	EZSM	RX-SLM801
O	POWER AMP	C 0271	87-015-819-080		C-CAP, 0.01-50 K B C3216	KSM	RX-SLM800
O	POWER AMP	C 0271	87-015-819-080		C-CAP, 0.01-50 K B C3216	EZSM	RX-SLM801
O	POWER AMP	C 0271	87-015-819-080	OE	C-CAP, 0.01-50 K B C3216	KSM	RX-SLM800
O	POWER AMP	C 0271	87-015-819-080	OE	C-CAP, 0.01-50 K B C3216	EZSM	RX-SLM801
O	POWER AMP	C 0277	87-010-197-080		C-CAP,S 0.01-25 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0277	87-010-197-080		C-CAP,S 0.01-25 K B C2012	EZSM	RX-SLM801
O	POWER AMP	C 0277	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	KSM	RX-SLM800
O	POWER AMP	C 0277	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	EZSM	RX-SLM801
O	POWER AMP	CN 0201	87-A60-812-010		CONN,8P V BLK TAC-L8X	KSM	RX-SLM800
O	POWER AMP	CN 0201	87-A60-812-010		CONN,8P V BLK TAC-L8X	EZSM	RX-SLM801
O	POWER AMP	CN 0201	87-A60-812-010	OE	CONN,8P V BLK TAC-L8X	KSM	RX-SLM800
O	POWER AMP	CN 0201	87-A60-812-010	OE	CONN,8P V BLK TAC-L8X	EZSM	RX-SLM801
O	POWER AMP	CN 0202	87-A60-812-010		CONN,8P V BLK TAC-L8X	KSM	RX-SLM800
O	POWER AMP	CN 0202	87-A60-812-010		CONN,8P V BLK TAC-L8X	EZSM	RX-SLM801
O	POWER AMP	CN 0202	87-A60-812-010	OE	CONN,8P V BLK TAC-L8X	KSM	RX-SLM800
O	POWER AMP	CN 0202	87-A60-812-010	OE	CONN,8P V BLK TAC-L8X	EZSM	RX-SLM801
S	POWER AMP	D 0201	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0201	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER AMP	D 0202	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0202	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER AMP	D 0202	87-070-345-080	OE	DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0202	87-070-345-080	OE	DIODE,1N4148	EZSM	RX-SLM801
S	POWER AMP	D 0203	87-A40-313-080		C-DIODE,MC2840	KSM	RX-SLM800
S	POWER AMP	D 0203	87-A40-313-080		C-DIODE,MC2840	EZSM	RX-SLM801
S	POWER AMP	D 0203	87-A40-313-080	OE	C-DIODE,MC2840	KSM	RX-SLM800
S	POWER AMP	D 0203	87-A40-313-080	OE	C-DIODE,MC2840	EZSM	RX-SLM801
S	POWER AMP	D 0204	87-A40-313-080		C-DIODE,MC2840	KSM	RX-SLM800
S	POWER AMP	D 0204	87-A40-313-080		C-DIODE,MC2840	EZSM	RX-SLM801
S	POWER AMP	D 0204	87-A40-313-080	OE	C-DIODE,MC2840	KSM	RX-SLM800
S	POWER AMP	D 0204	87-A40-313-080	OE	C-DIODE,MC2840	EZSM	RX-SLM801
S	POWER AMP	D 0207	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0207	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER AMP	D 0207	87-070-345-080	OE	DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0207	87-070-345-080	OE	DIODE,1N4148	EZSM	RX-SLM801
S	POWER AMP	D 0208	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0208	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER AMP	D 0208	87-070-345-080	OE	DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0208	87-070-345-080	OE	DIODE,1N4148	EZSM	RX-SLM801
S	POWER AMP	D 0209	87-A40-488-080		DIODE,1SS244	KSM	RX-SLM800
S	POWER AMP	D 0209	87-A40-488-080		DIODE,1SS244	EZSM	RX-SLM801
S	POWER AMP	D 0209	87-A40-488-080	OE	DIODE,1SS244	KSM	RX-SLM800
S	POWER AMP	D 0209	87-A40-488-080	OE	DIODE,1SS244	EZSM	RX-SLM801
S	POWER AMP	D 0210	87-A40-488-080		DIODE,1SS244	KSM	RX-SLM800
S	POWER AMP	D 0210	87-A40-488-080		DIODE,1SS244	EZSM	RX-SLM801
S	POWER AMP	D 0210	87-A40-488-080	OE	DIODE,1SS244	KSM	RX-SLM800
S	POWER AMP	D 0210	87-A40-488-080	OE	DIODE,1SS244	EZSM	RX-SLM801
S	POWER AMP	D 0211	87-A40-270-080		C-DIODE,MC2838	KSM	RX-SLM800
S	POWER AMP	D 0211	87-A40-270-080		C-DIODE,MC2838	EZSM	RX-SLM801
S	POWER AMP	D 0211	87-A40-270-080	OE	C-DIODE,MC2838	KSM	RX-SLM800
S	POWER AMP	D 0211	87-A40-270-080	OE	C-DIODE,MC2838	EZSM	RX-SLM801
X	POWER AMP	D 0213	88-100-000-010		PLATING-JW, 0.58 SN95	KSM	RX-SLM800
X	POWER AMP	D 0213	88-100-000-010		PLATING-JW, 0.58 SN95	EZSM	RX-SLM801
X	POWER AMP	D 0213	88-100-000-010	OE	PLATING-JW, 0.58 SN95	KSM	RX-SLM800
X	POWER AMP	D 0213	88-100-000-010	OE	PLATING-JW, 0.58 SN95	EZSM	RX-SLM801
S	POWER AMP	D 0214	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0214	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER AMP	D 0214	87-070-345-080	OE	DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0214	87-070-345-080	OE	DIODE,1N4148	EZSM	RX-SLM801
S	POWER AMP	D 0271	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0271	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	POWER AMP	D 0271	87-070-345-080	OE	DIODE,1N4148	KSM	RX-SLM800
S	POWER AMP	D 0271	87-070-345-080	OE	DIODE,1N4148	EZSM	RX-SLM801
O	POWER AMP	J 0203	87-YP6-608-010		TERMINAL,SPKR 4P	KSM	RX-SLM800
O	POWER AMP	J 0203	87-YP6-608-010		TERMINAL,SPKR 4P	EZSM	RX-SLM801
O	POWER AMP	J 0203	87-YP6-608-010	1B	TERMINAL,SPKR 4P	KSM	RX-SLM800
O	POWER AMP	J 0203	87-YP6-608-010	1B	TERMINAL,SPKR 4P	EZSM	RX-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER AMP	JR 0201	88-129-000-080		C-JUMPER, 3216	KSM	RX-SLM800
X	POWER AMP	JR 0201	88-129-000-080		C-JUMPER, 3216	EZSM	RX-SLM801
X	POWER AMP	JR 0201	88-129-000-080	0E	C-JUMPER, 3216	KSM	RX-SLM800
X	POWER AMP	JR 0201	88-129-000-080	0E	C-JUMPER, 3216	EZSM	RX-SLM801
X	POWER AMP	JR 0207	88-118-000-080		C-JUMPER, S	KSM	RX-SLM800
X	POWER AMP	JR 0207	88-118-000-080		C-JUMPER, S	EZSM	RX-SLM801
X	POWER AMP	JR 0207	88-118-000-080	0E	C-JUMPER, S	KSM	RX-SLM800
X	POWER AMP	JR 0207	88-118-000-080	0E	C-JUMPER, S	EZSM	RX-SLM801
X	POWER AMP	JR 0208	88-118-000-080		C-JUMPER, S	KSM	RX-SLM800
X	POWER AMP	JR 0208	88-118-000-080		C-JUMPER, S	EZSM	RX-SLM801
X	POWER AMP	JR 0208	88-118-000-080	0E	C-JUMPER, S	KSM	RX-SLM800
X	POWER AMP	JR 0208	88-118-000-080	0E	C-JUMPER, S	EZSM	RX-SLM801
X	POWER AMP	JR 0210	88-118-000-080		C-JUMPER, S	KSM	RX-SLM800
X	POWER AMP	JR 0210	88-118-000-080		C-JUMPER, S	EZSM	RX-SLM801
X	POWER AMP	JR 0210	88-118-000-080	0E	C-JUMPER, S	KSM	RX-SLM800
X	POWER AMP	JR 0210	88-118-000-080	0E	C-JUMPER, S	EZSM	RX-SLM801
X	POWER AMP	JR 0211	88-129-000-080		C-JUMPER, 3216	KSM	RX-SLM800
X	POWER AMP	JR 0211	88-129-000-080		C-JUMPER, 3216	EZSM	RX-SLM801
X	POWER AMP	JR 0211	88-129-000-080	0E	C-JUMPER, 3216	KSM	RX-SLM800
X	POWER AMP	JR 0211	88-129-000-080	0E	C-JUMPER, 3216	EZSM	RX-SLM801
O	POWER AMP	L 0201	87-003-383-010		COIL, 1UH K	KSM	RX-SLM800
O	POWER AMP	L 0201	87-003-383-010		COIL, 1UH K	EZSM	RX-SLM801
O	POWER AMP	L 0201	87-003-383-010	1A	COIL, 1UH K	KSM	RX-SLM800
O	POWER AMP	L 0201	87-003-383-010	1A	COIL, 1UH K	EZSM	RX-SLM801
O	POWER AMP	L 0202	87-003-383-010		COIL, 1UH K	KSM	RX-SLM800
O	POWER AMP	L 0202	87-003-383-010		COIL, 1UH K	EZSM	RX-SLM801
O	POWER AMP	L 0202	87-003-383-010	1A	COIL, 1UH K	KSM	RX-SLM800
O	POWER AMP	L 0202	87-003-383-010	1A	COIL, 1UH K	EZSM	RX-SLM801
S	POWER AMP	Q 0201	87-A30-075-080		C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER AMP	Q 0201	87-A30-075-080		C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER AMP	Q 0201	87-A30-075-080	0E	C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER AMP	Q 0201	87-A30-075-080	0E	C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER AMP	Q 0202	87-A30-075-080		C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER AMP	Q 0202	87-A30-075-080		C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER AMP	Q 0202	87-A30-075-080	0E	C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER AMP	Q 0202	87-A30-075-080	0E	C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER AMP	Q 0203	87-A30-075-080		C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER AMP	Q 0203	87-A30-075-080		C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER AMP	Q 0203	87-A30-075-080	0E	C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER AMP	Q 0203	87-A30-075-080	0E	C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER AMP	Q 0204	87-A30-075-080		C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER AMP	Q 0204	87-A30-075-080		C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER AMP	Q 0204	87-A30-075-080	0E	C-TR, 2SA1235F	KSM	RX-SLM800
S	POWER AMP	Q 0204	87-A30-075-080	0E	C-TR, 2SA1235F	EZSM	RX-SLM801
S	POWER AMP	Q 0205	87-A30-076-080		C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0205	87-A30-076-080		C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0205	87-A30-076-080	0E	C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0205	87-A30-076-080	0E	C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0206	87-A30-076-080		C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0206	87-A30-076-080		C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0206	87-A30-076-080	0E	C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0206	87-A30-076-080	0E	C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0207	87-A30-076-080		C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0207	87-A30-076-080		C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0207	87-A30-076-080	0E	C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0207	87-A30-076-080	0E	C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0208	87-A30-076-080		C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0208	87-A30-076-080		C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0208	87-A30-076-080	0E	C-TR, 2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0208	87-A30-076-080	0E	C-TR, 2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0209	87-A30-190-080		TR, CC5551	KSM	RX-SLM800
S	POWER AMP	Q 0209	87-A30-190-080		TR, CC5551	EZSM	RX-SLM801
S	POWER AMP	Q 0209	87-A30-190-080	0E	TR, CC5551	KSM	RX-SLM800
S	POWER AMP	Q 0209	87-A30-190-080	0E	TR, CC5551	EZSM	RX-SLM801
S	POWER AMP	Q 0210	87-A30-190-080		TR, CC5551	KSM	RX-SLM800
S	POWER AMP	Q 0210	87-A30-190-080		TR, CC5551	EZSM	RX-SLM801
S	POWER AMP	Q 0210	87-A30-190-080	0E	TR, CC5551	KSM	RX-SLM800
S	POWER AMP	Q 0210	87-A30-190-080	0E	TR, CC5551	EZSM	RX-SLM801
S	POWER AMP	Q 0211	87-A30-109-010		TR, 2SD2495	KSM	RX-SLM800
S	POWER AMP	Q 0211	87-A30-109-010		TR, 2SD2495	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
S	POWER AMP	Q 0211	87-A30-109-010	1B	TR,2SD2495	KSM	RX-SLM800
S	POWER AMP	Q 0211	87-A30-109-010	1B	TR,2SD2495	EZSM	RX-SLM801
S	POWER AMP	Q 0212	87-A30-109-010		TR,2SD2495	KSM	RX-SLM800
S	POWER AMP	Q 0212	87-A30-109-010		TR,2SD2495	EZSM	RX-SLM801
S	POWER AMP	Q 0212	87-A30-109-010	1B	TR,2SD2495	KSM	RX-SLM800
S	POWER AMP	Q 0212	87-A30-109-010	1B	TR,2SD2495	EZSM	RX-SLM801
S	POWER AMP	Q 0213	87-A30-108-010		TR,2SB1626	KSM	RX-SLM800
S	POWER AMP	Q 0213	87-A30-108-010		TR,2SB1626	EZSM	RX-SLM801
S	POWER AMP	Q 0213	87-A30-108-010	1B	TR,2SB1626	KSM	RX-SLM800
S	POWER AMP	Q 0213	87-A30-108-010	1B	TR,2SB1626	EZSM	RX-SLM801
S	POWER AMP	Q 0214	87-A30-108-010		TR,2SB1626	KSM	RX-SLM800
S	POWER AMP	Q 0214	87-A30-108-010		TR,2SB1626	EZSM	RX-SLM801
S	POWER AMP	Q 0214	87-A30-108-010	1B	TR,2SB1626	KSM	RX-SLM800
S	POWER AMP	Q 0214	87-A30-108-010	1B	TR,2SB1626	EZSM	RX-SLM801
S	POWER AMP	Q 0215	87-A30-119-040		C-TR,2SC3906K R	KSM	RX-SLM800
S	POWER AMP	Q 0215	87-A30-119-040		C-TR,2SC3906K R	EZSM	RX-SLM801
S	POWER AMP	Q 0215	87-A30-119-040	0E	C-TR,2SC3906K R	KSM	RX-SLM800
S	POWER AMP	Q 0215	87-A30-119-040	0E	C-TR,2SC3906K R	EZSM	RX-SLM801
S	POWER AMP	Q 0216	87-A30-119-040		C-TR,2SC3906K R	KSM	RX-SLM800
S	POWER AMP	Q 0216	87-A30-119-040		C-TR,2SC3906K R	EZSM	RX-SLM801
S	POWER AMP	Q 0216	87-A30-119-040	0E	C-TR,2SC3906K R	KSM	RX-SLM800
S	POWER AMP	Q 0216	87-A30-119-040	0E	C-TR,2SC3906K R	EZSM	RX-SLM801
S	POWER AMP	Q 0219	87-A30-076-080		C-TR,2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0219	87-A30-076-080		C-TR,2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0219	87-A30-076-080	0E	C-TR,2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0219	87-A30-076-080	0E	C-TR,2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0220	87-A30-076-080		C-TR,2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0220	87-A30-076-080		C-TR,2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0220	87-A30-076-080	0E	C-TR,2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0220	87-A30-076-080	0E	C-TR,2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0221	87-A30-076-080		C-TR,2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0221	87-A30-076-080		C-TR,2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0221	87-A30-076-080	0E	C-TR,2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0221	87-A30-076-080	0E	C-TR,2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0222	87-A30-076-080		C-TR,2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0222	87-A30-076-080		C-TR,2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0222	87-A30-076-080	0E	C-TR,2SC3052F	KSM	RX-SLM800
S	POWER AMP	Q 0222	87-A30-076-080	0E	C-TR,2SC3052F	EZSM	RX-SLM801
S	POWER AMP	Q 0261	87-A30-047-080		TR,CSD655E	KSM	RX-SLM800
S	POWER AMP	Q 0261	87-A30-047-080		TR,CSD655E	EZSM	RX-SLM801
S	POWER AMP	Q 0261	87-A30-047-080	0E	TR,CSD655E	KSM	RX-SLM800
S	POWER AMP	Q 0261	87-A30-047-080	0E	TR,CSD655E	EZSM	RX-SLM801
S	POWER AMP	Q 0262	87-A30-047-080		TR,CSD655E	KSM	RX-SLM800
S	POWER AMP	Q 0262	87-A30-047-080		TR,CSD655E	EZSM	RX-SLM801
S	POWER AMP	Q 0262	87-A30-047-080	0E	TR,CSD655E	KSM	RX-SLM800
S	POWER AMP	Q 0262	87-A30-047-080	0E	TR,CSD655E	EZSM	RX-SLM801
S	POWER AMP	Q 0263	87-026-609-080		TR,KTA1266GR	KSM	RX-SLM800
S	POWER AMP	Q 0263	87-026-609-080		TR,KTA1266GR	EZSM	RX-SLM801
S	POWER AMP	Q 0263	87-026-609-080	0E	TR,KTA1266GR	KSM	RX-SLM800
S	POWER AMP	Q 0263	87-026-609-080	0E	TR,KTA1266GR	EZSM	RX-SLM801
S	POWER AMP	Q 0271	87-A30-075-080		C-TR,2SA1235F	KSM	RX-SLM800
S	POWER AMP	Q 0271	87-A30-075-080		C-TR,2SA1235F	EZSM	RX-SLM801
S	POWER AMP	Q 0271	87-A30-075-080	0E	C-TR,2SA1235F	KSM	RX-SLM800
S	POWER AMP	Q 0271	87-A30-075-080	0E	C-TR,2SA1235F	EZSM	RX-SLM801
S	POWER AMP	Q 0284	87-A30-107-070		C-TR,CMBT5401	KSM	RX-SLM800
S	POWER AMP	Q 0284	87-A30-107-070		C-TR,CMBT5401	EZSM	RX-SLM801
S	POWER AMP	Q 0284	87-A30-107-070	0E	C-TR,CMBT5401	KSM	RX-SLM800
S	POWER AMP	Q 0284	87-A30-107-070	0E	C-TR,CMBT5401	EZSM	RX-SLM801
S	POWER AMP	Q 0285	87-A30-074-080		C-TR,RT1P 141C	KSM	RX-SLM800
S	POWER AMP	Q 0285	87-A30-074-080		C-TR,RT1P 141C	EZSM	RX-SLM801
S	POWER AMP	Q 0285	87-A30-074-080	0E	C-TR,RT1P 141C	KSM	RX-SLM800
S	POWER AMP	Q 0285	87-A30-074-080	0E	C-TR,RT1P 141C	EZSM	RX-SLM801
X	POWER AMP	R 0201	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0201	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0201	88-118-103-080	0E	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0201	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0202	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0202	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0202	88-118-103-080	0E	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0202	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER AMP	R 0203	88-118-101-080		C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0203	88-118-101-080		C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0203	88-118-101-080	OE	C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0203	88-118-101-080	OE	C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0204	88-118-101-080		C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0204	88-118-101-080		C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0204	88-118-101-080	OE	C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0204	88-118-101-080	OE	C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0205	88-118-101-080		C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0205	88-118-101-080		C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0205	88-118-101-080	OE	C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0205	88-118-101-080	OE	C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0206	88-118-101-080		C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0206	88-118-101-080		C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0206	88-118-101-080	OE	C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0206	88-118-101-080	OE	C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0207	88-121-222-080		RES,2.2K-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0207	88-121-222-080		RES,2.2K-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0207	88-121-222-080	OE	RES,2.2K-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0207	88-121-222-080	OE	RES,2.2K-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0208	88-121-222-080		RES,2.2K-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0208	88-121-222-080		RES,2.2K-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0208	88-121-222-080	OE	RES,2.2K-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0208	88-121-222-080	OE	RES,2.2K-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0209	88-128-222-080		C-RES, 2.2K-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0209	88-128-222-080		C-RES, 2.2K-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0209	88-128-222-080	OE	C-RES, 2.2K-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0209	88-128-222-080	OE	C-RES, 2.2K-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0210	88-128-222-080		C-RES, 2.2K-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0210	88-128-222-080		C-RES, 2.2K-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0210	88-128-222-080	OE	C-RES, 2.2K-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0210	88-128-222-080	OE	C-RES, 2.2K-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0211	88-129-000-080		C-JUMPER,3216	KSM	RX-SLM800
X	POWER AMP	R 0211	88-129-000-080		C-JUMPER,3216	EZSM	RX-SLM801
X	POWER AMP	R 0211	88-129-000-080	OE	C-JUMPER,3216	KSM	RX-SLM800
X	POWER AMP	R 0211	88-129-000-080	OE	C-JUMPER,3216	EZSM	RX-SLM801
X	POWER AMP	R 0213	88-118-390-080		C-RES,S 39-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0213	88-118-390-080		C-RES,S 39-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0213	88-118-390-080	OE	C-RES,S 39-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0213	88-118-390-080	OE	C-RES,S 39-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0214	88-118-390-080		C-RES,S 39-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0214	88-118-390-080		C-RES,S 39-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0214	88-118-390-080	OE	C-RES,S 39-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0214	88-118-390-080	OE	C-RES,S 39-1/10W J	EZSM	RX-SLM801
O	POWER AMP	R 0215	87-A00-258-080		RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0215	87-A00-258-080		RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0215	87-A00-258-080	OE	RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0215	87-A00-258-080	OE	RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0216	87-A00-258-080		RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0216	87-A00-258-080		RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0216	87-A00-258-080	OE	RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0216	87-A00-258-080	OE	RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0217	87-A00-258-080		RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0217	87-A00-258-080		RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0217	87-A00-258-080	OE	RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0217	87-A00-258-080	OE	RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0218	87-A00-258-080		RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0218	87-A00-258-080		RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0218	87-A00-258-080	OE	RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0218	87-A00-258-080	OE	RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0219	87-A00-258-080		RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0219	87-A00-258-080		RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0219	87-A00-258-080	OE	RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0219	87-A00-258-080	OE	RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0220	87-A00-258-080		RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0220	87-A00-258-080		RES,M/F 0.22-1W J	EZSM	RX-SLM801
O	POWER AMP	R 0220	87-A00-258-080	OE	RES,M/F 0.22-1W J	KSM	RX-SLM800
O	POWER AMP	R 0220	87-A00-258-080	OE	RES,M/F 0.22-1W J	EZSM	RX-SLM801
X	POWER AMP	R 0221	88-118-222-080		C-RES,S 2.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0221	88-118-222-080		C-RES,S 2.2K-1/10W J	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER AMP	R 0221	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0221	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0222	88-118-222-080		C-RES,S 2.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0222	88-118-222-080		C-RES,S 2.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0222	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0222	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0223	88-118-122-080		C-RES,S 1.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0223	88-118-122-080		C-RES,S 1.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0223	88-118-122-080	OE	C-RES,S 1.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0223	88-118-122-080	OE	C-RES,S 1.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0224	88-118-122-080		C-RES,S 1.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0224	88-118-122-080		C-RES,S 1.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0224	88-118-122-080	OE	C-RES,S 1.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0224	88-118-122-080	OE	C-RES,S 1.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0225	88-118-272-080		C-RES,S 2.7K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0225	88-118-272-080		C-RES,S 2.7K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0225	88-118-272-080	OE	C-RES,S 2.7K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0225	88-118-272-080	OE	C-RES,S 2.7K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0226	88-118-272-080		C-RES,S 2.7K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0226	88-118-272-080		C-RES,S 2.7K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0226	88-118-272-080	OE	C-RES,S 2.7K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0226	88-118-272-080	OE	C-RES,S 2.7K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0227	88-118-473-080		C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0227	88-118-473-080		C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0227	88-118-473-080	OE	C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0227	88-118-473-080	OE	C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0228	88-118-473-080		C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0228	88-118-473-080		C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0228	88-118-473-080	OE	C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0228	88-118-473-080	OE	C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0229	88-118-332-080		C-RES,S 3.3K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0229	88-118-332-080		C-RES,S 3.3K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0229	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0229	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0230	88-118-332-080		C-RES,S 3.3K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0230	88-118-332-080		C-RES,S 3.3K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0230	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0230	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0231	88-118-152-080		C-RES,S 1.5K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0231	88-118-152-080		C-RES,S 1.5K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0231	88-118-152-080	OE	C-RES,S 1.5K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0231	88-118-152-080	OE	C-RES,S 1.5K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0232	88-118-152-080		C-RES,S 1.5K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0232	88-118-152-080		C-RES,S 1.5K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0232	88-118-152-080	OE	C-RES,S 1.5K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0232	88-118-152-080	OE	C-RES,S 1.5K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0233	88-118-393-080		C-RES,S 39K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0233	88-118-393-080		C-RES,S 39K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0233	88-118-393-080	OE	C-RES,S 39K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0233	88-118-393-080	OE	C-RES,S 39K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0234	88-118-393-080		C-RES,S 39K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0234	88-118-393-080		C-RES,S 39K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0234	88-118-393-080	OE	C-RES,S 39K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0234	88-118-393-080	OE	C-RES,S 39K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0235	88-118-563-080		C-RES,S 56K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0235	88-118-563-080		C-RES,S 56K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0235	88-118-563-080	OE	C-RES,S 56K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0235	88-118-563-080	OE	C-RES,S 56K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0236	88-118-563-080		C-RES,S 56K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0236	88-118-563-080		C-RES,S 56K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0236	88-118-563-080	OE	C-RES,S 56K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0236	88-118-563-080	OE	C-RES,S 56K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0237	88-118-223-080		C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0237	88-118-223-080		C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0237	88-118-223-080	OE	C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0237	88-118-223-080	OE	C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0238	88-118-223-080		C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0238	88-118-223-080		C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0238	88-118-223-080	OE	C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0238	88-118-223-080	OE	C-RES,S 22K-1/10W J	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER AMP	R 0239	88-118-331-080		C-RES,S 330-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0239	88-118-331-080		C-RES,S 330-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0239	88-118-331-080	OE	C-RES,S 330-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0239	88-118-331-080	OE	C-RES,S 330-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0240	88-118-331-080		C-RES,S 330-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0240	88-118-331-080		C-RES,S 330-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0240	88-118-331-080	OE	C-RES,S 330-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0240	88-118-331-080	OE	C-RES,S 330-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0245	88-130-100-080		RES,10-1/4W J	KSM	RX-SLM800
X	POWER AMP	R 0245	88-130-100-080		RES,10-1/4W J	EZSM	RX-SLM801
X	POWER AMP	R 0245	88-130-100-080	OE	RES,10-1/4W J	KSM	RX-SLM800
X	POWER AMP	R 0245	88-130-100-080	OE	RES,10-1/4W J	EZSM	RX-SLM801
X	POWER AMP	R 0246	88-130-100-080		RES,10-1/4W J	KSM	RX-SLM800
X	POWER AMP	R 0246	88-130-100-080		RES,10-1/4W J	EZSM	RX-SLM801
X	POWER AMP	R 0246	88-130-100-080	OE	RES,10-1/4W J	KSM	RX-SLM800
X	POWER AMP	R 0246	88-130-100-080	OE	RES,10-1/4W J	EZSM	RX-SLM801
X	POWER AMP	R 0247	88-130-100-080		RES,10-1/4W J	KSM	RX-SLM800
X	POWER AMP	R 0247	88-130-100-080		RES,10-1/4W J	EZSM	RX-SLM801
X	POWER AMP	R 0247	88-130-100-080	OE	RES,10-1/4W J	KSM	RX-SLM800
X	POWER AMP	R 0247	88-130-100-080	OE	RES,10-1/4W J	EZSM	RX-SLM801
X	POWER AMP	R 0248	88-130-100-080		RES,10-1/4W J	KSM	RX-SLM800
X	POWER AMP	R 0248	88-130-100-080		RES,10-1/4W J	EZSM	RX-SLM801
X	POWER AMP	R 0248	88-130-100-080	OE	RES,10-1/4W J	KSM	RX-SLM800
X	POWER AMP	R 0248	88-130-100-080	OE	RES,10-1/4W J	EZSM	RX-SLM801
X	POWER AMP	R 0253	88-118-471-080		C-RES,S 470-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0253	88-118-471-080		C-RES,S 470-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0253	88-118-471-080	OE	C-RES,S 470-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0253	88-118-471-080	OE	C-RES,S 470-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0254	88-118-471-080		C-RES,S 470-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0254	88-118-471-080		C-RES,S 470-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0254	88-118-471-080	OE	C-RES,S 470-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0254	88-118-471-080	OE	C-RES,S 470-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0255	88-118-152-080		C-RES,S 1.5K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0255	88-118-152-080		C-RES,S 1.5K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0255	88-118-152-080	OE	C-RES,S 1.5K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0255	88-118-152-080	OE	C-RES,S 1.5K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0256	88-118-152-080		C-RES,S 1.5K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0256	88-118-152-080		C-RES,S 1.5K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0256	88-118-152-080	OE	C-RES,S 1.5K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0256	88-118-152-080	OE	C-RES,S 1.5K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0257	88-118-222-080		C-RES,S 2.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0257	88-118-222-080		C-RES,S 2.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0257	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0257	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0258	88-118-222-080		C-RES,S 2.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0258	88-118-222-080		C-RES,S 2.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0258	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0258	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0261	88-118-682-080		C-RES,S 6.8K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0261	88-118-682-080		C-RES,S 6.8K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0261	88-118-682-080	OE	C-RES,S 6.8K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0261	88-118-682-080	OE	C-RES,S 6.8K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0262	88-118-682-080		C-RES,S 6.8K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0262	88-118-682-080		C-RES,S 6.8K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0262	88-118-682-080	OE	C-RES,S 6.8K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0262	88-118-682-080	OE	C-RES,S 6.8K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0265	88-118-101-080		C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0265	88-118-101-080		C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0265	88-118-101-080	OE	C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0265	88-118-101-080	OE	C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0266	88-118-101-080		C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0266	88-118-101-080		C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0266	88-118-101-080	OE	C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0266	88-118-101-080	OE	C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0267	88-118-224-080		C-RES,S 220K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0267	88-118-224-080		C-RES,S 220K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0267	88-118-224-080	OE	C-RES,S 220K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0267	88-118-224-080	OE	C-RES,S 220K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0268	88-118-224-080		C-RES,S 220K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0268	88-118-224-080		C-RES,S 220K-1/10W J	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER AMP	R 0268	88-118-224-080	OE	C-RES,S 220K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0268	88-118-224-080	OE	C-RES,S 220K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0269	88-118-223-080		C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0269	88-118-223-080		C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0269	88-118-223-080	OE	C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0269	88-118-223-080	OE	C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0270	88-118-223-080		C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0270	88-118-223-080		C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0270	88-118-223-080	OE	C-RES,S 22K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0270	88-118-223-080	OE	C-RES,S 22K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0271	88-121-101-080		RES,100-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0271	88-121-101-080		RES,100-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0271	88-121-101-080	OE	RES,100-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0271	88-121-101-080	OE	RES,100-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0272	88-118-101-080		C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0272	88-118-101-080		C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0272	88-118-101-080	OE	C-RES,S 100-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0272	88-118-101-080	OE	C-RES,S 100-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0273	88-118-473-080		C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0273	88-118-473-080		C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0273	88-118-473-080	OE	C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0273	88-118-473-080	OE	C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0274	88-118-105-080		C-RES,S 1M-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0274	88-118-105-080		C-RES,S 1M-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0274	88-118-105-080	OE	C-RES,S 1M-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0274	88-118-105-080	OE	C-RES,S 1M-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0275	88-118-102-080		C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0275	88-118-102-080		C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0275	88-118-102-080	OE	C-RES,S 1K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0275	88-118-102-080	OE	C-RES,S 1K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0276	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0276	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0276	88-118-103-080	OE	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0276	88-118-103-080	OE	C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0277	88-100-000-010		PLATING-JW, 0.58 SN95	KSM	RX-SLM800
X	POWER AMP	R 0277	88-100-000-010		PLATING-JW, 0.58 SN95	EZSM	RX-SLM801
X	POWER AMP	R 0277	88-100-000-010	OE	PLATING-JW, 0.58 SN95	KSM	RX-SLM800
X	POWER AMP	R 0277	88-100-000-010	OE	PLATING-JW, 0.58 SN95	EZSM	RX-SLM801
X	POWER AMP	R 0278	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0278	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0278	88-118-103-080	OE	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0278	88-118-103-080	OE	C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0279	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0279	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0279	88-118-103-080	OE	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0279	88-118-103-080	OE	C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0280	88-118-471-080		C-RES,S 470-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0280	88-118-471-080		C-RES,S 470-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0280	88-118-471-080	OE	C-RES,S 470-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0280	88-118-471-080	OE	C-RES,S 470-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0291	88-118-473-080		C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0291	88-118-473-080		C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0291	88-118-473-080	OE	C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0291	88-118-473-080	OE	C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0292	88-118-473-080		C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0292	88-118-473-080		C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0292	88-118-473-080	OE	C-RES,S 47K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0292	88-118-473-080	OE	C-RES,S 47K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0294	88-118-103-080		C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0294	88-118-103-080		C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0294	88-118-103-080	OE	C-RES,S 10K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0294	88-118-103-080	OE	C-RES,S 10K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0295	88-118-272-080		C-RES,S 2.7K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0295	88-118-272-080		C-RES,S 2.7K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0295	88-118-272-080	OE	C-RES,S 2.7K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0295	88-118-272-080	OE	C-RES,S 2.7K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0296	88-121-473-080		RES,47K-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0296	88-121-473-080		RES,47K-1/8W J	EZSM	RX-SLM801
X	POWER AMP	R 0296	88-121-473-080	OE	RES,47K-1/8W J	KSM	RX-SLM800
X	POWER AMP	R 0296	88-121-473-080	OE	RES,47K-1/8W J	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER AMP	R 0297	88-118-472-080		C-RES,S 4.7K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0297	88-118-472-080		C-RES,S 4.7K-1/10W J	EZSM	RX-SLM801
X	POWER AMP	R 0297	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	KSM	RX-SLM800
X	POWER AMP	R 0297	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	EZSM	RX-SLM801
O	POWER AMP	TH 0201	87-A91-042-080		C-THMS,100K 55001	KSM	RX-SLM800
O	POWER AMP	TH 0201	87-A91-042-080		C-THMS,100K 55001	EZSM	RX-SLM801
O	POWER AMP	TH 0201	87-A91-042-080	OE	C-THMS,100K 55001	KSM	RX-SLM800
O	POWER AMP	TH 0201	87-A91-042-080	OE	C-THMS,100K 55001	EZSM	RX-SLM801
O	POWER AMP	TH 0202	87-A91-042-080		C-THMS,100K 55001	KSM	RX-SLM800
O	POWER AMP	TH 0202	87-A91-042-080		C-THMS,100K 55001	EZSM	RX-SLM801
O	POWER AMP	TH 0202	87-A91-042-080	OE	C-THMS,100K 55001	KSM	RX-SLM800
O	POWER AMP	TH 0202	87-A91-042-080	OE	C-THMS,100K 55001	EZSM	RX-SLM801
X	PRINTED MATTER		87-056-168-010		SH,CAUTION INF-WARR(EC)	KSM	RX-SLM800
X	PRINTED MATTER		87-056-168-010		SH,CAUTION INF-WARR(EC)	EZSM	RX-SLM801
X	PRINTED MATTER		87-056-168-010	OE	SH,CAUTION INF-WARR(EC)	KSM	RX-SLM800
X	PRINTED MATTER		87-056-168-010	OE	SH,CAUTION INF-WARR(EC)	EZSM	RX-SLM801
X	PRINTED MATTER		87-B40-086-010		BAG,PV 0.04-230-400 PL	KSM	RX-SLM800
X	PRINTED MATTER		87-B40-086-010		BAG,PV 0.04-230-400 PL	EZSM	RX-SLM801
X	PRINTED MATTER		87-B40-086-010	OE	BAG,PV 0.04-230-400 PL	KSM	RX-SLM800
X	PRINTED MATTER		87-B40-086-010	OE	BAG,PV 0.04-230-400 PL	EZSM	RX-SLM801
X	PRINTED MATTER		87-B50-066-010		LIST,FACILITY(B)-TOKYO	KSM	RX-SLM800
X	PRINTED MATTER		87-B50-066-010		LIST,FACILITY(B)-TOKYO	EZSM	RX-SLM801
X	PRINTED MATTER		87-B50-066-010	OE	LIST,FACILITY(B)-TOKYO	KSM	RX-SLM800
X	PRINTED MATTER		87-B50-066-010	OE	LIST,FACILITY(B)-TOKYO	EZSM	RX-SLM801
O	PRINTED MATTER		8A-CL2-905-010		IB,K(E)M	KSM	RX-SLM800
O	PRINTED MATTER		8A-CL2-905-010	--	IB,K(E)M	KSM	RX-SLM800
O	PRINTED MATTER		8A-CL2-906-010		IB,EZ(9L)M	EZSM	RX-SLM801
O	PRINTED MATTER		8A-CL2-906-010	--	IB,EZ(9L)M	EZSM	RX-SLM801
X	PT		8Z-CL1-668-010		WIRE,FASTON ASSY CL1	KSM	RX-SLM800
X	PT		8Z-CL1-668-010		WIRE,FASTON ASSY CL1	EZSM	RX-SLM801
X	PT		8Z-CL1-668-010	1A	WIRE,FASTON ASSY CL1	KSM	RX-SLM800
X	PT		8Z-CL1-668-010	1A	WIRE,FASTON ASSY CL1	EZSM	RX-SLM801
O	PT	C 0101	87-010-387-080		CAP,E 470-25 M SME	KSM	RX-SLM800
O	PT	C 0101	87-010-387-080		CAP,E 470-25 M SME	EZSM	RX-SLM801
O	PT	C 0101	87-010-387-080	1A	CAP,E 470-25 M SME	KSM	RX-SLM800
O	PT	C 0101	87-010-387-080	1A	CAP,E 470-25 M SME	EZSM	RX-SLM801
O	PT	C 0155	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	KSM	RX-SLM800
O	PT	C 0155	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	EZSM	RX-SLM801
O	PT	C 0155	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	KSM	RX-SLM800
O	PT	C 0155	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	EZSM	RX-SLM801
O	PT	C 0191	87-A10-479-080		CAP,CER 2200P-250 M E KH	KSM	RX-SLM800
O	PT	C 0191	87-A10-479-080		CAP,CER 2200P-250 M E KH	EZSM	RX-SLM801
!	O	C 0191	87-A10-479-080	OE	CAP,CER 2200P-250 M E KH	KSM	RX-SLM800
!	O	C 0191	87-A10-479-080	OE	CAP,CER 2200P-250 M E KH	EZSM	RX-SLM801
O	PT	C 0195	87-010-405-080		CAP,E 10-50 M 11L SME	KSM	RX-SLM800
O	PT	C 0195	87-010-405-080		CAP,E 10-50 M 11L SME	EZSM	RX-SLM801
O	PT	C 0195	87-010-405-080	OE	CAP,E 10-50 M 11L SME	KSM	RX-SLM800
O	PT	C 0195	87-010-405-080	OE	CAP,E 10-50 M 11L SME	EZSM	RX-SLM801
X	PT	CNA0105	8Z-CL1-658-010		CONN ASSY,3P 160MM PTPRI	KSM	RX-SLM800
X	PT	CNA0105	8Z-CL1-658-010		CONN ASSY,3P 160MM PTPRI	EZSM	RX-SLM801
X	PT	CNA0105	8Z-CL1-658-010	1B	CONN ASSY,3P 160MM PTPRI	KSM	RX-SLM800
X	PT	CNA0105	8Z-CL1-658-010	1B	CONN ASSY,3P 160MM PTPRI	EZSM	RX-SLM801
S	PT	D 0101	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	PT	D 0101	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	PT	D 0101	87-070-345-080	OE	DIODE,1N4148	KSM	RX-SLM800
S	PT	D 0101	87-070-345-080	OE	DIODE,1N4148	EZSM	RX-SLM801
S	PT	D 0102	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	PT	D 0102	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	PT	D 0102	87-070-345-080	OE	DIODE,1N4148	KSM	RX-SLM800
S	PT	D 0102	87-070-345-080	OE	DIODE,1N4148	EZSM	RX-SLM801
S	PT	D 0103	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	PT	D 0103	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	PT	D 0103	87-070-345-080	OE	DIODE,1N4148	KSM	RX-SLM800
S	PT	D 0103	87-070-345-080	OE	DIODE,1N4148	EZSM	RX-SLM801
S	PT	D 0104	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	PT	D 0104	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801
S	PT	D 0104	87-070-345-080	OE	DIODE,1N4148	KSM	RX-SLM800
S	PT	D 0104	87-070-345-080	OE	DIODE,1N4148	EZSM	RX-SLM801
S	PT	D 0105	87-070-345-080		DIODE,1N4148	KSM	RX-SLM800
S	PT	D 0105	87-070-345-080		DIODE,1N4148	EZSM	RX-SLM801

! = SAFETY PARTS
C = Components marked

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

-27-

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	O PT	WH 0101	87-A90-459-010		HLDR, WIRE 2.5-5P	KSM	RX-SLM800
	O PT	WH 0101	87-A90-459-010		HLDR, WIRE 2.5-5P	EZSM	RX-SLM801
!	O PT	WH 0101	87-A90-459-010	OE	HLDR, WIRE 2.5-5P	KSM	RX-SLM800
!	O PT	WH 0101	87-A90-459-010	OE	HLDR, WIRE 2.5-5P	EZSM	RX-SLM801
	O PT	WH 0103	87-A90-507-010		HLDR, WIRE 2.5-4P	KSM	RX-SLM800
	O PT	WH 0103	87-A90-507-010		HLDR, WIRE 2.5-4P	EZSM	RX-SLM801
	O PT	WH 0103	87-A90-507-010	OE	HLDR, WIRE 2.5-4P	KSM	RX-SLM800
	O PT	WH 0103	87-A90-507-010	OE	HLDR, WIRE 2.5-4P	EZSM	RX-SLM801
	O PT	WH 0111	87-A90-506-010		HLDR, WIRE 2.5-2P	KSM	RX-SLM800
	O PT	WH 0111	87-A90-506-010		HLDR, WIRE 2.5-2P	EZSM	RX-SLM801
!	O PT	WH 0111	87-A90-506-010	OE	HLDR, WIRE 2.5-2P	KSM	RX-SLM800
!	O PT	WH 0111	87-A90-506-010	OE	HLDR, WIRE 2.5-2P	EZSM	RX-SLM801
!	O PT	WH 0112	87-A90-506-010		HLDR, WIRE 2.5-2P	KSM	RX-SLM800
!	O PT	WH 0112	87-A90-506-010		HLDR, WIRE 2.5-2P	EZSM	RX-SLM801
	O SCREW		87-067-579-010		BVT2+3-8 W/O SLOT	KSM	RX-SLM800
	O SCREW		87-067-579-010		BVT2+3-8 W/O SLOT	EZSM	RX-SLM801
	O SCREW		87-067-579-010	OE	BVT2+3-8 W/O SLOT	KSM	RX-SLM800
	O SCREW		87-067-579-010	OE	BVT2+3-8 W/O SLOT	EZSM	RX-SLM801
	O SCREW		87-067-585-010		BVTT+4-6	KSM	RX-SLM800
	O SCREW		87-067-585-010		BVTT+4-6	EZSM	RX-SLM801
	O SCREW		87-067-585-010	OE	BVTT+4-6	KSM	RX-SLM800
	O SCREW		87-067-585-010	OE	BVTT+4-6	EZSM	RX-SLM801
	O SCREW		87-067-660-010	OE	BVT2+3-8 W/O SLOT BLK	KSM	RX-SLM800
	O SCREW		87-067-660-010	OE	BVT2+3-8 W/O SLOT BLK	EZSM	RX-SLM801
	O SCREW		87-067-703-010		BVT2+3-10 W/O SLOT	KSM	RX-SLM800
	O SCREW		87-067-703-010		BVT2+3-10 W/O SLOT	EZSM	RX-SLM801
	O SCREW		87-067-703-010	OE	BVT2+3-10 W/O SLOT	KSM	RX-SLM800
	O SCREW		87-067-703-010	OE	BVT2+3-10 W/O SLOT	EZSM	RX-SLM801
	O SCREW		87-591-095-410		QIT+3-8	KSM	RX-SLM800
	O SCREW		87-591-095-410		QIT+3-8	EZSM	RX-SLM801
	O SCREW		87-744-095-410	OE	UT2+3-8 W/O SLOT CR	KSM	RX-SLM800
	O SCREW		87-744-095-410	OE	UT2+3-8 W/O SLOT CR	EZSM	RX-SLM801
	O SCREW		87-751-096-410		VT2+3-10 W/O SLOT	KSM	RX-SLM800
	O SCREW		87-751-096-410		VT2+3-10 W/O SLOT	EZSM	RX-SLM801
	O SCREW		87-B10-068-010	OE	UTT2+3-6 W/O SLOT CR	KSM	RX-SLM800
	O SCREW		87-B10-068-010	OE	UTT2+3-6 W/O SLOT CR	EZSM	RX-SLM801
	O SCREW		87-B10-230-010	OE	BVT2+3-10 W/O SLOT SILVER CR	KSM	RX-SLM800
	O SCREW		87-B10-230-010	OE	BVT2+3-10 W/O SLOT SILVER CR	EZSM	RX-SLM801
	O SCREW		87-B10-324-010		BVT2+3-8 W/O SLOT CR	KSM	RX-SLM800
	O SCREW		87-B10-324-010		BVT2+3-8 W/O SLOT CR	EZSM	RX-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	APPEARANCE		8A-CU2-008-010		REFLECTOR, FR	YKSM	FD-SLM800
O	APPEARANCE		8A-CU2-008-010		REFLECTOR, FR	YEZSM	FD-SLM801
O	APPEARANCE		8A-CU2-008-010 --		REFLECTOR, FR	YKSM	FD-SLM800
O	APPEARANCE		8A-CU2-008-010 --		REFLECTOR, FR	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-001-010		CABI, FR (TA)	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-001-010		CABI, FR (TA)	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-001-010 --		CABI, FR (TA)	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-001-010 --		CABI, FR (TA)	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-002-010		CABI, REAR(TA) 800KSM	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-002-010 --		CABI, REAR(TA) 800KSM	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-003-010		CABI, TOP CD	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-003-010		CABI, TOP CD	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-003-010 --		CABI, TOP CD	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-003-010 --		CABI, TOP CD	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-004-010		CABI, BOTTOM (TA)	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-004-010		CABI, BOTTOM (TA)	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-004-010 --		CABI, BOTTOM (TA)	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-004-010 --		CABI, BOTTOM (TA)	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-005-010		PANEL, TRAY (TA)	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-005-010		PANEL, TRAY (TA)	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-005-010 --		PANEL, TRAY (TA)	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-005-010 --		PANEL, TRAY (TA)	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-006-010		PANEL, FR(TA) 800K	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-006-010 --		PANEL, FR(TA) 800K	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-007-010		PANEL, TRAY (TA) ML	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-007-010		PANEL, TRAY (TA) ML	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-007-010 1B		PANEL, TRAY (TA) ML	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-007-010 1B		PANEL, TRAY (TA) ML	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-008-010		WINDOW, CD	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-008-010		WINDOW, CD	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-008-010 --		WINDOW, CD	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-008-010 --		WINDOW, CD	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-009-010		WINDOW, RC	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-009-010		WINDOW, RC	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-009-010 --		WINDOW, RC	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-009-010 --		WINDOW, RC	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-012-010		LID, CD	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-012-010		LID, CD	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-012-010 --		LID, CD	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-012-010 --		LID, CD	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-013-010		HLDR, TRAY (TA)	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-013-010		HLDR, TRAY (TA)	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-013-010 --		HLDR, TRAY (TA)	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-013-010 --		HLDR, TRAY (TA)	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-014-010		COVER, WIRE	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-014-010		COVER, WIRE	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-014-010 --		COVER, WIRE	YKSM	FD-SLM800
O	APPEARANCE		8A-CV2-014-010 --		COVER, WIRE	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-016-010		PANEL, FR(TA) 801EZ	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-016-010 --		PANEL, FR(TA) 801EZ	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-017-010		CABI, REAR(TA) 801EZSM	YEZSM	FD-SLM801
O	APPEARANCE		8A-CV2-017-010 --		CABI, REAR(TA) 801EZSM	YEZSM	FD-SLM801
X	APPEARANCE		8A-CV2-018-010		SH, TOP COVER	YKSM	FD-SLM800
X	APPEARANCE		8A-CV2-018-010		SH, TOP COVER	YEZSM	FD-SLM801
X	APPEARANCE		8A-CV2-018-010 --		SH, TOP COVER	YKSM	FD-SLM800
X	APPEARANCE		8A-CV2-018-010 --		SH, TOP COVER	YEZSM	FD-SLM801
O	BBE	C 0601	87-010-491-040		CAP, E 0.22-50 M 5L SRE	YKSM	FD-SLM800
O	BBE	C 0601	87-010-491-040		CAP, E 0.22-50 M 5L SRE	YEZSM	FD-SLM801
O	BBE	C 0601	87-010-491-040	0E	CAP, E 0.22-50 M 5L SRE	YKSM	FD-SLM800
O	BBE	C 0601	87-010-491-040	0E	CAP, E 0.22-50 M 5L SRE	YEZSM	FD-SLM801
O	BBE	C 0602	87-010-491-040		CAP, E 0.22-50 M 5L SRE	YKSM	FD-SLM800
O	BBE	C 0602	87-010-491-040		CAP, E 0.22-50 M 5L SRE	YEZSM	FD-SLM801
O	BBE	C 0602	87-010-491-040	0E	CAP, E 0.22-50 M 5L SRE	YKSM	FD-SLM800
O	BBE	C 0602	87-010-491-040	0E	CAP, E 0.22-50 M 5L SRE	YEZSM	FD-SLM801
O	BBE	C 0603	87-010-497-040		CAP, E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O	BBE	C 0603	87-010-497-040		CAP, E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O	BBE	C 0603	87-010-497-040	0E	CAP, E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O	BBE	C 0603	87-010-497-040	0E	CAP, E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O	BBE	C 0604	87-010-497-040		CAP, E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O	BBE	C 0604	87-010-497-040		CAP, E 4.7-35 M 5L SRE	YEZSM	FD-SLM801

PARTS LIST

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O BBE		C 0604	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0604	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0605	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0605	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0605	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0605	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0606	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0606	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0606	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0606	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0607	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O BBE		C 0607	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O BBE		C 0607	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O BBE		C 0607	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O BBE		C 0608	87-010-213-080		C-CAP,S 0.015-25 K B GRM	YKSM	FD-SLM800
O BBE		C 0608	87-010-213-080		C-CAP,S 0.015-25 K B GRM	YEZSM	FD-SLM801
O BBE		C 0608	87-010-213-080	OE	C-CAP,S 0.015-25 K B GRM	YKSM	FD-SLM800
O BBE		C 0608	87-010-213-080	OE	C-CAP,S 0.015-25 K B GRM	YEZSM	FD-SLM801
O BBE		C 0609	87-010-213-080		C-CAP,S 0.015-25 K B GRM	YKSM	FD-SLM800
O BBE		C 0609	87-010-213-080		C-CAP,S 0.015-25 K B GRM	YEZSM	FD-SLM801
O BBE		C 0609	87-010-213-080	OE	C-CAP,S 0.015-25 K B GRM	YKSM	FD-SLM800
O BBE		C 0609	87-010-213-080	OE	C-CAP,S 0.015-25 K B GRM	YEZSM	FD-SLM801
O BBE		C 0610	87-012-140-080		C-CAP,S 470P-50 J CH	YKSM	FD-SLM800
O BBE		C 0610	87-012-140-080		C-CAP,S 470P-50 J CH	YEZSM	FD-SLM801
O BBE		C 0610	87-012-140-080	OE	C-CAP,S 470P-50 J CH	YKSM	FD-SLM800
O BBE		C 0610	87-012-140-080	OE	C-CAP,S 470P-50 J CH	YEZSM	FD-SLM801
O BBE		C 0611	87-012-140-080		C-CAP,S 470P-50 J CH	YKSM	FD-SLM800
O BBE		C 0611	87-012-140-080		C-CAP,S 470P-50 J CH	YEZSM	FD-SLM801
O BBE		C 0611	87-012-140-080	OE	C-CAP,S 470P-50 J CH	YKSM	FD-SLM800
O BBE		C 0611	87-012-140-080	OE	C-CAP,S 470P-50 J CH	YEZSM	FD-SLM801
O BBE		C 0612	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0612	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0612	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0612	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0613	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0613	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0613	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0613	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0614	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O BBE		C 0614	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O BBE		C 0614	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O BBE		C 0614	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O BBE		C 0615	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O BBE		C 0615	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O BBE		C 0615	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O BBE		C 0615	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O BBE		C 0616	87-010-993-080		C-CAP,S 0.056-25 K B MK212	YKSM	FD-SLM800
O BBE		C 0616	87-010-993-080		C-CAP,S 0.056-25 K B MK212	YEZSM	FD-SLM801
O BBE		C 0616	87-010-993-080	OE	C-CAP,S 0.056-25 K B MK212	YKSM	FD-SLM800
O BBE		C 0616	87-010-993-080	OE	C-CAP,S 0.056-25 K B MK212	YEZSM	FD-SLM801
O BBE		C 0617	87-010-993-080		C-CAP,S 0.056-25 K B MK212	YKSM	FD-SLM800
O BBE		C 0617	87-010-993-080		C-CAP,S 0.056-25 K B MK212	YEZSM	FD-SLM801
O BBE		C 0617	87-010-993-080	OE	C-CAP,S 0.056-25 K B MK212	YKSM	FD-SLM800
O BBE		C 0617	87-010-993-080	OE	C-CAP,S 0.056-25 K B MK212	YEZSM	FD-SLM801
O BBE		C 0618	87-010-553-040		CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0618	87-010-553-040		CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0618	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0618	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0619	87-010-553-040		CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0619	87-010-553-040		CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O BBE		C 0619	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O BBE		C 0619	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
S BBE		IC 0601	87-A21-022-040	1D	C-IC,BA3880FS	YKSM	FD-SLM800
S BBE		IC 0601	87-A21-022-040	1D	C-IC,BA3880FS	YEZSM	FD-SLM801
O S BBE		IC 0601	87-A21-022-040		C-IC,BA3880FS	YKSM	FD-SLM800
O S BBE		IC 0601	87-A21-022-040		C-IC,BA3880FS	YEZSM	FD-SLM801
X BBE		R 0601	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X BBE		R 0601	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X BBE		R 0601	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X BBE		R 0601	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	BBE	R 0602	88-118-474-080		C-RES,S 470K-1/10W J	YKSM	FD-SLM800
X	BBE	R 0602	88-118-474-080		C-RES,S 470K-1/10W J	YEZSM	FD-SLM801
X	BBE	R 0602	88-118-474-080	OE	C-RES,S 470K-1/10W J	YKSM	FD-SLM800
X	BBE	R 0602	88-118-474-080	OE	C-RES,S 470K-1/10W J	YEZSM	FD-SLM801
X	BBE	R 0603	88-121-101-080		RES,100-1/8W J	YKSM	FD-SLM800
X	BBE	R 0603	88-121-101-080		RES,100-1/8W J	YEZSM	FD-SLM801
X	BBE	R 0603	88-121-101-080	OE	RES,100-1/8W J	YKSM	FD-SLM800
X	BBE	R 0603	88-121-101-080	OE	RES,100-1/8W J	YEZSM	FD-SLM801
X	BBE	R 0604	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	BBE	R 0604	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	BBE	R 0604	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	BBE	R 0604	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
O	CD	C 0001	87-010-198-080		C-CAP,S 0.022-25 K B C2012	YKSM	FD-SLM800
O	CD	C 0001	87-010-198-080		C-CAP,S 0.022-25 K B C2012	YEZSM	FD-SLM801
O	CD	C 0001	87-010-198-080	OE	C-CAP,S 0.022-25 K B C2012	YKSM	FD-SLM800
O	CD	C 0001	87-010-198-080	OE	C-CAP,S 0.022-25 K B C2012	YEZSM	FD-SLM801
O	CD	C 0002	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O	CD	C 0002	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O	CD	C 0002	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O	CD	C 0002	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O	CD	C 0003	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	CD	C 0003	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	CD	C 0003	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	CD	C 0003	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	CD	C 0004	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	CD	C 0004	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	CD	C 0004	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	CD	C 0004	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	CD	C 0005	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	CD	C 0005	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	CD	C 0005	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	CD	C 0005	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	CD	C 0006	87-012-156-080		C-CAP,S 220P-50 J CH GRM	YKSM	FD-SLM800
O	CD	C 0006	87-012-156-080		C-CAP,S 220P-50 J CH GRM	YEZSM	FD-SLM801
O	CD	C 0006	87-012-156-080	OE	C-CAP,S 220P-50 J CH GRM	YKSM	FD-SLM800
O	CD	C 0006	87-012-156-080	OE	C-CAP,S 220P-50 J CH GRM	YEZSM	FD-SLM801
O	CD	C 0007	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O	CD	C 0007	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O	CD	C 0008	87-010-369-080		C-CAP,S 0.033-25 K B	YKSM	FD-SLM800
O	CD	C 0008	87-010-369-080		C-CAP,S 0.033-25 K B	YEZSM	FD-SLM801
O	CD	C 0008	87-010-369-080	OE	C-CAP,S 0.033-25 K B	YKSM	FD-SLM800
O	CD	C 0008	87-010-369-080	OE	C-CAP,S 0.033-25 K B	YEZSM	FD-SLM801
O	CD	C 0009	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	CD	C 0009	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	CD	C 0009	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	CD	C 0009	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	CD	C 0011	87-010-981-040		CAP,E 22-35 M 5L SRE	YKSM	FD-SLM800
O	CD	C 0011	87-010-981-040		CAP,E 22-35 M 5L SRE	YEZSM	FD-SLM801
O	CD	C 0011	87-010-981-040	OE	CAP,E 22-35 M 5L SRE	YKSM	FD-SLM800
O	CD	C 0011	87-010-981-040	OE	CAP,E 22-35 M 5L SRE	YEZSM	FD-SLM801
O	CD	C 0012	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	CD	C 0012	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	CD	C 0012	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	CD	C 0012	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	CD	C 0013	87-010-193-080		C-CAP,S 0.033-25 Z F C2012	YKSM	FD-SLM800
O	CD	C 0013	87-010-193-080		C-CAP,S 0.033-25 Z F C2012	YEZSM	FD-SLM801
O	CD	C 0013	87-010-193-080	OE	C-CAP,S 0.033-25 Z F C2012	YKSM	FD-SLM800
O	CD	C 0013	87-010-193-080	OE	C-CAP,S 0.033-25 Z F C2012	YEZSM	FD-SLM801
O	CD	C 0014	87-010-369-080		C-CAP,S 0.033-25 K B	YKSM	FD-SLM800
O	CD	C 0014	87-010-369-080		C-CAP,S 0.033-25 K B	YEZSM	FD-SLM801
O	CD	C 0014	87-010-369-080	OE	C-CAP,S 0.033-25 K B	YKSM	FD-SLM800
O	CD	C 0014	87-010-369-080	OE	C-CAP,S 0.033-25 K B	YEZSM	FD-SLM801
O	CD	C 0015	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	CD	C 0015	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	CD	C 0015	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	CD	C 0015	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	CD	C 0016	87-010-369-080		C-CAP,S 0.033-25 K B	YKSM	FD-SLM800
O	CD	C 0016	87-010-369-080		C-CAP,S 0.033-25 K B	YEZSM	FD-SLM801
O	CD	C 0016	87-010-369-080	OE	C-CAP,S 0.033-25 K B	YKSM	FD-SLM800
O	CD	C 0016	87-010-369-080	OE	C-CAP,S 0.033-25 K B	YEZSM	FD-SLM801

PARTS LIST

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O CD		C 0018	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O CD		C 0018	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0018	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O CD		C 0018	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0019	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O CD		C 0019	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O CD		C 0019	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O CD		C 0019	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O CD		C 0020	87-010-146-080		C-CAP,S 2P-50 C CH GRM	YKSM	FD-SLM800
O CD		C 0020	87-010-146-080		C-CAP,S 2P-50 C CH GRM	YEZSM	FD-SLM801
O CD		C 0020	87-010-146-080	OE	C-CAP,S 2P-50 C CH GRM	YKSM	FD-SLM800
O CD		C 0020	87-010-146-080	OE	C-CAP,S 2P-50 C CH GRM	YEZSM	FD-SLM801
O CD		C 0021	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O CD		C 0021	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O CD		C 0021	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O CD		C 0021	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O CD		C 0022	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O CD		C 0022	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O CD		C 0022	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O CD		C 0022	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O CD		C 0023	87-010-194-080		C-CAP,S 0.047-25 Z F	YKSM	FD-SLM800
O CD		C 0023	87-010-194-080		C-CAP,S 0.047-25 Z F	YEZSM	FD-SLM801
O CD		C 0023	87-010-194-080	OE	C-CAP,S 0.047-25 Z F	YKSM	FD-SLM800
O CD		C 0023	87-010-194-080	OE	C-CAP,S 0.047-25 Z F	YEZSM	FD-SLM801
O CD		C 0024	87-010-194-080		C-CAP,S 0.047-25 Z F	YKSM	FD-SLM800
O CD		C 0024	87-010-194-080		C-CAP,S 0.047-25 Z F	YEZSM	FD-SLM801
O CD		C 0024	87-010-194-080	OE	C-CAP,S 0.047-25 Z F	YKSM	FD-SLM800
O CD		C 0024	87-010-194-080	OE	C-CAP,S 0.047-25 Z F	YEZSM	FD-SLM801
O CD		C 0027	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0027	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0027	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0027	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0028	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0028	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0028	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0028	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0029	87-010-264-040		CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0029	87-010-264-040		CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0029	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0029	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0030	87-010-264-040		CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0030	87-010-264-040		CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0030	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0030	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0031	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0031	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0031	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0031	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0032	87-010-264-040		CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0032	87-010-264-040		CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0032	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0032	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0040	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0040	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0040	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0040	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0041	87-010-264-040		CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0041	87-010-264-040		CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0041	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0041	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0042	87-010-264-040		CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0042	87-010-264-040		CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0042	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0042	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0043	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O CD		C 0043	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O CD		C 0043	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O CD		C 0043	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O CD		C 0045	87-010-993-080		C-CAP,S 0.056-25 K B MK212	YKSM	FD-SLM800
O CD		C 0045	87-010-993-080		C-CAP,S 0.056-25 K B MK212	YEZSM	FD-SLM801

PARTS LIST

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O CD		C 0045	87-010-993-080	OE	C-CAP,S 0.056-25 K B MK212	YKSM	FD-SLM800
O CD		C 0045	87-010-993-080	OE	C-CAP,S 0.056-25 K B MK212	YEZSM	FD-SLM801
O CD		C 0060	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0060	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0060	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0060	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0061	87-A11-591-080		C-CAP,S 0.047-25 K B	YKSM	FD-SLM800
O CD		C 0061	87-A11-591-080		C-CAP,S 0.047-25 K B	YEZSM	FD-SLM801
O CD		C 0061	87-A11-591-080	OE	C-CAP,S 0.047-25 K B	YKSM	FD-SLM800
O CD		C 0061	87-A11-591-080	OE	C-CAP,S 0.047-25 K B	YEZSM	FD-SLM801
O CD		C 0062	87-010-188-080		C-CAP,S 6800P-50 K B C2012	YKSM	FD-SLM800
O CD		C 0062	87-010-188-080		C-CAP,S 6800P-50 K B C2012	YEZSM	FD-SLM801
O CD		C 0062	87-010-188-080	OE	C-CAP,S 6800P-50 K B C2012	YKSM	FD-SLM800
O CD		C 0062	87-010-188-080	OE	C-CAP,S 6800P-50 K B C2012	YEZSM	FD-SLM801
O CD		C 0063	87-012-156-080		C-CAP,S 220P-50 J CH GRM	YKSM	FD-SLM800
O CD		C 0063	87-012-156-080		C-CAP,S 220P-50 J CH GRM	YEZSM	FD-SLM801
O CD		C 0063	87-012-156-080	OE	C-CAP,S 220P-50 J CH GRM	YKSM	FD-SLM800
O CD		C 0063	87-012-156-080	OE	C-CAP,S 220P-50 J CH GRM	YEZSM	FD-SLM801
O CD		C 0064	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0064	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0064	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0064	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0065	87-010-186-080		C-CAP,S 4700P-50 K B C2012	YKSM	FD-SLM800
O CD		C 0065	87-010-186-080		C-CAP,S 4700P-50 K B C2012	YEZSM	FD-SLM801
O CD		C 0065	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	YKSM	FD-SLM800
O CD		C 0065	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	YEZSM	FD-SLM801
O CD		C 0066	87-016-526-080		C-CAP,S 0.47-16 BK	YKSM	FD-SLM800
O CD		C 0066	87-016-526-080		C-CAP,S 0.47-16 BK	YEZSM	FD-SLM801
O CD		C 0066	87-016-526-080	OE	C-CAP,S 0.47-16 BK	YKSM	FD-SLM800
O CD		C 0066	87-016-526-080	OE	C-CAP,S 0.47-16 BK	YEZSM	FD-SLM801
O CD		C 0069	87-010-805-080		C-CAP,S 1-16 Z F	YKSM	FD-SLM800
O CD		C 0069	87-010-805-080		C-CAP,S 1-16 Z F	YEZSM	FD-SLM801
O CD		C 0069	87-010-805-080	OE	C-CAP,S 1-16 Z F	YKSM	FD-SLM800
O CD		C 0069	87-010-805-080	OE	C-CAP,S 1-16 Z F	YEZSM	FD-SLM801
O CD		C 0070	87-A10-505-040		CAP,E 220-6.3 105 SF	YKSM	FD-SLM800
O CD		C 0070	87-A10-505-040		CAP,E 220-6.3 105 SF	YEZSM	FD-SLM801
O CD		C 0070	87-A10-505-040	OE	CAP,E 220-6.3 105 SF	YKSM	FD-SLM800
O CD		C 0070	87-A10-505-040	OE	CAP,E 220-6.3 105 SF	YEZSM	FD-SLM801
O CD		C 0072	87-A10-759-040		CAP,E 330-6.3 SRM	YKSM	FD-SLM800
O CD		C 0072	87-A10-759-040		CAP,E 330-6.3 SRM	YEZSM	FD-SLM801
O CD		C 0072	87-A10-759-040	OE	CAP,E 330-6.3 SRM	YKSM	FD-SLM800
O CD		C 0072	87-A10-759-040	OE	CAP,E 330-6.3 SRM	YEZSM	FD-SLM801
O CD		C 0073	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0073	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0073	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0073	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0075	87-010-176-080		C-CAP,S 680P-50 J SL	YKSM	FD-SLM800
O CD		C 0075	87-010-176-080		C-CAP,S 680P-50 J SL	YEZSM	FD-SLM801
O CD		C 0075	87-010-176-080	OE	C-CAP,S 680P-50 J SL	YKSM	FD-SLM800
O CD		C 0075	87-010-176-080	OE	C-CAP,S 680P-50 J SL	YEZSM	FD-SLM801
O CD		C 0076	87-010-176-080		C-CAP,S 680P-50 J SL	YKSM	FD-SLM800
O CD		C 0076	87-010-176-080		C-CAP,S 680P-50 J SL	YEZSM	FD-SLM801
O CD		C 0076	87-010-176-080	OE	C-CAP,S 680P-50 J SL	YKSM	FD-SLM800
O CD		C 0076	87-010-176-080	OE	C-CAP,S 680P-50 J SL	YEZSM	FD-SLM801
O CD		C 0077	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O CD		C 0077	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O CD		C 0077	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O CD		C 0077	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O CD		C 0078	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O CD		C 0078	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O CD		C 0078	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O CD		C 0078	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O CD		C 0079	87-010-075-040		CAP,E 10-16 M 5L SRE	YKSM	FD-SLM800
O CD		C 0079	87-010-075-040		CAP,E 10-16 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0079	87-010-075-040	OE	CAP,E 10-16 M 5L SRE	YKSM	FD-SLM800
O CD		C 0079	87-010-075-040	OE	CAP,E 10-16 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0080	87-010-075-040		CAP,E 10-16 M 5L SRE	YKSM	FD-SLM800
O CD		C 0080	87-010-075-040		CAP,E 10-16 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0080	87-010-075-040	OE	CAP,E 10-16 M 5L SRE	YKSM	FD-SLM800
O CD		C 0080	87-010-075-040	OE	CAP,E 10-16 M 5L SRE	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O CD		C 0081	87-010-181-080		C-CAP,S 1800P-50 K B GRM	YKSM	FD-SLM800
O CD		C 0081	87-010-181-080		C-CAP,S 1800P-50 K B GRM	YEZSM	FD-SLM801
O CD		C 0081	87-010-181-080	OE	C-CAP,S 1800P-50 K B GRM	YKSM	FD-SLM800
O CD		C 0081	87-010-181-080	OE	C-CAP,S 1800P-50 K B GRM	YEZSM	FD-SLM801
O CD		C 0082	87-010-181-080		C-CAP,S 1800P-50 K B GRM	YKSM	FD-SLM800
O CD		C 0082	87-010-181-080		C-CAP,S 1800P-50 K B GRM	YEZSM	FD-SLM801
O CD		C 0082	87-010-181-080	OE	C-CAP,S 1800P-50 K B GRM	YKSM	FD-SLM800
O CD		C 0082	87-010-181-080	OE	C-CAP,S 1800P-50 K B GRM	YEZSM	FD-SLM801
O CD		C 0083	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O CD		C 0083	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O CD		C 0083	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O CD		C 0083	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O CD		C 0084	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O CD		C 0084	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O CD		C 0084	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O CD		C 0084	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O CD		C 0085	87-010-805-080		C-CAP,S 1-16 Z F	YKSM	FD-SLM800
O CD		C 0085	87-010-805-080		C-CAP,S 1-16 Z F	YEZSM	FD-SLM801
O CD		C 0085	87-010-805-080	OE	C-CAP,S 1-16 Z F	YKSM	FD-SLM800
O CD		C 0085	87-010-805-080	OE	C-CAP,S 1-16 Z F	YEZSM	FD-SLM801
O CD		C 0101	87-010-186-080		C-CAP,S 4700P-50 K B C2012	YKSM	FD-SLM800
O CD		C 0101	87-010-186-080		C-CAP,S 4700P-50 K B C2012	YEZSM	FD-SLM801
O CD		C 0101	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	YKSM	FD-SLM800
O CD		C 0101	87-010-186-080	OE	C-CAP,S 4700P-50 K B C2012	YEZSM	FD-SLM801
O CD		C 0102	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0102	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0102	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0102	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0103	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0103	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0103	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O CD		C 0103	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O CD		C 0112	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0112	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0112	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0112	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0113	87-010-236-080		CAP,E 1000-10 M SME	YKSM	FD-SLM800
O CD		C 0113	87-010-236-080		CAP,E 1000-10 M SME	YEZSM	FD-SLM801
O CD		C 0113	87-010-236-080	OE	CAP,E 1000-10 M SME	YKSM	FD-SLM800
O CD		C 0113	87-010-236-080	OE	CAP,E 1000-10 M SME	YEZSM	FD-SLM801
O CD		C 0114	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0114	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0114	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0114	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0115	87-010-221-080		CAP,E 470-10 M SME	YKSM	FD-SLM800
O CD		C 0115	87-010-221-080		CAP,E 470-10 M SME	YEZSM	FD-SLM801
O CD		C 0115	87-010-221-080	OE	CAP,E 470-10 M SME	YKSM	FD-SLM800
O CD		C 0115	87-010-221-080	OE	CAP,E 470-10 M SME	YEZSM	FD-SLM801
O CD		C 0120	87-010-264-040		CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0120	87-010-264-040		CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0120	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O CD		C 0120	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0121	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0121	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0121	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0121	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0141	87-010-553-040		CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O CD		C 0141	87-010-553-040		CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0141	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O CD		C 0141	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0142	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0142	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0142	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O CD		C 0142	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O CD		C 0143	87-010-552-040		CAP,E 22-16 M 5L SRE	YKSM	FD-SLM800
O CD		C 0143	87-010-552-040		CAP,E 22-16 M 5L SRE	YEZSM	FD-SLM801
O CD		C 0143	87-010-552-040	OE	CAP,E 22-16 M 5L SRE	YKSM	FD-SLM800
O CD		C 0143	87-010-552-040	OE	CAP,E 22-16 M 5L SRE	YEZSM	FD-SLM801
O CD		CN 0001	87-A60-429-010		CONN,16P H TOC-A	YKSM	FD-SLM800
O CD		CN 0001	87-A60-429-010		CONN,16P H TOC-A	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.


Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	CD	CN 0001	87-A60-429-010	0E	CONN,16P H TOC-A	YKSM	FD-SLM800
O	CD	CN 0001	87-A60-429-010	0E	CONN,16P H TOC-A	YEZSM	FD-SLM801
O	CD	CN 0002	87-009-411-010		CONN,6P V B6B-ZR	YKSM	FD-SLM800
O	CD	CN 0002	87-009-411-010		CONN,6P V B6B-ZR	YEZSM	FD-SLM801
O	CD	CN 0002	87-009-411-010	0E	CONN,6P V B6B-ZR	YKSM	FD-SLM800
O	CD	CN 0002	87-009-411-010	0E	CONN,6P V B6B-ZR	YEZSM	FD-SLM801
S	CD	D 0040	87-020-465-080		DIODE,1SS133	YKSM	FD-SLM800
S	CD	D 0040	87-020-465-080		DIODE,1SS133	YEZSM	FD-SLM801
S	CD	D 0040	87-020-465-080	0E	DIODE,1SS133	YKSM	FD-SLM800
S	CD	D 0040	87-020-465-080	0E	DIODE,1SS133	YEZSM	FD-SLM801
S	CD	IC 0001	87-A20-547-010	1E	C-IC,CXA1992AR	YKSM	FD-SLM800
S	CD	IC 0001	87-A20-547-010	1E	C-IC,CXA1992AR	YEZSM	FD-SLM801
O	S CD	IC 0001	87-A20-547-010		C-IC,CXA1992AR	YKSM	FD-SLM800
O	S CD	IC 0001	87-A20-547-010		C-IC,CXA1992AR	YEZSM	FD-SLM801
S	CD	IC 0040	87-017-917-080	1A	C-IC,BU4066BCF	YKSM	FD-SLM800
S	CD	IC 0040	87-017-917-080	1A	C-IC,BU4066BCF	YEZSM	FD-SLM801
O	S CD	IC 0040	87-017-917-080		C-IC,BU4066BCF	YKSM	FD-SLM800
O	S CD	IC 0040	87-017-917-080		C-IC,BU4066BCF	YEZSM	FD-SLM801
S	CD	IC 0060	87-A20-546-010	2A	C-IC,CXD2589Q	YKSM	FD-SLM800
S	CD	IC 0060	87-A20-546-010	2A	C-IC,CXD2589Q	YEZSM	FD-SLM801
O	S CD	IC 0060	87-A20-546-010		C-IC,CXD2589Q	YKSM	FD-SLM800
O	S CD	IC 0060	87-A20-546-010		C-IC,CXD2589Q	YEZSM	FD-SLM801
S	CD	IC 0061	87-A20-611-080		IC,M51943BSL-700A	YKSM	FD-SLM800
S	CD	IC 0061	87-A20-611-080		IC,M51943BSL-700A	YEZSM	FD-SLM801
S	CD	IC 0061	87-A20-611-080	0E	IC,M51943BSL-700A	YKSM	FD-SLM800
S	CD	IC 0061	87-A20-611-080	0E	IC,M51943BSL-700A	YEZSM	FD-SLM801
S	CD	IC 0101	87-001-792-080	1B	C-IC,NJM2100M	YKSM	FD-SLM800
S	CD	IC 0101	87-001-792-080	1B	C-IC,NJM2100M	YEZSM	FD-SLM801
O	S CD	IC 0101	87-001-792-080		C-IC,NJM2100M	YKSM	FD-SLM800
O	S CD	IC 0101	87-001-792-080		C-IC,NJM2100M	YEZSM	FD-SLM801
S	CD	IC 0110	87-A20-445-010		IC,BA5936S	YKSM	FD-SLM800
S	CD	IC 0110	87-A20-445-010		IC,BA5936S	YEZSM	FD-SLM801
S	CD	IC 0110	87-A20-445-010	1F	IC,BA5936S	YKSM	FD-SLM800
S	CD	IC 0110	87-A20-445-010	1F	IC,BA5936S	YEZSM	FD-SLM801
X	CD	JR 0001	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	CD	JR 0001	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	CD	JR 0001	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	CD	JR 0001	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	CD	JR 0003	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	CD	JR 0003	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	CD	JR 0003	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	CD	JR 0003	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	CD	JR 0004	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	CD	JR 0004	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	CD	JR 0004	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	CD	JR 0004	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	CD	JR 0005	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	CD	JR 0005	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	CD	JR 0005	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	CD	JR 0005	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	CD	JR 0040	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	CD	JR 0040	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	CD	JR 0040	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	CD	JR 0040	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	CD	JR 0041	88-118-392-080		C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	CD	JR 0041	88-118-392-080		C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	CD	JR 0041	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	CD	JR 0041	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	CD	JR 0044	88-118-392-080		C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	CD	JR 0044	88-118-392-080		C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	CD	JR 0044	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	CD	JR 0044	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	CD	JR 0047	88-118-123-080		C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X	CD	JR 0047	88-118-123-080		C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X	CD	JR 0047	88-118-123-080	0E	C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X	CD	JR 0047	88-118-123-080	0E	C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X	CD	JR 0049	88-118-123-080		C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X	CD	JR 0049	88-118-123-080		C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X	CD	JR 0049	88-118-123-080	0E	C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X	CD	JR 0049	88-118-123-080	0E	C-RES,S 12K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X CD		JR 0061	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X CD		JR 0061	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X CD		JR 0061	88-118-000-080	OE	C-JUMPER, S	YKSM	FD-SLM800
X CD		JR 0061	88-118-000-080	OE	C-JUMPER, S	YEZSM	FD-SLM801
X CD		JR 0085	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X CD		JR 0085	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X CD		JR 0085	88-118-000-080	OE	C-JUMPER, S	YKSM	FD-SLM800
X CD		JR 0085	88-118-000-080	OE	C-JUMPER, S	YEZSM	FD-SLM801
O CD		L 0040	87-003-102-080		COIL, 10UH J LAL02	YKSM	FD-SLM800
O CD		L 0040	87-003-102-080		COIL, 10UH J LAL02	YEZSM	FD-SLM801
O CD		L 0040	87-003-102-080	OE	COIL, 10UH J LAL02	YKSM	FD-SLM800
O CD		L 0040	87-003-102-080	OE	COIL, 10UH J LAL02	YEZSM	FD-SLM801
O CD		L 0060	87-003-102-080		COIL, 10UH J LAL02	YKSM	FD-SLM800
O CD		L 0060	87-003-102-080		COIL, 10UH J LAL02	YEZSM	FD-SLM801
O CD		L 0060	87-003-102-080	OE	COIL, 10UH J LAL02	YKSM	FD-SLM800
O CD		L 0060	87-003-102-080	OE	COIL, 10UH J LAL02	YEZSM	FD-SLM801
O CD		L 0203	87-A50-190-080		C-COIL, S BLM21A102S	YKSM	FD-SLM800
O CD		L 0203	87-A50-190-080		C-COIL, S BLM21A102S	YEZSM	FD-SLM801
O CD		L 0203	87-A50-190-080	OE	C-COIL, S BLM21A102S	YKSM	FD-SLM800
O CD		L 0203	87-A50-190-080	OE	C-COIL, S BLM21A102S	YEZSM	FD-SLM801
O CD		L 0204	87-A50-190-080		C-COIL, S BLM21A102S	YKSM	FD-SLM800
O CD		L 0204	87-A50-190-080		C-COIL, S BLM21A102S	YEZSM	FD-SLM801
O CD		L 0204	87-A50-190-080	OE	C-COIL, S BLM21A102S	YKSM	FD-SLM800
O CD		L 0204	87-A50-190-080	OE	C-COIL, S BLM21A102S	YEZSM	FD-SLM801
S CD		Q 0001	87-A30-073-080		C-TR, RT1N 141C	YKSM	FD-SLM800
S CD		Q 0001	87-A30-073-080		C-TR, RT1N 141C	YEZSM	FD-SLM801
S CD		Q 0001	87-A30-073-080	OE	C-TR, RT1N 141C	YKSM	FD-SLM800
S CD		Q 0001	87-A30-073-080	OE	C-TR, RT1N 141C	YEZSM	FD-SLM801
S CD		Q 0040	89-110-155-080		TR, 2SA1015GR	YKSM	FD-SLM800
S CD		Q 0040	89-110-155-080		TR, 2SA1015GR	YEZSM	FD-SLM801
S CD		Q 0040	89-110-155-080	OE	TR, 2SA1015GR	YKSM	FD-SLM800
S CD		Q 0040	89-110-155-080	OE	TR, 2SA1015GR	YEZSM	FD-SLM801
S CD		Q 0040	89-110-155-080	OE	TR, 2SA19790/Y	YKSM	FD-SLM800
S CD		Q 0040	89-110-155-080	OE	TR, 2SA19790/Y	YEZSM	FD-SLM801
S CD		Q 0110	87-A30-515-080		TR, 2SA1318T	YKSM	FD-SLM800
S CD		Q 0110	87-A30-515-080		TR, 2SA1318T	YEZSM	FD-SLM801
S CD		Q 0141	87-A30-047-080		TR, CSD655E	YKSM	FD-SLM800
S CD		Q 0141	87-A30-047-080		TR, CSD655E	YEZSM	FD-SLM801
S CD		Q 0141	87-A30-047-080	OE	TR, CSD655E	YKSM	FD-SLM800
S CD		Q 0141	87-A30-047-080	OE	TR, CSD655E	YEZSM	FD-SLM801
S CD		Q 0142	87-A30-047-080		TR, CSD655E	YKSM	FD-SLM800
S CD		Q 0142	87-A30-047-080		TR, CSD655E	YEZSM	FD-SLM801
S CD		Q 0142	87-A30-047-080	OE	TR, CSD655E	YKSM	FD-SLM800
S CD		Q 0142	87-A30-047-080	OE	TR, CSD655E	YEZSM	FD-SLM801
S CD		Q 0143	87-A30-047-080		TR, CSD655E	YKSM	FD-SLM800
S CD		Q 0143	87-A30-047-080		TR, CSD655E	YEZSM	FD-SLM801
S CD		Q 0143	87-A30-047-080	OE	TR, CSD655E	YKSM	FD-SLM800
S CD		Q 0143	87-A30-047-080	OE	TR, CSD655E	YEZSM	FD-SLM801
S CD		Q 0144	87-A30-047-080		TR, CSD655E	YKSM	FD-SLM800
S CD		Q 0144	87-A30-047-080		TR, CSD655E	YEZSM	FD-SLM801
S CD		Q 0144	87-A30-047-080	OE	TR, CSD655E	YKSM	FD-SLM800
S CD		Q 0144	87-A30-047-080	OE	TR, CSD655E	YEZSM	FD-SLM801
X CD		R 0001	88-118-123-080		C-RES, S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0001	88-118-123-080		C-RES, S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0001	88-118-123-080	OE	C-RES, S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0001	88-118-123-080	OE	C-RES, S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0002	88-118-472-080		C-RES, S 4.7K-1/10W J	YKSM	FD-SLM800
X CD		R 0002	88-118-472-080		C-RES, S 4.7K-1/10W J	YEZSM	FD-SLM801
X CD		R 0002	88-118-472-080	OE	C-RES, S 4.7K-1/10W J	YKSM	FD-SLM800
X CD		R 0002	88-118-472-080	OE	C-RES, S 4.7K-1/10W J	YEZSM	FD-SLM801
X CD		R 0004	88-118-684-080		C-RES, S 680K-1/10W J	YKSM	FD-SLM800
X CD		R 0004	88-118-684-080		C-RES, S 680K-1/10W J	YEZSM	FD-SLM801
X CD		R 0004	88-118-684-080	OE	C-RES, S 680K-1/10W J	YKSM	FD-SLM800
X CD		R 0004	88-118-684-080	OE	C-RES, S 680K-1/10W J	YEZSM	FD-SLM801
X CD		R 0005	88-118-333-080		C-RES, S 33K-1/10W J	YKSM	FD-SLM800
X CD		R 0005	88-118-333-080		C-RES, S 33K-1/10W J	YEZSM	FD-SLM801
X CD		R 0005	88-118-333-080	OE	C-RES, S 33K-1/10W J	YKSM	FD-SLM800
X CD		R 0005	88-118-333-080	OE	C-RES, S 33K-1/10W J	YEZSM	FD-SLM801
X CD		R 0006	88-118-564-080		C-RES, S 560K-1/10W J	YKSM	FD-SLM800
X CD		R 0006	88-118-564-080		C-RES, S 560K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X CD		R 0006	88-118-564-080	OE	C-RES,S 560K-1/10W J	YKSM	FD-SLM800
X CD		R 0006	88-118-564-080	OE	C-RES,S 560K-1/10W J	YEZSM	FD-SLM801
X CD		R 0008	88-118-224-080		C-RES,S 220K-1/10W J	YKSM	FD-SLM800
X CD		R 0008	88-118-224-080		C-RES,S 220K-1/10W J	YEZSM	FD-SLM801
X CD		R 0008	88-118-224-080	OE	C-RES,S 220K-1/10W J	YKSM	FD-SLM800
X CD		R 0008	88-118-224-080	OE	C-RES,S 220K-1/10W J	YEZSM	FD-SLM801
X CD		R 0009	88-118-124-080		C-RES,S 120K-1/10W J	YKSM	FD-SLM800
X CD		R 0009	88-118-124-080		C-RES,S 120K-1/10W J	YEZSM	FD-SLM801
X CD		R 0009	88-118-124-080	OE	C-RES,S 120K-1/10W J	YKSM	FD-SLM800
X CD		R 0009	88-118-124-080	OE	C-RES,S 120K-1/10W J	YEZSM	FD-SLM801
X CD		R 0010	88-118-333-080		C-RES,S 33K-1/10W J	YKSM	FD-SLM800
X CD		R 0010	88-118-333-080		C-RES,S 33K-1/10W J	YEZSM	FD-SLM801
X CD		R 0010	88-118-333-080	OE	C-RES,S 33K-1/10W J	YKSM	FD-SLM800
X CD		R 0010	88-118-333-080	OE	C-RES,S 33K-1/10W J	YEZSM	FD-SLM801
X CD		R 0011	88-118-153-080		C-RES,S 15K-1/10W J	YKSM	FD-SLM800
X CD		R 0011	88-118-153-080		C-RES,S 15K-1/10W J	YEZSM	FD-SLM801
X CD		R 0011	88-118-153-080	OE	C-RES,S 15K-1/10W J	YKSM	FD-SLM800
X CD		R 0011	88-118-153-080	OE	C-RES,S 15K-1/10W J	YEZSM	FD-SLM801
X CD		R 0012	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X CD		R 0012	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X CD		R 0012	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X CD		R 0012	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X CD		R 0013	88-118-124-080		C-RES,S 120K-1/10W J	YKSM	FD-SLM800
X CD		R 0013	88-118-124-080		C-RES,S 120K-1/10W J	YEZSM	FD-SLM801
X CD		R 0013	88-118-124-080	OE	C-RES,S 120K-1/10W J	YKSM	FD-SLM800
X CD		R 0013	88-118-124-080	OE	C-RES,S 120K-1/10W J	YEZSM	FD-SLM801
X CD		R 0014	88-118-563-080		C-RES,S 56K-1/10W J	YKSM	FD-SLM800
X CD		R 0014	88-118-563-080		C-RES,S 56K-1/10W J	YEZSM	FD-SLM801
X CD		R 0014	88-118-563-080	OE	C-RES,S 56K-1/10W J	YKSM	FD-SLM800
X CD		R 0014	88-118-563-080	OE	C-RES,S 56K-1/10W J	YEZSM	FD-SLM801
X CD		R 0015	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0015	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0015	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0015	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0016	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0016	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0016	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0016	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0017	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0017	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0017	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0017	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0018	88-118-333-080		C-RES,S 33K-1/10W J	YKSM	FD-SLM800
X CD		R 0018	88-118-333-080		C-RES,S 33K-1/10W J	YEZSM	FD-SLM801
X CD		R 0018	88-118-333-080	OE	C-RES,S 33K-1/10W J	YKSM	FD-SLM800
X CD		R 0018	88-118-333-080	OE	C-RES,S 33K-1/10W J	YEZSM	FD-SLM801
X CD		R 0019	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X CD		R 0019	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X CD		R 0019	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X CD		R 0019	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X CD		R 0020	88-118-105-080		C-RES,S 1M-1/10W J	YKSM	FD-SLM800
X CD		R 0020	88-118-105-080		C-RES,S 1M-1/10W J	YEZSM	FD-SLM801
X CD		R 0020	88-118-105-080	OE	C-RES,S 1M-1/10W J	YKSM	FD-SLM800
X CD		R 0020	88-118-105-080	OE	C-RES,S 1M-1/10W J	YEZSM	FD-SLM801
X CD		R 0021	88-118-152-080		C-RES,S 1.5K-1/10W J	YKSM	FD-SLM800
X CD		R 0021	88-118-152-080		C-RES,S 1.5K-1/10W J	YEZSM	FD-SLM801
X CD		R 0021	88-118-152-080	OE	C-RES,S 1.5K-1/10W J	YKSM	FD-SLM800
X CD		R 0021	88-118-152-080	OE	C-RES,S 1.5K-1/10W J	YEZSM	FD-SLM801
X CD		R 0022	88-118-154-080		C-RES,S 150K-1/10W J	YKSM	FD-SLM800
X CD		R 0022	88-118-154-080		C-RES,S 150K-1/10W J	YEZSM	FD-SLM801
X CD		R 0022	88-118-154-080	OE	C-RES,S 150K-1/10W J	YKSM	FD-SLM800
X CD		R 0022	88-118-154-080	OE	C-RES,S 150K-1/10W J	YEZSM	FD-SLM801
X CD		R 0023	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X CD		R 0023	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X CD		R 0023	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X CD		R 0023	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X CD		R 0025	88-118-334-080	OE	C-RES,S 330K-1/10W J	YKSM	FD-SLM800
X CD		R 0025	88-118-334-080	OE	C-RES,S 330K-1/10W J	YEZSM	FD-SLM801
X CD		R 0026	88-118-822-080		C-RES,S 8.2K-1/10W J	YKSM	FD-SLM800
X CD		R 0026	88-118-822-080		C-RES,S 8.2K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X CD		R 0026	88-118-822-080	OE	C-RES,S 8.2K-1/10W J	YKSM	FD-SLM800
X CD		R 0026	88-118-822-080	OE	C-RES,S 8.2K-1/10W J	YEZSM	FD-SLM801
X CD		R 0027	88-118-683-080		C-RES,S 68K-1/10W J	YKSM	FD-SLM800
X CD		R 0027	88-118-683-080		C-RES,S 68K-1/10W J	YEZSM	FD-SLM801
X CD		R 0027	88-118-683-080	OE	C-RES,S 68K-1/10W J	YKSM	FD-SLM800
X CD		R 0027	88-118-683-080	OE	C-RES,S 68K-1/10W J	YEZSM	FD-SLM801
X CD		R 0042	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X CD		R 0042	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X CD		R 0042	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X CD		R 0042	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X CD		R 0043	88-118-153-080		C-RES,S 15K-1/10W J	YKSM	FD-SLM800
X CD		R 0043	88-118-153-080		C-RES,S 15K-1/10W J	YEZSM	FD-SLM801
X CD		R 0043	88-118-153-080	OE	C-RES,S 15K-1/10W J	YKSM	FD-SLM800
X CD		R 0043	88-118-153-080	OE	C-RES,S 15K-1/10W J	YEZSM	FD-SLM801
X CD		R 0045	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X CD		R 0045	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X CD		R 0045	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X CD		R 0045	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X CD		R 0046	88-118-153-080		C-RES,S 15K-1/10W J	YKSM	FD-SLM800
X CD		R 0046	88-118-153-080		C-RES,S 15K-1/10W J	YEZSM	FD-SLM801
X CD		R 0046	88-118-153-080	OE	C-RES,S 15K-1/10W J	YKSM	FD-SLM800
X CD		R 0046	88-118-153-080	OE	C-RES,S 15K-1/10W J	YEZSM	FD-SLM801
X CD		R 0048	88-118-823-080		C-RES,S 82K-1/10W J	YKSM	FD-SLM800
X CD		R 0048	88-118-823-080		C-RES,S 82K-1/10W J	YEZSM	FD-SLM801
X CD		R 0048	88-118-823-080	OE	C-RES,S 82K-1/10W J	YKSM	FD-SLM800
X CD		R 0048	88-118-823-080	OE	C-RES,S 82K-1/10W J	YEZSM	FD-SLM801
X CD		R 0050	88-118-823-080		C-RES,S 82K-1/10W J	YKSM	FD-SLM800
X CD		R 0050	88-118-823-080		C-RES,S 82K-1/10W J	YEZSM	FD-SLM801
X CD		R 0050	88-118-823-080	OE	C-RES,S 82K-1/10W J	YKSM	FD-SLM800
X CD		R 0050	88-118-823-080	OE	C-RES,S 82K-1/10W J	YEZSM	FD-SLM801
X CD		R 0051	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0051	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0051	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0051	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0052	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0052	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0052	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0052	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0053	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0053	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0053	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0053	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0054	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0054	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0054	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0054	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0055	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X CD		R 0055	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X CD		R 0055	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X CD		R 0055	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X CD		R 0056	88-121-100-080		RES,10-1/8W J	YKSM	FD-SLM800
X CD		R 0056	88-121-100-080		RES,10-1/8W J	YEZSM	FD-SLM801
X CD		R 0056	88-121-100-080	OE	RES,10-1/8W J	YKSM	FD-SLM800
X CD		R 0056	88-121-100-080	OE	RES,10-1/8W J	YEZSM	FD-SLM801
X CD		R 0057	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0057	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0062	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X CD		R 0062	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X CD		R 0062	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X CD		R 0062	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X CD		R 0063	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0063	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0063	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0063	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0064	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0064	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0064	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X CD		R 0064	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X CD		R 0065	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X CD		R 0065	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X CD		R 0065	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X CD		R 0065	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X CD		R 0066	88-118-105-080		C-RES,S 1M-1/10W J	YKSM	FD-SLM800
X CD		R 0066	88-118-105-080		C-RES,S 1M-1/10W J	YEZSM	FD-SLM801
X CD		R 0066	88-118-105-080	OE	C-RES,S 1M-1/10W J	YKSM	FD-SLM800
X CD		R 0066	88-118-105-080	OE	C-RES,S 1M-1/10W J	YEZSM	FD-SLM801
X CD		R 0067	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X CD		R 0067	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X CD		R 0067	88-118-000-080	OE	C-JUMPER,S	YKSM	FD-SLM800
X CD		R 0067	88-118-000-080	OE	C-JUMPER,S	YEZSM	FD-SLM801
X CD		R 0068	88-118-563-080		C-RES,S 56K-1/10W J	YKSM	FD-SLM800
X CD		R 0068	88-118-563-080		C-RES,S 56K-1/10W J	YEZSM	FD-SLM801
X CD		R 0068	88-118-563-080	OE	C-RES,S 56K-1/10W J	YKSM	FD-SLM800
X CD		R 0068	88-118-563-080	OE	C-RES,S 56K-1/10W J	YEZSM	FD-SLM801
O CD		R 0069	87-A50-190-080		C-COIL,S BLM21A102S	YKSM	FD-SLM800
O CD		R 0069	87-A50-190-080		C-COIL,S BLM21A102S	YEZSM	FD-SLM801
O CD		R 0069	87-A50-190-080	OE	C-COIL,S BLM21A102S	YKSM	FD-SLM800
O CD		R 0069	87-A50-190-080	OE	C-COIL,S BLM21A102S	YEZSM	FD-SLM801
X CD		R 0070	88-118-330-080		C-RES,S 33-1/10W J	YKSM	FD-SLM800
X CD		R 0070	88-118-330-080		C-RES,S 33-1/10W J	YEZSM	FD-SLM801
X CD		R 0070	88-118-330-080	OE	C-RES,S 33-1/10W J	YKSM	FD-SLM800
X CD		R 0070	88-118-330-080	OE	C-RES,S 33-1/10W J	YEZSM	FD-SLM801
X CD		R 0071	88-118-123-080		C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0071	88-118-123-080		C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0071	88-118-123-080	OE	C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0071	88-118-123-080	OE	C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0072	88-118-123-080		C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0072	88-118-123-080		C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0072	88-118-123-080	OE	C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0072	88-118-123-080	OE	C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0073	88-118-123-080		C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0073	88-118-123-080		C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0073	88-118-123-080	OE	C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0073	88-118-123-080	OE	C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0074	88-118-123-080		C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0074	88-118-123-080		C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0074	88-118-123-080	OE	C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0074	88-118-123-080	OE	C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0075	88-118-123-080		C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0075	88-118-123-080		C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0075	88-118-123-080	OE	C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0075	88-118-123-080	OE	C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0076	88-118-123-080		C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0076	88-118-123-080		C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0076	88-118-123-080	OE	C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X CD		R 0076	88-118-123-080	OE	C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X CD		R 0077	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X CD		R 0077	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X CD		R 0077	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X CD		R 0077	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X CD		R 0078	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X CD		R 0078	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X CD		R 0078	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X CD		R 0078	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X CD		R 0079	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0079	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0079	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0079	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0080	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0080	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0080	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X CD		R 0080	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X CD		R 0081	88-118-330-080		C-RES,S 33-1/10W J	YKSM	FD-SLM800
X CD		R 0081	88-118-330-080		C-RES,S 33-1/10W J	YEZSM	FD-SLM801
X CD		R 0081	88-118-330-080	OE	C-RES,S 33-1/10W J	YKSM	FD-SLM800
X CD		R 0081	88-118-330-080	OE	C-RES,S 33-1/10W J	YEZSM	FD-SLM801
X CD		R 0082	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X CD		R 0082	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X CD		R 0082	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X CD		R 0082	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	CD	R 0083	88-118-391-080		C-RES,S 390-1/10W J	YKSM	FD-SLM800
X	CD	R 0083	88-118-391-080		C-RES,S 390-1/10W J	YEZSM	FD-SLM801
X	CD	R 0083	88-118-391-080	OE	C-RES,S 390-1/10W J	YKSM	FD-SLM800
X	CD	R 0083	88-118-391-080	OE	C-RES,S 390-1/10W J	YEZSM	FD-SLM801
X	CD	R 0084	88-118-821-080		C-RES,S 820-1/10W J	YKSM	FD-SLM800
X	CD	R 0084	88-118-821-080		C-RES,S 820-1/10W J	YEZSM	FD-SLM801
X	CD	R 0084	88-118-821-080	OE	C-RES,S 820-1/10W J	YKSM	FD-SLM800
X	CD	R 0084	88-118-821-080	OE	C-RES,S 820-1/10W J	YEZSM	FD-SLM801
X	CD	R 0085	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	CD	R 0085	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	CD	R 0085	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	CD	R 0085	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	CD	R 0086	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	CD	R 0086	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0086	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	CD	R 0086	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0086	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	CD	R 0101	88-118-563-080		C-RES,S 56K-1/10W J	YKSM	FD-SLM800
X	CD	R 0101	88-118-563-080		C-RES,S 56K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0101	88-118-563-080	OE	C-RES,S 56K-1/10W J	YKSM	FD-SLM800
X	CD	R 0101	88-118-563-080	OE	C-RES,S 56K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0102	88-118-823-080		C-RES,S 82K-1/10W J	YKSM	FD-SLM800
X	CD	R 0102	88-118-823-080		C-RES,S 82K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0102	88-118-823-080	OE	C-RES,S 82K-1/10W J	YKSM	FD-SLM800
X	CD	R 0102	88-118-823-080	OE	C-RES,S 82K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0103	88-118-682-080		C-RES,S 6.8K-1/10W J	YKSM	FD-SLM800
X	CD	R 0103	88-118-682-080		C-RES,S 6.8K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0103	88-118-682-080	OE	C-RES,S 6.8K-1/10W J	YKSM	FD-SLM800
X	CD	R 0103	88-118-682-080	OE	C-RES,S 6.8K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0112	88-118-229-080		C-RES,S 2.2-1/10W J	YKSM	FD-SLM800
X	CD	R 0112	88-118-229-080		C-RES,S 2.2-1/10W J	YEZSM	FD-SLM801
X	CD	R 0112	88-118-229-080	OE	C-RES,S 2.2-1/10W J	YKSM	FD-SLM800
X	CD	R 0112	88-118-229-080	OE	C-RES,S 2.2-1/10W J	YEZSM	FD-SLM801
X	CD	R 0113	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	CD	R 0113	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	CD	R 0113	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	CD	R 0113	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	CD	R 0114	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	CD	R 0114	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	CD	R 0114	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	CD	R 0114	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	CD	R 0115	88-118-392-080		C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	CD	R 0115	88-118-392-080		C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0115	88-118-392-080	OE	C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	CD	R 0115	88-118-392-080	OE	C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0116	88-118-392-080		C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	CD	R 0116	88-118-392-080		C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0116	88-118-392-080	OE	C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	CD	R 0116	88-118-392-080	OE	C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0117	88-118-562-080		C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	CD	R 0117	88-118-562-080		C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0117	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	CD	R 0117	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0118	88-118-562-080		C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	CD	R 0118	88-118-562-080		C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0118	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	CD	R 0118	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0120	88-140-229-080		RES,2.2-1/2W J	YKSM	FD-SLM800
X	CD	R 0120	88-140-229-080		RES,2.2-1/2W J	YEZSM	FD-SLM801
X	CD	R 0120	88-140-229-080	OE	RES,2.2-1/2W J	YKSM	FD-SLM800
X	CD	R 0120	88-140-229-080	OE	RES,2.2-1/2W J	YEZSM	FD-SLM801
X	CD	R 0121	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	CD	R 0121	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0121	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	CD	R 0121	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0124	88-118-562-080		C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	CD	R 0124	88-118-562-080		C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0124	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	CD	R 0124	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	CD	R 0125	88-118-153-080		C-RES,S 15K-1/10W J	YKSM	FD-SLM800
X	CD	R 0125	88-118-153-080		C-RES,S 15K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.


Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X CD		R 0125	88-118-153-080	OE	C-RES,S 15K-1/10W J	YKSM	FD-SLM800
X CD		R 0125	88-118-153-080	OE	C-RES,S 15K-1/10W J	YEZSM	FD-SLM801
X CD		R 0126	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X CD		R 0126	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X CD		R 0126	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X CD		R 0126	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X CD		R 0127	88-118-333-080		C-RES,S 33K-1/10W J	YKSM	FD-SLM800
X CD		R 0127	88-118-333-080		C-RES,S 33K-1/10W J	YEZSM	FD-SLM801
X CD		R 0127	88-118-333-080	OE	C-RES,S 33K-1/10W J	YKSM	FD-SLM800
X CD		R 0127	88-118-333-080	OE	C-RES,S 33K-1/10W J	YEZSM	FD-SLM801
X CD		R 0137	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X CD		R 0137	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X CD		R 0137	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X CD		R 0137	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X CD		R 0141	88-121-109-080		RES,1-1/8W J	YKSM	FD-SLM800
X CD		R 0141	88-121-109-080		RES,1-1/8W J	YEZSM	FD-SLM801
X CD		R 0141	88-121-109-080	OE	RES,1-1/8W J	YKSM	FD-SLM800
X CD		R 0141	88-121-109-080	OE	RES,1-1/8W J	YEZSM	FD-SLM801
X CD		R 0142	88-121-109-080		RES,1-1/8W J	YKSM	FD-SLM800
X CD		R 0142	88-121-109-080		RES,1-1/8W J	YEZSM	FD-SLM801
X CD		R 0142	88-121-109-080	OE	RES,1-1/8W J	YKSM	FD-SLM800
X CD		R 0142	88-121-109-080	OE	RES,1-1/8W J	YEZSM	FD-SLM801
X CD		R 0143	88-121-109-080		RES,1-1/8W J	YKSM	FD-SLM800
X CD		R 0143	88-121-109-080		RES,1-1/8W J	YEZSM	FD-SLM801
X CD		R 0143	88-121-109-080	OE	RES,1-1/8W J	YKSM	FD-SLM800
X CD		R 0143	88-121-109-080	OE	RES,1-1/8W J	YEZSM	FD-SLM801
X CD		R 0144	88-121-109-080		RES,1-1/8W J	YKSM	FD-SLM800
X CD		R 0144	88-121-109-080		RES,1-1/8W J	YEZSM	FD-SLM801
X CD		R 0144	88-121-109-080	OE	RES,1-1/8W J	YKSM	FD-SLM800
X CD		R 0144	88-121-109-080	OE	RES,1-1/8W J	YEZSM	FD-SLM801
X CD		R 0145	88-121-100-080		RES,10-1/8W J	YKSM	FD-SLM800
X CD		R 0145	88-121-100-080		RES,10-1/8W J	YEZSM	FD-SLM801
X CD		R 0145	88-121-100-080	OE	RES,10-1/8W J	YKSM	FD-SLM800
X CD		R 0145	88-121-100-080	OE	RES,10-1/8W J	YEZSM	FD-SLM801
X CD		R 0147	88-121-100-080		RES,10-1/8W J	YKSM	FD-SLM800
X CD		R 0147	88-121-100-080		RES,10-1/8W J	YEZSM	FD-SLM801
X CD		R 0147	88-121-100-080	OE	RES,10-1/8W J	YKSM	FD-SLM800
X CD		R 0147	88-121-100-080	OE	RES,10-1/8W J	YEZSM	FD-SLM801
X CD		R 0149	88-121-100-080		RES,10-1/8W J	YKSM	FD-SLM800
X CD		R 0149	88-121-100-080		RES,10-1/8W J	YEZSM	FD-SLM801
X CD		R 0149	88-121-100-080	OE	RES,10-1/8W J	YKSM	FD-SLM800
X CD		R 0149	88-121-100-080	OE	RES,10-1/8W J	YEZSM	FD-SLM801
X CD		R 0151	88-121-100-080		RES,10-1/8W J	YKSM	FD-SLM800
X CD		R 0151	88-121-100-080		RES,10-1/8W J	YEZSM	FD-SLM801
X CD		R 0151	88-121-100-080	OE	RES,10-1/8W J	YKSM	FD-SLM800
X CD		R 0151	88-121-100-080	OE	RES,10-1/8W J	YEZSM	FD-SLM801
X CD		R 0153	88-121-101-080		RES,100-1/8W J	YKSM	FD-SLM800
X CD		R 0153	88-121-101-080		RES,100-1/8W J	YEZSM	FD-SLM801
X CD		R 0153	88-121-101-080	OE	RES,100-1/8W J	YKSM	FD-SLM800
X CD		R 0153	88-121-101-080	OE	RES,100-1/8W J	YEZSM	FD-SLM801
X CD		R 0154	88-118-682-080		C-RES,S 6.8K-1/10W J	YKSM	FD-SLM800
X CD		R 0154	88-118-682-080		C-RES,S 6.8K-1/10W J	YEZSM	FD-SLM801
X CD		R 0154	88-118-682-080	OE	C-RES,S 6.8K-1/10W J	YKSM	FD-SLM800
X CD		R 0154	88-118-682-080	OE	C-RES,S 6.8K-1/10W J	YEZSM	FD-SLM801
X CD		R 0155	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X CD		R 0155	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X CD		R 0155	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X CD		R 0155	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X CD		R 0156	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X CD		R 0156	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X CD		R 0156	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X CD		R 0156	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
O CD		X 0060	87-A70-046-010		VIB,XTAL 16.934MHZ	YKSM	FD-SLM800
O CD		X 0060	87-A70-046-010		VIB,XTAL 16.934MHZ	YEZSM	FD-SLM801
O CD		X 0060	87-A70-046-010	1B	VIB,XTAL 16.934MHZ	YKSM	FD-SLM800
O CD		X 0060	87-A70-046-010	1B	VIB,XTAL 16.934MHZ	YEZSM	FD-SLM801
X CD	MECHANISM		M8-ZZK-F91-070		DA23L	YKSM	FD-SLM800
X CD	MECHANISM		M8-ZZK-F91-070		DA23L	YEZSM	FD-SLM801
X CD	MECHANISM		M8-ZZK-F91-070	2D	DA23L	YKSM	FD-SLM800
X CD	MECHANISM		M8-ZZK-F91-070	2D	DA23L	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	ELECTRICAL		88-906-101-110		FF-CABLE, 6P 1.25	YKSM	FD-SLM800
O	ELECTRICAL		88-906-101-110		FF-CABLE, 6P 1.25	YEZSM	FD-SLM801
O	ELECTRICAL		88-906-101-110	OE	FF-CABLE, 6P 1.25	YKSM	FD-SLM800
O	ELECTRICAL		88-906-101-110	OE	FF-CABLE, 6P 1.25	YEZSM	FD-SLM801
O	ELECTRICAL		8A-CV2-660-010	--	CONN ASSY, 8P 2MM	YKSM	FD-SLM800
O	ELECTRICAL		8A-CV2-660-010	--	CONN ASSY, 8P 2MM	YEZSM	FD-SLM801
O	ELECTRICAL		8A-CV2-664-010	--	FF-CABLE, 8P 1MM	YKSM	FD-SLM800
O	ELECTRICAL		8A-CV2-664-010	--	FF-CABLE, 8P 1MM	YEZSM	FD-SLM801
O	ELECTRICAL		8A-CV2-664-010	OE	FF-CABLE, 8P 1MM	YKSM	FD-SLM800
O	ELECTRICAL		8A-CV2-664-010	OE	FF-CABLE, 8P 1MM	YEZSM	FD-SLM801
O	ELECTRICAL		8A-CV2-665-010		FF-CABLE, 5P 1.25MM	YKSM	FD-SLM800
O	ELECTRICAL		8A-CV2-665-010		FF-CABLE, 5P 1.25MM	YEZSM	FD-SLM801
O	ELECTRICAL		8A-CV2-665-010	OE	FF-CABLE, 5P 1.25MM	YKSM	FD-SLM800
O	ELECTRICAL		8A-CV2-665-010	OE	FF-CABLE, 5P 1.25MM	YEZSM	FD-SLM801
O	ELECTRICAL		8A-CV2-668-010		CONN ASSY, 8P 200MM	YKSM	FD-SLM800
O	ELECTRICAL		8A-CV2-668-010		CONN ASSY, 8P 200MM	YEZSM	FD-SLM801
O	FRONT	C 0704	87-010-075-040		CAP, E 10-16 M 5L SRE	YKSM	FD-SLM800
O	FRONT	C 0704	87-010-075-040		CAP, E 10-16 M 5L SRE	YEZSM	FD-SLM801
O	FRONT	C 0704	87-010-075-040	OE	CAP, E 10-16 M 5L SRE	YKSM	FD-SLM800
O	FRONT	C 0704	87-010-075-040	OE	CAP, E 10-16 M 5L SRE	YEZSM	FD-SLM801
O	FRONT	C 0705	87-010-322-080		C-CAP, S 100P-50 J CH GRM	YKSM	FD-SLM800
O	FRONT	C 0705	87-010-322-080		C-CAP, S 100P-50 J CH GRM	YEZSM	FD-SLM801
O	FRONT	C 0705	87-010-322-080	OE	C-CAP, S 100P-50 J CH GRM	YKSM	FD-SLM800
O	FRONT	C 0705	87-010-322-080	OE	C-CAP, S 100P-50 J CH GRM	YEZSM	FD-SLM801
O	FRONT	CN 0706	87-A60-154-010		CONN, 6P H FE	YKSM	FD-SLM800
O	FRONT	CN 0706	87-A60-154-010		CONN, 6P H FE	YEZSM	FD-SLM801
!	O FRONT	CN 0706	87-A60-154-010	OE	CONN, 6P H FE	YKSM	FD-SLM800
!	O FRONT	CN 0706	87-A60-154-010	OE	CONN, 6P H FE	YEZSM	FD-SLM801
O	FRONT	CN 0707	87-A60-667-010		CONN, 3P H 2MM JMT	YKSM	FD-SLM800
O	FRONT	CN 0707	87-A60-667-010		CONN, 3P H 2MM JMT	YEZSM	FD-SLM801
O	FRONT	CN 0707	87-A60-667-010	OE	CONN, 3P H 2MM JMT	YKSM	FD-SLM800
O	FRONT	CN 0707	87-A60-667-010	OE	CONN, 3P H 2MM JMT	YEZSM	FD-SLM801
O	FRONT	CNA0704	8A-CV2-667-010		CONN ASSY, 2P 2MM	YKSM	FD-SLM800
O	FRONT	CNA0704	8A-CV2-667-010		CONN ASSY, 2P 2MM	YEZSM	FD-SLM801
O	FRONT	CNA0704	8A-CV2-667-010	--	CONN ASSY, 2P 2MM	YKSM	FD-SLM800
O	FRONT	CNA0704	8A-CV2-667-010	--	CONN ASSY, 2P 2MM	YEZSM	FD-SLM801
O	FRONT	CNA0705	8A-CV2-667-010		CONN ASSY, 2P 2MM	YKSM	FD-SLM800
O	FRONT	CNA0705	8A-CV2-667-010		CONN ASSY, 2P 2MM	YEZSM	FD-SLM801
O	FRONT	CNA0705	8A-CV2-667-010	--	CONN ASSY, 2P 2MM	YKSM	FD-SLM800
O	FRONT	CNA0705	8A-CV2-667-010	--	CONN ASSY, 2P 2MM	YEZSM	FD-SLM801
O	FRONT	CNA0707	8A-CR2-662-010		CONN ASSY, 3P 2MM	YKSM	FD-SLM800
O	FRONT	CNA0707	8A-CR2-662-010		CONN ASSY, 3P 2MM	YEZSM	FD-SLM801
O	FRONT	CNA0707	8A-CR2-662-010	OE	CONN ASSY, 3P 2MM	YKSM	FD-SLM800
O	FRONT	CNA0707	8A-CR2-662-010	OE	CONN ASSY, 3P 2MM	YEZSM	FD-SLM801
S	FRONT	IC 0701	87-070-246-010		IC, GP1U271X	YKSM	FD-SLM800
S	FRONT	IC 0701	87-070-246-010		IC, GP1U271X	YEZSM	FD-SLM801
S	FRONT	IC 0701	87-070-246-010	1D	IC, GP1U271X	YKSM	FD-SLM800
S	FRONT	IC 0701	87-070-246-010	1D	IC, GP1U271X	YEZSM	FD-SLM801
X	FRONT	JR 0701	88-118-000-080	OE	C-JUMPER, S	YKSM	FD-SLM800
X	FRONT	JR 0701	88-118-000-080	OE	C-JUMPER, S	YEZSM	FD-SLM801
X	FRONT	R 0711	88-128-331-080		C-RES, 330-1/8W J	YKSM	FD-SLM800
X	FRONT	R 0711	88-128-331-080		C-RES, 330-1/8W J	YEZSM	FD-SLM801
X	FRONT	R 0711	88-128-331-080	OE	C-RES, 330-1/8W J	YKSM	FD-SLM800
X	FRONT	R 0711	88-128-331-080	OE	C-RES, 330-1/8W J	YEZSM	FD-SLM801
X	FRONT	R 0712	88-118-563-080		C-RES, S 56K-1/10W J	YKSM	FD-SLM800
X	FRONT	R 0712	88-118-563-080		C-RES, S 56K-1/10W J	YEZSM	FD-SLM801
X	FRONT	R 0712	88-118-563-080	OE	C-RES, S 56K-1/10W J	YKSM	FD-SLM800
X	FRONT	R 0712	88-118-563-080	OE	C-RES, S 56K-1/10W J	YEZSM	FD-SLM801
X	FRONT	R 0713	88-128-103-080		C-RES, 10K-1/8W J	YKSM	FD-SLM800
X	FRONT	R 0713	88-128-103-080		C-RES, 10K-1/8W J	YEZSM	FD-SLM801
X	FRONT	R 0713	88-128-103-080	OE	C-RES, 10K-1/8W J	YKSM	FD-SLM800
X	FRONT	R 0713	88-128-103-080	OE	C-RES, 10K-1/8W J	YEZSM	FD-SLM801
X	FRONT	R 0714	88-128-181-080		C-RES, 180-1/8W J	YKSM	FD-SLM800
X	FRONT	R 0714	88-128-181-080		C-RES, 180-1/8W J	YEZSM	FD-SLM801
X	FRONT	R 0714	88-128-181-080	OE	C-RES, 180-1/8W J	YKSM	FD-SLM800
X	FRONT	R 0714	88-128-181-080	OE	C-RES, 180-1/8W J	YEZSM	FD-SLM801
X	FRONT	R 0715	88-118-102-080		C-RES, S 1K-1/10W J	YKSM	FD-SLM800
X	FRONT	R 0715	88-118-102-080		C-RES, S 1K-1/10W J	YEZSM	FD-SLM801
X	FRONT	R 0715	88-118-102-080	OE	C-RES, S 1K-1/10W J	YKSM	FD-SLM800
X	FRONT	R 0715	88-118-102-080	OE	C-RES, S 1K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	FRONT	S 0701	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O	FRONT	S 0701	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O	FRONT	S 0701	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O	FRONT	S 0701	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O	FRONT	S 0702	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O	FRONT	S 0702	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O	FRONT	S 0702	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O	FRONT	S 0702	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-635-010		PWB, COMB FUNC 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-635-010		PWB, COMB FUNC 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-635-010	1D	PWB, COMB FUNC 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-635-010	1D	PWB, COMB FUNC 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-636-010		PWB, FUNC 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-636-010		PWB, FUNC 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-636-010	--	PWB, FUNC 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-636-010	--	PWB, FUNC 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-637-010		PWB, KEY 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-637-010		PWB, KEY 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-637-010	--	PWB, KEY 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-637-010	--	PWB, KEY 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-638-010		PWB, LED-L 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-638-010		PWB, LED-L 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-638-010	--	PWB, LED-L 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-638-010	--	PWB, LED-L 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-639-010		PWB, LED-R 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-639-010		PWB, LED-R 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-639-010	--	PWB, LED-R 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-639-010	--	PWB, LED-R 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-640-010		PWB, MOTOR 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-640-010		PWB, MOTOR 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-641-010		PWB, CD DOOR 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-641-010		PWB, CD DOOR 2M	YEZSM	FD-SLM801
X	FUNC/BUFF	*	8A-CR2-641-010	--	PWB, CD DOOR 2M	YKSM	FD-SLM800
X	FUNC/BUFF	*	8A-CR2-641-010	--	PWB, CD DOOR 2M	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0501	87-010-180-080		C-CAP, S 1500P-50 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0501	87-010-180-080		C-CAP, S 1500P-50 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0501	87-010-180-080	OE	C-CAP, S 1500P-50 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0501	87-010-180-080	OE	C-CAP, S 1500P-50 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0502	87-010-180-080		C-CAP, S 1500P-50 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0502	87-010-180-080		C-CAP, S 1500P-50 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0502	87-010-180-080	OE	C-CAP, S 1500P-50 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0502	87-010-180-080	OE	C-CAP, S 1500P-50 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0503	87-010-182-080		C-CAP, S 2200P-50 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0503	87-010-182-080		C-CAP, S 2200P-50 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0503	87-010-182-080	OE	C-CAP, S 2200P-50 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0503	87-010-182-080	OE	C-CAP, S 2200P-50 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0504	87-010-182-080		C-CAP, S 2200P-50 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0504	87-010-182-080		C-CAP, S 2200P-50 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0504	87-010-182-080	OE	C-CAP, S 2200P-50 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0504	87-010-182-080	OE	C-CAP, S 2200P-50 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0505	87-010-213-080		C-CAP, S 0.015-25 K B GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0505	87-010-213-080		C-CAP, S 0.015-25 K B GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0505	87-010-213-080	OE	C-CAP, S 0.015-25 K B GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0505	87-010-213-080	OE	C-CAP, S 0.015-25 K B GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0506	87-010-213-080		C-CAP, S 0.015-25 K B GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0506	87-010-213-080		C-CAP, S 0.015-25 K B GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0506	87-010-213-080	OE	C-CAP, S 0.015-25 K B GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0506	87-010-213-080	OE	C-CAP, S 0.015-25 K B GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0507	87-010-493-040		CAP, E 0.47-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0507	87-010-493-040		CAP, E 0.47-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0507	87-010-493-040	OE	CAP, E 0.47-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0507	87-010-493-040	OE	CAP, E 0.47-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0508	87-010-493-040		CAP, E 0.47-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0508	87-010-493-040		CAP, E 0.47-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0508	87-010-493-040	OE	CAP, E 0.47-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0508	87-010-493-040	OE	CAP, E 0.47-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0509	87-010-492-040		CAP, E 0.33-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0509	87-010-492-040		CAP, E 0.33-50 M 5L SRE	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	FUNC/BUFF	C 0509	87-010-492-040	OE	CAP,E 0.33-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0509	87-010-492-040	OE	CAP,E 0.33-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0510	87-010-492-040		CAP,E 0.33-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0510	87-010-492-040		CAP,E 0.33-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0510	87-010-492-040	OE	CAP,E 0.33-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0510	87-010-492-040	OE	CAP,E 0.33-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0511	87-010-494-040		CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0511	87-010-494-040		CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0511	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0511	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0512	87-010-494-040		CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0512	87-010-494-040		CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0512	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0512	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0513	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0513	87-010-154-080		C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0513	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0513	87-010-154-080	OE	C-CAP,S 10P-50 D CH GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0514	87-010-553-040		CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0514	87-010-553-040		CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0514	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0514	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0515	87-010-553-040		CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0515	87-010-553-040		CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0515	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0515	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0575	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0575	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0575	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0575	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0576	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0576	87-010-497-040		CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0576	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0576	87-010-497-040	OE	CAP,E 4.7-35 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0577	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0577	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0577	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0577	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0578	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0578	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0578	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0578	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0579	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0579	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0579	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0579	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0580	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0580	87-012-154-080		C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0580	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YKSM	FD-SLM800
O	FUNC/BUFF	C 0580	87-012-154-080	OE	C-CAP,S 150P-50 J CH GRM	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0581	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0581	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0581	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0581	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0582	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0582	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0582	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	FUNC/BUFF	C 0582	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0583	87-010-494-040		CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0583	87-010-494-040		CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0583	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0583	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0584	87-010-494-040		CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0584	87-010-494-040		CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0584	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	FUNC/BUFF	C 0584	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0585	87-016-044-040		CAP,E 100-16 M 5L MA	YKSM	FD-SLM800
O	FUNC/BUFF	C 0585	87-016-044-040		CAP,E 100-16 M 5L MA	YEZSM	FD-SLM801
O	FUNC/BUFF	C 0585	87-016-044-040	OE	CAP,E 100-16 M 5L MA	YKSM	FD-SLM800
O	FUNC/BUFF	C 0585	87-016-044-040	OE	CAP,E 100-16 M 5L MA	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	FUNC/BUFF	C	0586 87-016-044-040		CAP,E 100-16 M 5L MA	YKSM	FD-SLM800
O	FUNC/BUFF	C	0586 87-016-044-040		CAP,E 100-16 M 5L MA	YEZSM	FD-SLM801
O	FUNC/BUFF	C	0586 87-016-044-040	0E	CAP,E 100-16 M 5L MA	YKSM	FD-SLM800
O	FUNC/BUFF	C	0586 87-016-044-040	0E	CAP,E 100-16 M 5L MA	YEZSM	FD-SLM801
O	FUNC/BUFF	CN	0505 87-A60-189-010		CONN,16P V TUC-P16P-B1	YKSM	FD-SLM800
O	FUNC/BUFF	CN	0505 87-A60-189-010		CONN,16P V TUC-P16P-B1	YEZSM	FD-SLM801
!	O FUNC/BUFF	CN	0505 87-A60-189-010	0E	CONN,16P V TUC-P16P-B1	YKSM	FD-SLM800
!	O FUNC/BUFF	CN	0505 87-A60-189-010	0E	CONN,16P V TUC-P16P-B1	YEZSM	FD-SLM801
S	FUNC/BUFF	D	0501 87-A40-292-080		ZENER,DZ2.7L	YKSM	FD-SLM800
S	FUNC/BUFF	D	0501 87-A40-292-080		ZENER,DZ2.7L	YEZSM	FD-SLM801
S	FUNC/BUFF	D	0501 87-A40-292-080		ZENER,DZ2.7L	YKSM	FD-SLM800
S	FUNC/BUFF	D	0501 87-A40-292-080		ZENER,DZ2.7L	YEZSM	FD-SLM801
S	FUNC/BUFF	D	0502 87-A40-292-080		ZENER,DZ2.7L	YKSM	FD-SLM800
S	FUNC/BUFF	D	0502 87-A40-292-080		ZENER,DZ2.7L	YEZSM	FD-SLM801
S	FUNC/BUFF	D	0502 87-A40-292-080	0E	ZENER,DZ2.7L	YKSM	FD-SLM800
S	FUNC/BUFF	D	0502 87-A40-292-080	0E	ZENER,DZ2.7L	YEZSM	FD-SLM801
S	FUNC/BUFF	D	0631 87-001-731-080		ZENER,HZS6C2L	YKSM	FD-SLM800
S	FUNC/BUFF	D	0631 87-001-731-080		ZENER,HZS6C2L	YEZSM	FD-SLM801
S	FUNC/BUFF	D	0631 87-001-731-080	0E	ZENER,HZS6C2L	YKSM	FD-SLM800
S	FUNC/BUFF	D	0631 87-001-731-080	0E	ZENER,HZS6C2L	YEZSM	FD-SLM801
S	FUNC/BUFF	D	0632 87-020-465-080		DIODE,1SS133	YKSM	FD-SLM800
S	FUNC/BUFF	D	0632 87-020-465-080		DIODE,1SS133	YEZSM	FD-SLM801
S	FUNC/BUFF	D	0632 87-020-465-080	0E	DIODE,1SS133	YKSM	FD-SLM800
S	FUNC/BUFF	D	0632 87-020-465-080	0E	DIODE,1SS133	YEZSM	FD-SLM801
S	FUNC/BUFF	IC	0501 87-A21-111-040	1C	C-IC,M62495FP	YKSM	FD-SLM800
S	FUNC/BUFF	IC	0501 87-A21-111-040	1C	C-IC,M62495FP	YEZSM	FD-SLM801
O	S FUNC/BUFF	IC	0501 87-A21-111-040		C-IC,M62495FP	YKSM	FD-SLM800
O	S FUNC/BUFF	IC	0501 87-A21-111-040		C-IC,M62495FP	YEZSM	FD-SLM801
S	FUNC/BUFF	IC	0509 87-A21-419-040	0E	C-IC,NJM14558MD-TE2	YKSM	FD-SLM800
S	FUNC/BUFF	IC	0509 87-A21-419-040	0E	C-IC,NJM14558MD-TE2	YEZSM	FD-SLM801
O	S FUNC/BUFF	IC	0509 87-A21-419-040		C-IC,NJM14558MD-TE2	YKSM	FD-SLM800
O	S FUNC/BUFF	IC	0509 87-A21-419-040		C-IC,NJM14558MD-TE2	YEZSM	FD-SLM801
O	FUNC/BUFF	J	0601 87-A60-354-010		JACK,PIN 2P MSP -242V-05	YKSM	FD-SLM800
O	FUNC/BUFF	J	0601 87-A60-354-010		JACK,PIN 2P MSP -242V-05	YEZSM	FD-SLM801
!	O FUNC/BUFF	J	0601 87-A60-354-010	1B	JACK,PIN 2P MSP -242V-05	YKSM	FD-SLM800
!	O FUNC/BUFF	J	0601 87-A60-354-010	1B	JACK,PIN 2P MSP -242V-05	YEZSM	FD-SLM801
O	FUNC/BUFF	J	0602 82-MA2-631-010		JACK PIN 4P RVS	YKSM	FD-SLM800
O	FUNC/BUFF	J	0602 82-MA2-631-010		JACK PIN 4P RVS	YEZSM	FD-SLM801
!	O FUNC/BUFF	J	0602 82-MA2-631-010	1B	JACK PIN 4P RVS	YKSM	FD-SLM800
!	O FUNC/BUFF	J	0602 82-MA2-631-010	1B	JACK PIN 4P RVS	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0501 88-129-000-080		C-JUMPER,3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0501 88-129-000-080		C-JUMPER,3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0501 88-129-000-080	0E	C-JUMPER,3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0501 88-129-000-080	0E	C-JUMPER,3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0502 88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0502 88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0502 88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0502 88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0503 88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0503 88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0503 88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0503 88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0504 88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0504 88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0504 88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0504 88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0505 88-129-000-080		C-JUMPER,3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0505 88-129-000-080		C-JUMPER,3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0505 88-129-000-080	0E	C-JUMPER,3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0505 88-129-000-080	0E	C-JUMPER,3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0506 88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0506 88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0506 88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0506 88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0507 88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0507 88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0507 88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0507 88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR	0508 88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	FUNC/BUFF	JR	0508 88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	FUNC/BUFF	JR 0508	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0508	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0509	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0509	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0509	88-129-000-080	0E	C-JUMPER, 3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0509	88-129-000-080	0E	C-JUMPER, 3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0510	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0510	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0510	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0510	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0511	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0511	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0511	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0511	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0512	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0512	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0512	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0512	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0513	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0513	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0513	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0513	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0514	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0514	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0514	88-129-000-080	0E	C-JUMPER, 3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0514	88-129-000-080	0E	C-JUMPER, 3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0515	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0515	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0515	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0515	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0516	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0516	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0516	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0516	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0517	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0517	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0517	88-129-000-080	0E	C-JUMPER, 3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0517	88-129-000-080	0E	C-JUMPER, 3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0518	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0518	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0518	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0518	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0519	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0519	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0519	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0519	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0520	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0520	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0520	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0520	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0521	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0521	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0521	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0521	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0522	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0522	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0522	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0522	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801
O	FUNC/BUFF	JR 0523	87-A50-190-080		C-COIL, S BLM21A102S	YKSM	FD-SLM800
O	FUNC/BUFF	JR 0523	87-A50-190-080		C-COIL, S BLM21A102S	YEZSM	FD-SLM801
O	FUNC/BUFF	JR 0523	87-A50-190-080	0E	C-COIL, S BLM21A102S	YKSM	FD-SLM800
O	FUNC/BUFF	JR 0523	87-A50-190-080	0E	C-COIL, S BLM21A102S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0524	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0524	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0524	88-129-000-080	0E	C-JUMPER, 3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0524	88-129-000-080	0E	C-JUMPER, 3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0525	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0525	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0525	88-118-000-080	0E	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0525	88-118-000-080	0E	C-JUMPER, S	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	FUNC/BUFF	JR 0526	87-A50-190-080		C-COIL,S BLM21A102S	YKSM	FD-SLM800
O	FUNC/BUFF	JR 0526	87-A50-190-080		C-COIL,S BLM21A102S	YEZSM	FD-SLM801
O	FUNC/BUFF	JR 0526	87-A50-190-080	OE	C-COIL,S BLM21A102S	YKSM	FD-SLM800
O	FUNC/BUFF	JR 0526	87-A50-190-080	OE	C-COIL,S BLM21A102S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0528	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0528	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0528	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0528	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0529	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0529	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	JR 0529	88-118-000-080	OE	C-JUMPER, S	YKSM	FD-SLM800
X	FUNC/BUFF	JR 0529	88-118-000-080	OE	C-JUMPER, S	YEZSM	FD-SLM801
X	FUNC/BUFF	L 0631	87-005-890-080		C-COIL,S 0.47UH K LK2125	YKSM	FD-SLM800
O	FUNC/BUFF	L 0631	87-005-890-080		C-COIL,S 0.47UH K LK2125	YEZSM	FD-SLM801
O	FUNC/BUFF	L 0631	87-005-890-080	OE	C-COIL,S 0.47UH K LK2125	YKSM	FD-SLM800
O	FUNC/BUFF	L 0631	87-005-890-080	OE	C-COIL,S 0.47UH K LK2125	YEZSM	FD-SLM801
S	FUNC/BUFF	Q 0631	87-A30-047-080		TR,CSD655E	YKSM	FD-SLM800
S	FUNC/BUFF	Q 0631	87-A30-047-080		TR,CSD655E	YEZSM	FD-SLM801
S	FUNC/BUFF	Q 0631	87-A30-047-080	OE	TR,CSD655E	YKSM	FD-SLM800
S	FUNC/BUFF	Q 0631	87-A30-047-080	OE	TR,CSD655E	YEZSM	FD-SLM801
S	FUNC/BUFF	Q 0632	87-A30-047-080		TR,CSD655E	YKSM	FD-SLM800
S	FUNC/BUFF	Q 0632	87-A30-047-080		TR,CSD655E	YEZSM	FD-SLM801
S	FUNC/BUFF	Q 0632	87-A30-047-080	OE	TR,CSD655E	YKSM	FD-SLM800
S	FUNC/BUFF	Q 0632	87-A30-047-080	OE	TR,CSD655E	YEZSM	FD-SLM801
S	FUNC/BUFF	Q 0633	87-026-297-080		C-TR,DTA144TK	YKSM	FD-SLM800
S	FUNC/BUFF	Q 0633	87-026-297-080		C-TR,DTA144TK	YEZSM	FD-SLM801
S	FUNC/BUFF	Q 0633	87-026-297-080	OE	C-TR,DTA144TK	YKSM	FD-SLM800
S	FUNC/BUFF	Q 0633	87-026-297-080	OE	C-TR,DTA144TK	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0501	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0501	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0501	88-118-223-080	OE	C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0501	88-118-223-080	OE	C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0502	88-121-103-080		RES,10K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0502	88-121-103-080		RES,10K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0502	88-121-223-080	OE	RES,22K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0502	88-121-223-080	OE	RES,22K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0503	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0503	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0503	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0503	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0504	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0504	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0504	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0504	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0505	88-121-562-080		RES,5.6K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0505	88-121-562-080		RES,5.6K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0505	88-121-562-080	OE	RES,5.6K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0505	88-121-562-080	OE	RES,5.6K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0506	88-118-562-080		C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0506	88-118-562-080		C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0506	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0506	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0507	88-118-681-080		C-RES,S 680-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0507	88-118-681-080		C-RES,S 680-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0507	88-118-681-080	OE	C-RES,S 680-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0507	88-118-681-080	OE	C-RES,S 680-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0508	88-118-681-080		C-RES,S 680-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0508	88-118-681-080		C-RES,S 680-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0508	88-118-681-080	OE	C-RES,S 680-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0508	88-118-681-080	OE	C-RES,S 680-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0509	88-121-102-080		RES,1K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0509	88-121-102-080		RES,1K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0509	88-121-102-080	OE	RES,1K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0509	88-121-102-080	OE	RES,1K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0510	88-128-102-080		C-RES, 1K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0510	88-128-102-080		C-RES, 1K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0510	88-128-102-080	OE	C-RES, 1K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0510	88-128-102-080	OE	C-RES, 1K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0511	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0511	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	FUNC/BUFF	R 0511	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0511	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0512	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0512	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0512	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0512	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0513	88-118-562-080		C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0513	88-118-562-080		C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0513	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0513	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0514	88-121-562-080		RES,5.6K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0514	88-121-562-080		RES,5.6K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0514	88-121-562-080	OE	RES,5.6K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0514	88-121-562-080	OE	RES,5.6K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0515	88-118-222-080		C-RES,S 2.2K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0515	88-118-222-080		C-RES,S 2.2K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0515	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0515	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0516	88-118-222-080		C-RES,S 2.2K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0516	88-118-222-080		C-RES,S 2.2K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0516	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0516	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0517	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0517	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0517	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0517	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0518	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0518	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0518	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0518	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0519	88-118-123-080		C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0519	88-118-123-080		C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0519	88-118-123-080	OE	C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0519	88-118-123-080	OE	C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0520	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0520	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0520	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0520	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0521	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0521	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0521	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0521	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0522	88-121-221-080		RES,220-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0522	88-121-221-080		RES,220-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0522	88-121-221-080	OE	RES,220-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0522	88-121-221-080	OE	RES,220-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0523	88-130-271-080		RES,270-1/4W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0523	88-130-271-080		RES,270-1/4W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0523	88-130-271-080	OE	RES,270-1/4W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0523	88-130-271-080	OE	RES,270-1/4W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0524	88-121-101-080		RES,100-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0524	88-121-101-080		RES,100-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0524	88-121-101-080	OE	RES,100-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0524	88-121-101-080	OE	RES,100-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0525	88-130-331-080		RES,330-1/4W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0525	88-130-331-080		RES,330-1/4W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0525	88-130-331-080	OE	RES,330-1/4W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0525	88-130-331-080	OE	RES,330-1/4W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0526	88-130-471-080		RES,470-1/4W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0526	88-130-471-080		RES,470-1/4W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0526	88-130-471-080	OE	RES,470-1/4W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0526	88-130-471-080	OE	RES,470-1/4W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0527	88-121-332-080		RES,3.3K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0527	88-121-332-080		RES,3.3K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0527	88-121-332-080	OE	RES,3.3K-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0527	88-121-332-080	OE	RES,3.3K-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0528	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0528	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0528	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0528	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	FUNC/BUFF	R 0529	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0529	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0529	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0529	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0530	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0530	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0530	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0530	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0575	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0575	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0575	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0575	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0576	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0576	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0576	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0576	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0577	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0577	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0577	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0577	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0578	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0578	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0578	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0578	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0579	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0579	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0579	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0579	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0580	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0580	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0580	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0580	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0581	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0581	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0581	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0581	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0582	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0582	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0582	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0582	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0583	88-121-101-080		RES,100-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0583	88-121-101-080		RES,100-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0583	88-121-101-080	OE	RES,100-1/8W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0583	88-121-101-080	OE	RES,100-1/8W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0584	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0584	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0584	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0584	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0585	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0585	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0585	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0585	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0631	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0631	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0631	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0631	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0632	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0632	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0632	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0632	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0633	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0633	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0633	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0633	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0634	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0634	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0634	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0634	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0635	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0635	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	FUNC/BUFF	R 0635	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0635	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0636	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0636	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0636	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0636	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0637	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0637	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0637	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0637	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0638	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0638	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0638	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0638	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0639	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0639	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0639	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0639	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0640	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0640	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0640	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0640	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0641	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0641	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0641	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0641	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0642	88-118-822-080		C-RES,S 8.2K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0642	88-118-822-080		C-RES,S 8.2K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0642	88-118-822-080	OE	C-RES,S 8.2K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0642	88-118-822-080	OE	C-RES,S 8.2K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0643	88-118-822-080		C-RES,S 8.2K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0643	88-118-822-080		C-RES,S 8.2K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0643	88-118-822-080	OE	C-RES,S 8.2K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0643	88-118-822-080	OE	C-RES,S 8.2K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0644	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0644	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0644	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0644	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0645	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0645	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0645	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0645	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0646	88-118-392-080		C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0646	88-118-392-080		C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0646	88-118-392-080	OE	C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0646	88-118-392-080	OE	C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0647	88-118-392-080		C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0647	88-118-392-080		C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
X	FUNC/BUFF	R 0647	88-118-392-080	OE	C-RES,S 3.9K-1/10W J	YKSM	FD-SLM800
X	FUNC/BUFF	R 0647	88-118-392-080	OE	C-RES,S 3.9K-1/10W J	YEZSM	FD-SLM801
O	KEY	CN 0206	87-A60-666-010		CONN,2P H 2MM JMT	YKSM	FD-SLM800
O	KEY	CN 0206	87-A60-666-010		CONN,2P H 2MM JMT	YEZSM	FD-SLM801
O	KEY	CN 0206	87-A60-666-010	OE	CONN,2P H 2MM JMT	YKSM	FD-SLM800
O	KEY	CN 0206	87-A60-666-010	OE	CONN,2P H 2MM JMT	YEZSM	FD-SLM801
X	KEY	JR 0304	88-129-000-080		C-JUMPER,3216	YKSM	FD-SLM800
X	KEY	JR 0304	88-129-000-080		C-JUMPER,3216	YEZSM	FD-SLM801
X	KEY	JR 0304	88-129-000-080	OE	C-JUMPER,3216	YKSM	FD-SLM800
X	KEY	JR 0304	88-129-000-080	OE	C-JUMPER,3216	YEZSM	FD-SLM801
X	KEY	JR 0305	88-118-000-080	OE	C-JUMPER,S	YKSM	FD-SLM800
X	KEY	JR 0305	88-118-000-080	OE	C-JUMPER,S	YEZSM	FD-SLM801
X	KEY	JR 0306	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	KEY	JR 0306	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	KEY	JR 0306	88-118-000-080	OE	C-JUMPER,S	YKSM	FD-SLM800
X	KEY	JR 0306	88-118-000-080	OE	C-JUMPER,S	YEZSM	FD-SLM801
X	KEY	JR 0310	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	KEY	JR 0310	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	KEY	JR 0310	88-118-000-080	OE	C-JUMPER,S	YKSM	FD-SLM800
X	KEY	JR 0310	88-118-000-080	OE	C-JUMPER,S	YEZSM	FD-SLM801
X	KEY	JR 0311	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	KEY	JR 0311	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X KEY		JR 0311	88-118-000-080	OE	C-JUMPER, S	YKSM	FD-SLM800
X KEY		JR 0311	88-118-000-080	OE	C-JUMPER, S	YEZSM	FD-SLM801
X KEY		JR 0312	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X KEY		JR 0312	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X KEY		JR 0312	88-118-000-080	OE	C-JUMPER, S	YKSM	FD-SLM800
X KEY		JR 0312	88-118-000-080	OE	C-JUMPER, S	YEZSM	FD-SLM801
X KEY		JR 0313	88-118-000-080		C-JUMPER, S	YKSM	FD-SLM800
X KEY		JR 0313	88-118-000-080		C-JUMPER, S	YEZSM	FD-SLM801
X KEY		JR 0313	88-118-000-080	OE	C-JUMPER, S	YKSM	FD-SLM800
X KEY		JR 0313	88-118-000-080	OE	C-JUMPER, S	YEZSM	FD-SLM801
X KEY		R 0301	88-118-102-080		C-RES, S 1K-1/10W J	YKSM	FD-SLM800
X KEY		R 0301	88-118-102-080		C-RES, S 1K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0301	88-118-102-080	OE	C-RES, S 1K-1/10W J	YKSM	FD-SLM800
X KEY		R 0301	88-118-102-080	OE	C-RES, S 1K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0302	88-118-821-080		C-RES, S 820-1/10W J	YKSM	FD-SLM800
X KEY		R 0302	88-118-821-080		C-RES, S 820-1/10W J	YEZSM	FD-SLM801
X KEY		R 0302	88-118-821-080	OE	C-RES, S 820-1/10W J	YKSM	FD-SLM800
X KEY		R 0302	88-118-821-080	OE	C-RES, S 820-1/10W J	YEZSM	FD-SLM801
X KEY		R 0303	88-118-102-080		C-RES, S 1K-1/10W J	YKSM	FD-SLM800
X KEY		R 0303	88-118-102-080		C-RES, S 1K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0303	88-118-102-080	OE	C-RES, S 1K-1/10W J	YKSM	FD-SLM800
X KEY		R 0303	88-118-102-080	OE	C-RES, S 1K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0304	88-118-122-080		C-RES, S 1.2K-1/10W J	YKSM	FD-SLM800
X KEY		R 0304	88-118-122-080		C-RES, S 1.2K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0304	88-118-122-080	OE	C-RES, S 1.2K-1/10W J	YKSM	FD-SLM800
X KEY		R 0304	88-118-122-080	OE	C-RES, S 1.2K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0305	88-118-103-080		C-RES, S 10K-1/10W J	YKSM	FD-SLM800
X KEY		R 0305	88-118-103-080		C-RES, S 10K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0305	88-118-103-080	OE	C-RES, S 10K-1/10W J	YKSM	FD-SLM800
X KEY		R 0305	88-118-103-080	OE	C-RES, S 10K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0306	88-118-391-080		C-RES, S 390-1/10W J	YKSM	FD-SLM800
X KEY		R 0306	88-118-391-080		C-RES, S 390-1/10W J	YEZSM	FD-SLM801
X KEY		R 0306	88-118-391-080	OE	C-RES, S 390-1/10W J	YKSM	FD-SLM800
X KEY		R 0306	88-118-391-080	OE	C-RES, S 390-1/10W J	YEZSM	FD-SLM801
X KEY		R 0307	88-118-472-080		C-RES, S 4.7K-1/10W J	YKSM	FD-SLM800
X KEY		R 0307	88-118-472-080		C-RES, S 4.7K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0307	88-118-472-080	OE	C-RES, S 4.7K-1/10W J	YKSM	FD-SLM800
X KEY		R 0307	88-118-472-080	OE	C-RES, S 4.7K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0308	88-118-682-080		C-RES, S 6.8K-1/10W J	YKSM	FD-SLM800
X KEY		R 0308	88-118-682-080		C-RES, S 6.8K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0308	88-118-682-080	OE	C-RES, S 6.8K-1/10W J	YKSM	FD-SLM800
X KEY		R 0308	88-118-682-080	OE	C-RES, S 6.8K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0309	88-118-103-080		C-RES, S 10K-1/10W J	YKSM	FD-SLM800
X KEY		R 0309	88-118-103-080		C-RES, S 10K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0309	88-118-103-080	OE	C-RES, S 10K-1/10W J	YKSM	FD-SLM800
X KEY		R 0309	88-118-103-080	OE	C-RES, S 10K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0310	88-118-183-080		C-RES, S 18K-1/10W J	YKSM	FD-SLM800
X KEY		R 0310	88-118-183-080		C-RES, S 18K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0310	88-118-183-080	OE	C-RES, S 18K-1/10W J	YKSM	FD-SLM800
X KEY		R 0310	88-118-183-080	OE	C-RES, S 18K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0311	88-118-473-080		C-RES, S 47K-1/10W J	YKSM	FD-SLM800
X KEY		R 0311	88-118-473-080		C-RES, S 47K-1/10W J	YEZSM	FD-SLM801
X KEY		R 0311	88-118-473-080	OE	C-RES, S 47K-1/10W J	YKSM	FD-SLM800
X KEY		R 0311	88-118-473-080	OE	C-RES, S 47K-1/10W J	YEZSM	FD-SLM801
O KEY		S 0301	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0301	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0301	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0301	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0302	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0302	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0302	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0302	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0303	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0303	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0303	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0303	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0304	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0304	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0304	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0304	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O KEY		S 0305	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0305	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0305	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0305	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0306	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0306	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0306	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0306	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0307	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0307	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0307	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0307	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0308	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0308	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0308	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0308	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0309	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0309	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0309	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0309	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0310	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0310	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0310	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0310	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0311	87-A91-024-180		SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0311	87-A91-024-180		SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KEY		S 0311	87-A91-024-180	OE	SW, TACT KSHG611BT	YKSM	FD-SLM800
O KEY		S 0311	87-A91-024-180	OE	SW, TACT KSHG611BT	YEZSM	FD-SLM801
O KNOB			8A-CR2-008-010		KEY, POWER	YKSM	FD-SLM800
O KNOB			8A-CR2-008-010		KEY, POWER	YEZSM	FD-SLM801
O KNOB			8A-CV2-010-010	--	KEY, FUN	YKSM	FD-SLM800
O KNOB			8A-CV2-010-010	--	KEY, FUN	YEZSM	FD-SLM801
O KNOB			8A-CV2-010-010	--	KEY, FUN	YKSM	FD-SLM800
O KNOB			8A-CV2-010-010	--	KEY, FUN	YEZSM	FD-SLM801
O KNOB			8A-CV2-011-010		KEY, EJECT	YKSM	FD-SLM800
O KNOB			8A-CV2-011-010		KEY, EJECT	YEZSM	FD-SLM801
O KNOB			8A-CV2-011-010	1A	KEY, EJECT	YKSM	FD-SLM800
O KNOB			8A-CV2-011-010	1A	KEY, EJECT	YEZSM	FD-SLM801
O LEVEL		C 0535	87-016-044-040		CAP, E 100-16 M 5L MA	YKSM	FD-SLM800
O LEVEL		C 0535	87-016-044-040		CAP, E 100-16 M 5L MA	YEZSM	FD-SLM801
O LEVEL		C 0535	87-016-044-040	OE	CAP, E 100-16 M 5L MA	YKSM	FD-SLM800
O LEVEL		C 0535	87-016-044-040	OE	CAP, E 100-16 M 5L MA	YEZSM	FD-SLM801
O LEVEL		C 0536	87-012-142-080		C-CAP, S 0.33-16 Z F GRM	YKSM	FD-SLM800
O LEVEL		C 0536	87-012-142-080		C-CAP, S 0.33-16 Z F GRM	YEZSM	FD-SLM801
O LEVEL		C 0536	87-012-142-080	OE	C-CAP, S 0.33-16 Z F GRM	YKSM	FD-SLM800
O LEVEL		C 0536	87-012-142-080	OE	C-CAP, S 0.33-16 Z F GRM	YEZSM	FD-SLM801
O LEVEL		C 0537	87-010-493-040		CAP, E 0.47-50 M 5L SRE	YKSM	FD-SLM800
O LEVEL		C 0537	87-010-493-040		CAP, E 0.47-50 M 5L SRE	YEZSM	FD-SLM801
O LEVEL		C 0537	87-010-493-040	OE	CAP, E 0.47-50 M 5L SRE	YKSM	FD-SLM800
O LEVEL		C 0537	87-010-493-040	OE	CAP, E 0.47-50 M 5L SRE	YEZSM	FD-SLM801
O LEVEL		C 0538	87-010-495-040		CAP, E 2.2-50 M 5L SRE	YKSM	FD-SLM800
O LEVEL		C 0538	87-010-495-040		CAP, E 2.2-50 M 5L SRE	YEZSM	FD-SLM801
O LEVEL		C 0538	87-010-495-040	OE	CAP, E 2.2-50 M 5L SRE	YKSM	FD-SLM800
O LEVEL		C 0538	87-010-495-040	OE	CAP, E 2.2-50 M 5L SRE	YEZSM	FD-SLM801
S LEVEL		D 0531	87-020-465-080		DIODE, 1SS133	YKSM	FD-SLM800
S LEVEL		D 0531	87-020-465-080		DIODE, 1SS133	YEZSM	FD-SLM801
S LEVEL		D 0531	87-020-465-080	OE	DIODE, 1SS133	YKSM	FD-SLM800
S LEVEL		D 0531	87-020-465-080	OE	DIODE, 1SS133	YEZSM	FD-SLM801
S LEVEL		D 0532	87-020-465-080		DIODE, 1SS133	YKSM	FD-SLM800
S LEVEL		D 0532	87-020-465-080		DIODE, 1SS133	YEZSM	FD-SLM801
S LEVEL		D 0532	87-020-465-080	OE	DIODE, 1SS133	YKSM	FD-SLM800
S LEVEL		D 0532	87-020-465-080	OE	DIODE, 1SS133	YEZSM	FD-SLM801
S LEVEL		Q 0535	87-026-610-080		TR, KTC3198GR	YKSM	FD-SLM800
S LEVEL		Q 0535	87-026-610-080		TR, KTC3198GR	YEZSM	FD-SLM801
S LEVEL		Q 0535	87-026-610-080	OE	TR, KTC3198GR	YKSM	FD-SLM800
S LEVEL		Q 0535	87-026-610-080	OE	TR, KTC3198GR	YEZSM	FD-SLM801
S LEVEL		Q 0536	87-026-610-080		TR, KTC3198GR	YKSM	FD-SLM800
S LEVEL		Q 0536	87-026-610-080		TR, KTC3198GR	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME	
S	LEVEL	Q 0536	87-026-610-080	OE	TR,KTC3198GR	YKSM	FD-SLM800	
S	LEVEL	Q 0536	87-026-610-080	OE	TR,KTC3198GR	YEZSM	FD-SLM801	
S	LEVEL	Q 0537	87-026-610-080		TR,KTC3198GR	YKSM	FD-SLM800	
S	LEVEL	Q 0537	87-026-610-080		TR,KTC3198GR	YEZSM	FD-SLM801	
S	LEVEL	Q 0537	87-026-610-080	OE	TR,KTC3198GR	YKSM	FD-SLM800	
S	LEVEL	Q 0537	87-026-610-080	OE	TR,KTC3198GR	YEZSM	FD-SLM801	
X	LEVEL	R 0535	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0535	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0535	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0535	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0536	88-118-153-080		C-RES,S 15K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0536	88-118-153-080		C-RES,S 15K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0536	88-118-153-080	OE	C-RES,S 15K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0536	88-118-153-080	OE	C-RES,S 15K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0537	88-118-153-080		C-RES,S 15K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0537	88-118-153-080		C-RES,S 15K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0537	88-118-153-080	OE	C-RES,S 15K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0537	88-118-153-080	OE	C-RES,S 15K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0538	88-118-274-080		C-RES,S 270K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0538	88-118-274-080		C-RES,S 270K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0538	88-118-274-080	OE	C-RES,S 270K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0538	88-118-274-080	OE	C-RES,S 270K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0539	88-118-563-080		C-RES,S 56K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0539	88-118-563-080		C-RES,S 56K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0539	88-118-563-080	OE	C-RES,S 56K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0539	88-118-563-080	OE	C-RES,S 56K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0540	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0540	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0540	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0540	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0541	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0541	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0541	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0541	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0542	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0542	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0542	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0542	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0543	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0543	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0543	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0543	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0544	88-118-222-080		C-RES,S 2.2K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0544	88-118-222-080		C-RES,S 2.2K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0544	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	YKSM	FD-SLM800	
X	LEVEL	R 0544	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	YEZSM	FD-SLM801	
X	LEVEL	R 0545	88-121-101-080		RES,100-1/8W J	YKSM	FD-SLM800	
X	LEVEL	R 0545	88-121-101-080		RES,100-1/8W J	YEZSM	FD-SLM801	
X	LEVEL	R 0545	88-121-101-080	OE	RES,100-1/8W J	YKSM	FD-SLM800	
X	LEVEL	R 0545	88-121-101-080	OE	RES,100-1/8W J	YEZSM	FD-SLM801	
X	LEVEL	R 0546	88-121-153-080		RES,15K-1/8W J	YKSM	FD-SLM800	
X	LEVEL	R 0546	88-121-153-080		RES,15K-1/8W J	YEZSM	FD-SLM801	
X	LEVEL	R 0546	88-121-153-080	OE	RES,15K-1/8W J	YKSM	FD-SLM800	
X	LEVEL	R 0546	88-121-153-080	OE	RES,15K-1/8W J	YEZSM	FD-SLM801	
O	LOADING (TAPE)	C 0701	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800	
O	LOADING (TAPE)	C 0701	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801	
O	LOADING (TAPE)	C 0701	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800	
O	LOADING (TAPE)	C 0701	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801	
O	LOADING (TAPE)	C 0702	87-016-044-080		CAP,E 100-16 5L GAS	YKSM	FD-SLM800	
O	LOADING (TAPE)	C 0702	87-016-044-080		CAP,E 100-16 5L GAS	YEZSM	FD-SLM801	
O	LOADING (TAPE)	C 0702	87-016-044-080	OE	CAP,E 100-16 5L GAS	YKSM	FD-SLM800	
O	LOADING (TAPE)	C 0702	87-016-044-080	OE	CAP,E 100-16 5L GAS	YEZSM	FD-SLM801	
O	LOADING (TAPE)	C 0703	87-010-140-010	1A	CAP,E 47-16 M BP EB	YKSM	FD-SLM800	
O	LOADING (TAPE)	C 0703	87-010-140-010	1A	CAP,E 47-16 M BP EB	YEZSM	FD-SLM801	
Z	LOADING (TAPE)	C 0703	87-010-140-010		CAP,E 47-16 M BP EB	YKSM	FD-SLM800	
Z	LOADING (TAPE)	C 0703	87-010-140-010		CAP,E 47-16 M BP EB	YEZSM	FD-SLM801	
O	LOADING (TAPE)	CN 0752	87-A60-062-010		CONN,05P V 9604S-05C	YKSM	FD-SLM800	
O	LOADING (TAPE)	CN 0752	87-A60-062-010		CONN,05P V 9604S-05C	YEZSM	FD-SLM801	
!	O	LOADING (TAPE)	CN 0752	87-A60-062-010	OE	CONN,05P V 9604S-05C	YKSM	FD-SLM800
!	O	LOADING (TAPE)	CN 0752	87-A60-062-010	OE	CONN,05P V 9604S-05C	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	LOADING (TAPE)	CNA0701	8A-CV2-661-010		CONN ASSY, 9P 2MM	YKSM	FD-SLM800
O	LOADING (TAPE)	CNA0701	8A-CV2-661-010		CONN ASSY, 9P 2MM	YEZSM	FD-SLM801
O	LOADING (TAPE)	CNA0701	8A-CV2-661-010	1A	CONN ASSY, 9P 2MM	YKSM	FD-SLM800
O	LOADING (TAPE)	CNA0701	8A-CV2-661-010	1A	CONN ASSY, 9P 2MM	YEZSM	FD-SLM801
S	LOADING (TAPE)	D 0751	87-020-465-080		DIODE, 1SS133	YKSM	FD-SLM800
S	LOADING (TAPE)	D 0751	87-020-465-080		DIODE, 1SS133	YEZSM	FD-SLM801
S	LOADING (TAPE)	D 0751	87-020-465-080	OE	DIODE, 1SS133	YKSM	FD-SLM800
S	LOADING (TAPE)	D 0751	87-020-465-080	OE	DIODE, 1SS133	YEZSM	FD-SLM801
S	LOADING (TAPE)	IC 0703	87-001-982-010		IC, TA7291S	YKSM	FD-SLM800
S	LOADING (TAPE)	IC 0703	87-001-982-010		IC, TA7291S	YEZSM	FD-SLM801
S	LOADING (TAPE)	IC 0703	87-001-982-010	1B	IC, TA7291S	YKSM	FD-SLM800
S	LOADING (TAPE)	IC 0703	87-001-982-010	1B	IC, TA7291S	YEZSM	FD-SLM801
S	LOADING (TAPE)	Q 0751	87-A30-073-080		C-TR, RT1N 141C	YKSM	FD-SLM800
S	LOADING (TAPE)	Q 0751	87-A30-073-080		C-TR, RT1N 141C	YEZSM	FD-SLM801
S	LOADING (TAPE)	Q 0751	87-A30-073-080	OE	C-TR, RT1N 141C	YKSM	FD-SLM800
S	LOADING (TAPE)	Q 0751	87-A30-073-080	OE	C-TR, RT1N 141C	YEZSM	FD-SLM801
S	LOADING (TAPE)	Q 0752	87-A30-240-080		TR, CSA1585BC	YKSM	FD-SLM800
S	LOADING (TAPE)	Q 0752	87-A30-240-080		TR, CSA1585BC	YEZSM	FD-SLM801
S	LOADING (TAPE)	Q 0752	87-A30-240-080	OE	TR, CSA1585BC	YKSM	FD-SLM800
S	LOADING (TAPE)	Q 0752	87-A30-240-080	OE	TR, CSA1585BC	YEZSM	FD-SLM801
S	LOADING (TAPE)	Q 0753	87-A30-240-080		TR, CSA1585BC	YKSM	FD-SLM800
S	LOADING (TAPE)	Q 0753	87-A30-240-080		TR, CSA1585BC	YEZSM	FD-SLM801
S	LOADING (TAPE)	Q 0753	87-A30-240-080	OE	TR, CSA1585BC	YKSM	FD-SLM800
S	LOADING (TAPE)	Q 0753	87-A30-240-080	OE	TR, CSA1585BC	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0701	88-118-682-080		C-RES, S 6.8K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0701	88-118-682-080		C-RES, S 6.8K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0701	88-118-682-080	OE	C-RES, S 6.8K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0701	88-118-682-080	OE	C-RES, S 6.8K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0702	88-118-392-080		C-RES, S 3.9K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0702	88-118-392-080		C-RES, S 3.9K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0702	88-118-392-080	OE	C-RES, S 3.9K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0702	88-118-392-080	OE	C-RES, S 3.9K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0703	88-118-153-080		C-RES, S 15K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0703	88-118-153-080		C-RES, S 15K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0703	88-118-153-080	OE	C-RES, S 15K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0703	88-118-153-080	OE	C-RES, S 15K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0704	88-118-562-080		C-RES, S 5.6K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0704	88-118-562-080		C-RES, S 5.6K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0704	88-118-562-080	OE	C-RES, S 5.6K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0704	88-118-562-080	OE	C-RES, S 5.6K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0705	88-118-104-080		C-RES, S 100K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0705	88-118-104-080		C-RES, S 100K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0705	88-118-104-080	OE	C-RES, S 100K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0705	88-118-104-080	OE	C-RES, S 100K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0706	88-140-339-080		RES, 3.3-1/2W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0706	88-140-339-080		RES, 3.3-1/2W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0706	88-140-339-080	OE	RES, 3.3-1/2W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0706	88-140-339-080	OE	RES, 3.3-1/2W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0707	88-118-332-080		C-RES, S 3.3K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0707	88-118-332-080		C-RES, S 3.3K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0707	88-118-332-080	OE	C-RES, S 3.3K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0707	88-118-332-080	OE	C-RES, S 3.3K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0708	88-118-152-080		C-RES, S 1.5K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0708	88-118-152-080		C-RES, S 1.5K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0708	88-118-152-080	OE	C-RES, S 1.5K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0708	88-118-152-080	OE	C-RES, S 1.5K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0709	88-118-562-080		C-RES, S 5.6K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0709	88-118-562-080		C-RES, S 5.6K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0709	88-118-562-080	OE	C-RES, S 5.6K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0709	88-118-562-080	OE	C-RES, S 5.6K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0710	88-118-104-080		C-RES, S 100K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0710	88-118-104-080		C-RES, S 100K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0710	88-118-104-080	OE	C-RES, S 100K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0710	88-118-104-080	OE	C-RES, S 100K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0751	88-118-223-080		C-RES, S 22K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0751	88-118-223-080		C-RES, S 22K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0751	88-118-223-080	OE	C-RES, S 22K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0751	88-118-223-080	OE	C-RES, S 22K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0752	88-118-103-080		C-RES, S 10K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0752	88-118-103-080		C-RES, S 10K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	LOADING (TAPE)	R 0752	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0752	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0753	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0753	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0753	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0753	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0756	88-118-222-080		C-RES,S 2.2K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0756	88-118-222-080		C-RES,S 2.2K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0756	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0756	88-118-222-080	OE	C-RES,S 2.2K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0758	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0758	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	LOADING (TAPE)	R 0758	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	LOADING (TAPE)	R 0758	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON		8A-CV2-631-010		PWB,CD-MICOM	YKSM	FD-SLM800
X	MICON		8A-CV2-631-010		PWB,CD-MICOM	YEZSM	FD-SLM801
X	MICON		8A-CV2-631-010	--	PWB,CD-MICOM	YKSM	FD-SLM800
X	MICON		8A-CV2-631-010	--	PWB,CD-MICOM	YEZSM	FD-SLM801
O	MICON	C 0201	87-010-560-040		CAP,E 10-50 M 5L MA	YKSM	FD-SLM800
O	MICON	C 0201	87-010-560-040		CAP,E 10-50 M 5L MA	YEZSM	FD-SLM801
O	MICON	C 0201	87-010-560-040	OE	CAP,E 10-50 M 5L MA	YKSM	FD-SLM800
O	MICON	C 0201	87-010-560-040	OE	CAP,E 10-50 M 5L MA	YEZSM	FD-SLM801
O	MICON	C 0202	87-010-194-080		C-CAP,S 0.047-25 Z F	YKSM	FD-SLM800
O	MICON	C 0202	87-010-194-080		C-CAP,S 0.047-25 Z F	YEZSM	FD-SLM801
O	MICON	C 0202	87-010-194-080	OE	C-CAP,S 0.047-25 Z F	YKSM	FD-SLM800
O	MICON	C 0202	87-010-194-080	OE	C-CAP,S 0.047-25 Z F	YEZSM	FD-SLM801
O	MICON	C 0204	87-010-194-080		C-CAP,S 0.047-25 Z F	YKSM	FD-SLM800
O	MICON	C 0204	87-010-194-080		C-CAP,S 0.047-25 Z F	YEZSM	FD-SLM801
O	MICON	C 0204	87-010-194-080	OE	C-CAP,S 0.047-25 Z F	YKSM	FD-SLM800
O	MICON	C 0204	87-010-194-080	OE	C-CAP,S 0.047-25 Z F	YEZSM	FD-SLM801
O	MICON	C 0205	87-010-264-040		CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O	MICON	C 0205	87-010-264-040		CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O	MICON	C 0205	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YKSM	FD-SLM800
O	MICON	C 0205	87-010-264-040	OE	CAP,E 100-10 M 5L SRE	YEZSM	FD-SLM801
O	MICON	C 0206	87-010-493-040		CAP,E 0.47-50 M 5L SRE	YKSM	FD-SLM800
O	MICON	C 0206	87-010-493-040		CAP,E 0.47-50 M 5L SRE	YEZSM	FD-SLM801
O	MICON	C 0206	87-010-493-040	OE	CAP,E 0.47-50 M 5L SRE	YKSM	FD-SLM800
O	MICON	C 0206	87-010-493-040	OE	CAP,E 0.47-50 M 5L SRE	YEZSM	FD-SLM801
O	MICON	C 0207	87-A10-759-040		CAP,E 330-6.3 SRM	YKSM	FD-SLM800
O	MICON	C 0207	87-A10-759-040		CAP,E 330-6.3 SRM	YEZSM	FD-SLM801
O	MICON	C 0207	87-A10-759-040	OE	CAP,E 330-6.3 SRM	YKSM	FD-SLM800
O	MICON	C 0207	87-A10-759-040	OE	CAP,E 330-6.3 SRM	YEZSM	FD-SLM801
O	MICON	C 0208	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	MICON	C 0208	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	MICON	C 0208	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	MICON	C 0208	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	MICON	C 0209	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	MICON	C 0209	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	MICON	C 0209	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	MICON	C 0209	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	MICON	C 0221	87-010-314-080		C-CAP,S 22P-50 J CH GRM	YKSM	FD-SLM800
O	MICON	C 0221	87-010-314-080		C-CAP,S 22P-50 J CH GRM	YEZSM	FD-SLM801
O	MICON	C 0221	87-010-314-080	OE	C-CAP,S 22P-50 J CH GRM	YKSM	FD-SLM800
O	MICON	C 0221	87-010-314-080	OE	C-CAP,S 22P-50 J CH GRM	YEZSM	FD-SLM801
O	MICON	C 0222	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	MICON	C 0222	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	MICON	C 0222	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	MICON	C 0222	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	MICON	C 0223	87-010-316-080		C-CAP,S 33P-50 J CH GRM	YKSM	FD-SLM800
O	MICON	C 0223	87-010-316-080		C-CAP,S 33P-50 J CH GRM	YEZSM	FD-SLM801
O	MICON	C 0223	87-010-316-080	OE	C-CAP,S 33P-50 J CH GRM	YKSM	FD-SLM800
O	MICON	C 0223	87-010-316-080	OE	C-CAP,S 33P-50 J CH GRM	YEZSM	FD-SLM801
O	MICON	C 0224	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O	MICON	C 0224	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O	MICON	C 0224	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O	MICON	C 0224	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O	MICON	C 0225	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O	MICON	C 0225	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O	MICON	C 0225	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O	MICON	C 0225	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O MICON		C 0228	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O MICON		C 0228	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O MICON		C 0228	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O MICON		C 0228	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O MICON		C 0270	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0270	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0270	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0270	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0271	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0271	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0271	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0271	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0272	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0272	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0272	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0272	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0273	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0273	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0273	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0273	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0274	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0274	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0274	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0274	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0275	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0275	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0275	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0275	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0451	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0451	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0451	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0451	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0452	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0452	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0452	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0452	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0453	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0453	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0453	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0453	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0454	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0454	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0454	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0454	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0455	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0455	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0455	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0455	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0456	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0456	87-010-322-080		C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
O MICON		C 0456	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YKSM	FD-SLM800
O MICON		C 0456	87-010-322-080	OE	C-CAP,S 100P-50 J CH GRM	YEZSM	FD-SLM801
S MICON		D 0201	87-070-274-080		DIODE,1N4003 SEM	YKSM	FD-SLM800
S MICON		D 0201	87-070-274-080		DIODE,1N4003 SEM	YEZSM	FD-SLM801
S MICON		D 0201	87-070-274-080	OE	DIODE,1N4003 SEM	YKSM	FD-SLM800
S MICON		D 0201	87-070-274-080	OE	DIODE,1N4003 SEM	YEZSM	FD-SLM801
S MICON		D 0202	87-A40-509-080		ZENER,MTZJ6.8C	YKSM	FD-SLM800
S MICON		D 0202	87-A40-509-080		ZENER,MTZJ6.8C	YEZSM	FD-SLM801
S MICON		D 0202	87-A40-509-080	OE	ZENER,MTZJ6.8C	YKSM	FD-SLM800
S MICON		D 0202	87-A40-509-080	OE	ZENER,MTZJ6.8C	YEZSM	FD-SLM801
S MICON		D 0203	87-A40-269-080		C-DIODE,MC2836	YKSM	FD-SLM800
S MICON		D 0203	87-A40-269-080		C-DIODE,MC2836	YEZSM	FD-SLM801
S MICON		D 0203	87-A40-269-080	OE	C-DIODE,MC2836	YKSM	FD-SLM800
S MICON		D 0203	87-A40-269-080	OE	C-DIODE,MC2836	YEZSM	FD-SLM801
S MICON		D 0204	87-A40-270-080		C-DIODE,MC2838	YKSM	FD-SLM800
S MICON		D 0204	87-A40-270-080		C-DIODE,MC2838	YEZSM	FD-SLM801
S MICON		D 0204	87-A40-270-080	OE	C-DIODE,MC2838	YKSM	FD-SLM800
S MICON		D 0204	87-A40-270-080	OE	C-DIODE,MC2838	YEZSM	FD-SLM801
S MICON		D 0215	87-020-465-080		DIODE,1SS133	YKSM	FD-SLM800
S MICON		D 0215	87-020-465-080		DIODE,1SS133	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
S	MICON	D 0215	87-020-465-080	0E	DIODE,1SS133	YKSM	FD-SLM800
S	MICON	D 0215	87-020-465-080	0E	DIODE,1SS133	YEZSM	FD-SLM801
S	MICON	D 0216	87-020-465-080		DIODE,1SS133	YKSM	FD-SLM800
S	MICON	D 0216	87-020-465-080		DIODE,1SS133	YEZSM	FD-SLM801
S	MICON	D 0216	87-020-465-080	0E	DIODE,1SS133	YKSM	FD-SLM800
S	MICON	D 0216	87-020-465-080	0E	DIODE,1SS133	YEZSM	FD-SLM801
S	MICON	D 0217	87-020-465-080		DIODE,1SS133	YKSM	FD-SLM800
S	MICON	D 0217	87-020-465-080		DIODE,1SS133	YEZSM	FD-SLM801
S	MICON	D 0217	87-020-465-080	0E	DIODE,1SS133	YKSM	FD-SLM800
S	MICON	D 0217	87-020-465-080	0E	DIODE,1SS133	YEZSM	FD-SLM801
S	MICON	D 0220	87-020-465-080		DIODE,1SS133	YKSM	FD-SLM800
S	MICON	D 0220	87-020-465-080		DIODE,1SS133	YEZSM	FD-SLM801
S	MICON	D 0220	87-020-465-080	0E	DIODE,1SS133	YKSM	FD-SLM800
S	MICON	D 0220	87-020-465-080	0E	DIODE,1SS133	YEZSM	FD-SLM801
S	MICON	D 0221	87-020-465-080		DIODE,1SS133	YKSM	FD-SLM800
S	MICON	D 0221	87-020-465-080		DIODE,1SS133	YEZSM	FD-SLM801
S	MICON	D 0221	87-020-465-080	0E	DIODE,1SS133	YKSM	FD-SLM800
S	MICON	D 0221	87-020-465-080	0E	DIODE,1SS133	YEZSM	FD-SLM801
S	MICON	IC 0201	8A-CV2-600-030	--	C-IC,LC876564V-***	YKSM	FD-SLM800
S	MICON	IC 0201	8A-CV2-600-030	--	C-IC,LC876564V-***	YEZSM	FD-SLM801
O	S MICON	IC 0201	8A-CV2-600-030		C-IC,LC876564V-***	YKSM	FD-SLM800
O	S MICON	IC 0201	8A-CV2-600-030		C-IC,LC876564V-***	YEZSM	FD-SLM801
X	MICON	JR 0220	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	MICON	JR 0220	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	MICON	JR 0220	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	MICON	JR 0220	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	MICON	JR 0221	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	MICON	JR 0221	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	MICON	JR 0221	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	MICON	JR 0221	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	MICON	JR 0222	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	MICON	JR 0222	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	MICON	JR 0222	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	MICON	JR 0222	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	MICON	JR 0223	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	MICON	JR 0223	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	MICON	JR 0223	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	MICON	JR 0223	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	MICON	JR 0224	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	MICON	JR 0224	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	MICON	JR 0224	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	MICON	JR 0224	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
O	MICON	L 0201	87-A50-333-010		COIL,OSC 9.43MHZ	YKSM	FD-SLM800
O	MICON	L 0201	87-A50-333-010		COIL,OSC 9.43MHZ	YEZSM	FD-SLM801
O	MICON	L 0201	87-A50-333-010	0E	COIL,OSC 9.43MHZ	YKSM	FD-SLM800
O	MICON	L 0201	87-A50-333-010	0E	COIL,OSC 9.43MHZ	YEZSM	FD-SLM801
S	MICON	Q 0201	87-026-610-080		TR,KTC3198GR	YKSM	FD-SLM800
S	MICON	Q 0201	87-026-610-080		TR,KTC3198GR	YEZSM	FD-SLM801
S	MICON	Q 0201	87-026-610-080	0E	TR,KTC3198GR	YKSM	FD-SLM800
S	MICON	Q 0201	87-026-610-080	0E	TR,KTC3198GR	YEZSM	FD-SLM801
S	MICON	Q 0202	87-A30-087-080		C-FET,2SK2158	YKSM	FD-SLM800
S	MICON	Q 0202	87-A30-087-080		C-FET,2SK2158	YEZSM	FD-SLM801
S	MICON	Q 0202	87-A30-087-080	0E	C-FET,2SK2158	YKSM	FD-SLM800
S	MICON	Q 0202	87-A30-087-080	0E	C-FET,2SK2158	YEZSM	FD-SLM801
S	MICON	Q 0215	87-A30-071-080		C-TR,RT1N 144C	YKSM	FD-SLM800
S	MICON	Q 0215	87-A30-071-080		C-TR,RT1N 144C	YEZSM	FD-SLM801
S	MICON	Q 0215	87-A30-071-080	0E	C-TR,RT1N 144C	YKSM	FD-SLM800
S	MICON	Q 0215	87-A30-071-080	0E	C-TR,RT1N 144C	YEZSM	FD-SLM801
S	MICON	Q 0216	87-A30-071-080		C-TR,RT1N 144C	YKSM	FD-SLM800
S	MICON	Q 0216	87-A30-071-080		C-TR,RT1N 144C	YEZSM	FD-SLM801
S	MICON	Q 0216	87-A30-071-080	0E	C-TR,RT1N 144C	YKSM	FD-SLM800
S	MICON	Q 0216	87-A30-071-080	0E	C-TR,RT1N 144C	YEZSM	FD-SLM801
S	MICON	Q 0220	87-A30-087-080		C-FET,2SK2158	YKSM	FD-SLM800
S	MICON	Q 0220	87-A30-087-080		C-FET,2SK2158	YEZSM	FD-SLM801
S	MICON	Q 0220	87-A30-087-080	0E	C-FET,2SK2158	YKSM	FD-SLM800
S	MICON	Q 0220	87-A30-087-080	0E	C-FET,2SK2158	YEZSM	FD-SLM801
S	MICON	Q 0262	87-A30-071-080		C-TR,RT1N 144C	YKSM	FD-SLM800
S	MICON	Q 0262	87-A30-071-080		C-TR,RT1N 144C	YEZSM	FD-SLM801
S	MICON	Q 0262	87-A30-071-080	0E	C-TR,RT1N 144C	YKSM	FD-SLM800
S	MICON	Q 0262	87-A30-071-080	0E	C-TR,RT1N 144C	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
S	MICON	Q 0263	87-A30-074-080		C-TR,RT1P 141C	YKSM	FD-SLM800
S	MICON	Q 0263	87-A30-074-080		C-TR,RT1P 141C	YEZSM	FD-SLM801
S	MICON	Q 0263	87-A30-074-080	OE	C-TR,RT1P 141C	YKSM	FD-SLM800
S	MICON	Q 0263	87-A30-074-080	OE	C-TR,RT1P 141C	YEZSM	FD-SLM801
X	MICON	R 0203	88-118-561-080		C-RES,S 560-1/10W J	YKSM	FD-SLM800
X	MICON	R 0203	88-118-561-080		C-RES,S 560-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0203	88-118-561-080	OE	C-RES,S 560-1/10W J	YKSM	FD-SLM800
X	MICON	R 0203	88-118-561-080	OE	C-RES,S 560-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0204	88-121-100-080		RES,10-1/8W J	YKSM	FD-SLM800
X	MICON	R 0204	88-121-100-080		RES,10-1/8W J	YEZSM	FD-SLM801
X	MICON	R 0204	88-121-100-080	OE	RES,10-1/8W J	YKSM	FD-SLM800
X	MICON	R 0204	88-121-100-080	OE	RES,10-1/8W J	YEZSM	FD-SLM801
X	MICON	R 0206	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0206	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0206	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0206	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0207	88-121-109-080		RES,1-1/8W J	YKSM	FD-SLM800
X	MICON	R 0207	88-121-109-080		RES,1-1/8W J	YEZSM	FD-SLM801
X	MICON	R 0207	88-121-109-080	OE	RES,1-1/8W J	YKSM	FD-SLM800
X	MICON	R 0207	88-121-109-080	OE	RES,1-1/8W J	YEZSM	FD-SLM801
X	MICON	R 0208	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0208	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0208	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0208	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0209	88-118-224-080		C-RES,S 220K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0209	88-118-224-080		C-RES,S 220K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0209	88-118-224-080	OE	C-RES,S 220K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0209	88-118-224-080	OE	C-RES,S 220K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0210	88-118-683-080		C-RES,S 68K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0210	88-118-683-080		C-RES,S 68K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0210	88-118-683-080	OE	C-RES,S 68K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0210	88-118-683-080	OE	C-RES,S 68K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0211	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0211	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0211	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0211	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0212	88-118-274-080		C-RES,S 270K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0212	88-118-274-080		C-RES,S 270K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0212	88-118-274-080	OE	C-RES,S 270K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0212	88-118-274-080	OE	C-RES,S 270K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0213	88-118-224-080		C-RES,S 220K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0213	88-118-224-080		C-RES,S 220K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0213	88-118-224-080	OE	C-RES,S 220K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0213	88-118-224-080	OE	C-RES,S 220K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0215	88-118-123-080		C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0215	88-118-123-080		C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0215	88-118-123-080	OE	C-RES,S 12K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0215	88-118-123-080	OE	C-RES,S 12K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0216	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0216	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0216	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0216	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0217	88-118-223-080		C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0217	88-118-223-080		C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0217	88-118-223-080	OE	C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0217	88-118-223-080	OE	C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0218	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0218	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0218	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0218	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0219	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0219	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0219	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0219	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0222	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0222	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0222	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0222	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0223	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0223	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	MICON	R 0223	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0223	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0224	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0224	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0224	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0224	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0225	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0225	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0225	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0225	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0226	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0226	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0226	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0226	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0228	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0228	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0228	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0228	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0230	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0230	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0230	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0230	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0231	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0231	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0231	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0231	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0232	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0232	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0232	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0232	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0233	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0233	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0234	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0234	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0236	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0236	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0236	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0236	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0238	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0238	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0238	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0238	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0239	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0239	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0239	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0239	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0241	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0241	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0241	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0241	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0244	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0244	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0244	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0244	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0246	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0246	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0246	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0246	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0248	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0248	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0248	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0248	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0250	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0250	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0250	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0250	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0252	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0252	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0252	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0252	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	MICON	R 0253	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0253	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0253	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0253	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0254	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0254	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0254	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0254	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0257	88-118-223-080		C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0257	88-118-223-080		C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0257	88-118-223-080		C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0257	88-118-223-080		C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0257	88-118-223-080	OE	C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0257	88-118-223-080	OE	C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0258	88-118-223-080		C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0258	88-118-223-080		C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0258	88-118-223-080	OE	C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0258	88-118-223-080	OE	C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0259	88-118-223-080		C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0259	88-118-223-080		C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0259	88-118-223-080	OE	C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0259	88-118-223-080	OE	C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0261	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0261	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0261	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0261	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0262	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0262	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0263	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0263	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0263	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0263	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0264	88-118-182-080		C-RES,S 1.8K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0264	88-118-182-080		C-RES,S 1.8K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0264	88-118-182-080	OE	C-RES,S 1.8K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0264	88-118-182-080	OE	C-RES,S 1.8K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0265	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0265	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0265	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0265	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0266	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0266	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0266	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0266	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0267	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0267	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0267	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0267	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0268	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0268	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0268	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0268	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0269	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0269	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0269	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0269	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0270	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0270	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0270	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0270	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0271	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0271	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0271	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0271	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0272	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0272	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0272	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0272	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0273	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0273	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0273	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0273	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	MICON	R 0274	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0274	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0274	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0274	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0275	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0275	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0275	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0275	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0276	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0276	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0276	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0276	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0277	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0277	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0277	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0277	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0278	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0278	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0278	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0278	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0279	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0279	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0279	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0279	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0281	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0281	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0281	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0281	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0282	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0282	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0282	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0282	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0283	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0283	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0283	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0283	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0284	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0284	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0284	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0284	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0285	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0285	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0285	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0285	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0286	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0286	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0286	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0286	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0287	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0287	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0287	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0287	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0289	88-118-182-080		C-RES,S 1.8K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0289	88-118-182-080		C-RES,S 1.8K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0289	88-118-182-080	OE	C-RES,S 1.8K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0289	88-118-182-080	OE	C-RES,S 1.8K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0290	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0290	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0290	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0290	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0291	88-118-182-080		C-RES,S 1.8K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0291	88-118-182-080		C-RES,S 1.8K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0291	88-118-182-080	OE	C-RES,S 1.8K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0291	88-118-182-080	OE	C-RES,S 1.8K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0292	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0292	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0292	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0292	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0293	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0293	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	MICON	R 0293	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0293	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0294	88-118-470-080		C-RES,S 47-1/10W J	YKSM	FD-SLM800
X	MICON	R 0294	88-118-470-080		C-RES,S 47-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0294	88-118-470-080	OE	C-RES,S 47-1/10W J	YKSM	FD-SLM800
X	MICON	R 0294	88-118-470-080	OE	C-RES,S 47-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0295	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0295	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0295	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0295	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0296	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0296	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0296	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0296	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0297	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0297	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0297	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0297	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0298	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0298	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0298	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0298	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0299	88-118-122-080		C-RES,S 1.2K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0299	88-118-122-080		C-RES,S 1.2K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0299	88-118-122-080	OE	C-RES,S 1.2K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0299	88-118-122-080	OE	C-RES,S 1.2K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0331	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0331	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0331	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0331	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0332	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0332	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0332	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0332	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0333	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0333	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0333	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0333	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0334	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0334	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0334	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0334	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0335	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0335	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0335	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0335	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0336	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0336	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0336	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0336	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0337	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0337	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0337	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0337	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0338	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0338	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0338	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0338	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0339	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0339	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0339	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0339	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0340	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0340	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0340	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0340	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0341	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0341	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0341	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0341	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	MICON	R 0342	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0342	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0342	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0342	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0343	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0343	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0343	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0343	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0344	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0344	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0344	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0344	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0345	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0345	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0345	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0345	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0346	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0346	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0346	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	MICON	R 0346	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0451	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0451	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0451	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0451	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0452	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0452	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0452	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0452	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0453	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0453	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0453	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0453	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0454	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0454	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0454	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0454	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0455	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0455	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0455	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0455	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0456	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0456	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	MICON	R 0456	88-118-101-080	OE	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	MICON	R 0456	88-118-101-080	OE	C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	OTHERS		80-MQ1-209-010		CLOTH,20-7	YKSM	FD-SLM800
X	OTHERS		80-MQ1-209-010		CLOTH,20-7	YEZSM	FD-SLM801
X	OTHERS		80-MQ1-209-010	OE	CLOTH,20-7	YKSM	FD-SLM800
X	OTHERS		80-MQ1-209-010	OE	CLOTH,20-7	YEZSM	FD-SLM801
O	OTHERS		87-A91-069-010		MOT,RF-370CA15370	YKSM	FD-SLM800
O	OTHERS		87-A91-069-010		MOT,RF-370CA15370	YEZSM	FD-SLM801
O	OTHERS		87-A91-069-010	1F	MOT,RF-370CA15370	YKSM	FD-SLM800
O	OTHERS		87-A91-069-010	1F	MOT,RF-370CA15370	YEZSM	FD-SLM801
O	OTHERS		88-HV1-207-010		DMPR,MECHA	YKSM	FD-SLM800
O	OTHERS		88-HV1-207-010		DMPR,MECHA	YEZSM	FD-SLM801
O	OTHERS		88-HV1-207-010	OE	DMPR,MECHA	YKSM	FD-SLM800
O	OTHERS		88-HV1-207-010	OE	DMPR,MECHA	YEZSM	FD-SLM801
O	OTHERS		8A-CU2-210-010		FOOT,ACJ-2	YKSM	FD-SLM800
O	OTHERS		8A-CU2-210-010		FOOT,ACJ-2	YEZSM	FD-SLM801
O	OTHERS		8A-CU2-210-010	OE	FOOT,ACJ-2	YKSM	FD-SLM800
O	OTHERS		8A-CU2-210-010	OE	FOOT,ACJ-2	YEZSM	FD-SLM801
O	OTHERS		8A-CV2-201-010		HLDR,GEAR	YKSM	FD-SLM800
O	OTHERS		8A-CV2-201-010		HLDR,GEAR	YEZSM	FD-SLM801
O	OTHERS		8A-CV2-201-010	--	HLDR,GEAR	YKSM	FD-SLM800
O	OTHERS		8A-CV2-201-010	--	HLDR,GEAR	YEZSM	FD-SLM801
O	OTHERS		8A-CV2-202-010		HLDR,MECH(TA)	YKSM	FD-SLM800
O	OTHERS		8A-CV2-202-010		HLDR,MECH(TA)	YEZSM	FD-SLM801
O	OTHERS		8A-CV2-202-010	--	HLDR,MECH(TA)	YKSM	FD-SLM800
O	OTHERS		8A-CV2-202-010	--	HLDR,MECH(TA)	YEZSM	FD-SLM801
O	OTHERS		8A-CV2-206-010		GEAR,PULLEY	YKSM	FD-SLM800
O	OTHERS		8A-CV2-206-010		GEAR,PULLEY	YEZSM	FD-SLM801

! = SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

-64-

! = SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

-65-

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.


Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	OTHERS	S 0352	87-036-109-010	1A	SW,MICRO SPPB61	YKSM	FD-SLM800
O	OTHERS	S 0352	87-036-109-010	1A	SW,MICRO SPPB61	YEZSM	FD-SLM801
O	OTHERS	W 0201	8A-CR2-661-010		F-CABLE,19P 1.5MM 400MM	YKSM	FD-SLM800
O	OTHERS	W 0201	8A-CR2-661-010		F-CABLE,19P 1.5MM 400MM	YEZSM	FD-SLM801
O	OTHERS	W 0201	8A-CR2-661-010	1E	F-CABLE,19P 1.5MM 400MM	YKSM	FD-SLM800
O	OTHERS	W 0201	8A-CR2-661-010	1E	F-CABLE,19P 1.5MM 400MM	YEZSM	FD-SLM801
O	OTHERS	W 0202	8A-CR2-660-010		F-CABLE,15P 1.5MM 400MM	YKSM	FD-SLM800
O	OTHERS	W 0202	8A-CR2-660-010		F-CABLE,15P 1.5MM 400MM	YEZSM	FD-SLM801
O	OTHERS	W 0202	8A-CR2-660-010	1D	F-CABLE,15P 1.5MM 400MM	YKSM	FD-SLM800
O	OTHERS	W 0202	8A-CR2-660-010	1D	F-CABLE,15P 1.5MM 400MM	YEZSM	FD-SLM801
X	PACKING		87-B40-092-010	0E	BAG,PV 0.025-440-500 PL	YKSM	FD-SLM800
X	PACKING		87-B40-092-010	0E	BAG,PV 0.025-440-500 PL	YEZSM	FD-SLM801
G X	PACKING		87-B40-092-010		BAG,PV 0.025-440-500 PL	YKSM	FD-SLM800
G X	PACKING		87-B40-092-010		BAG,PV 0.025-440-500 PL	YEZSM	FD-SLM801
X	PACKING		8A-CU2-855-010	--	CUSHION,LEFT ACU2M	YKSM	FD-SLM800
X	PACKING		8A-CU2-855-010	--	CUSHION,LEFT ACU2M	YEZSM	FD-SLM801
G X	PACKING		8A-CU2-855-010		CUSHION,LEFT ACU2M	YKSM	FD-SLM800
G X	PACKING		8A-CU2-855-010		CUSHION,LEFT ACU2M	YEZSM	FD-SLM801
X	PACKING		8A-CU2-856-010	--	CUSHION,RIGHT ACU2M	YKSM	FD-SLM800
X	PACKING		8A-CU2-856-010	--	CUSHION,RIGHT ACU2M	YEZSM	FD-SLM801
G X	PACKING		8A-CU2-856-010		CUSHION,RIGHT ACU2M	YKSM	FD-SLM800
G X	PACKING		8A-CU2-856-010		CUSHION,RIGHT ACU2M	YEZSM	FD-SLM801
X	PACKING		8A-CV2-851-010	1A	SLEEVE,FD-SLM800 YKSM	YKSM	FD-SLM800
G X	PACKING		8A-CV2-851-010		SLEEVE,FD-SLM800 YKSM	YKSM	FD-SLM800
X	PACKING		8A-CV2-852-010	1A	SLEEVE,FD-SLM801 YEZSM	YEZSM	FD-SLM801
G X	PACKING		8A-CV2-852-010		SLEEVE,FD-SLM801 YEZSM	YEZSM	FD-SLM801
X	PACKING		93-704-325-010	0E	SH,FOAMED-MAT 0.31-300-300	YKSM	FD-SLM800
X	PACKING		93-704-325-010	0E	SH,FOAMED-MAT 0.31-300-300	YEZSM	FD-SLM801
G X	PACKING		93-704-325-010		SH,FOAMED-MAT 0.31-300-300	YKSM	FD-SLM800
G X	PACKING		93-704-325-010		SH,FOAMED-MAT 0.31-300-300	YEZSM	FD-SLM801
X	PLATE		87-057-961-010		LBL,CAUTION TRIANGLE	YKSM	FD-SLM800
X	PLATE		87-057-961-010		LBL,CAUTION TRIANGLE	YEZSM	FD-SLM801
! X	PLATE		87-057-961-010	0E	LBL,CAUTION TRIANGLE	YKSM	FD-SLM800
! X	PLATE		87-057-961-010	0E	LBL,CAUTION TRIANGLE	YEZSM	FD-SLM801
X	PLATE		87-057-995-010		LBL,CAUTION EFSD	YKSM	FD-SLM800
X	PLATE		87-057-995-010		LBL,CAUTION EFSD	YEZSM	FD-SLM801
! X	PLATE		87-057-995-010	0E	LBL,CAUTION EFSD	YKSM	FD-SLM800
! X	PLATE		87-057-995-010	0E	LBL,CAUTION EFSD	YEZSM	FD-SLM801
X	PLATE		87-B40-284-010		LBL,BAR-CODE D 35X8	YKSM	FD-SLM800
X	PLATE		87-B40-284-010		LBL,BAR-CODE D 35X8	YEZSM	FD-SLM801
X	PLATE		87-B40-284-010	0E	LBL,BAR-CODE D 35X8	YKSM	FD-SLM800
X	PLATE		87-B40-284-010	0E	LBL,BAR-CODE D 35X8	YEZSM	FD-SLM801
O	PLATE		8A-CV2-019-010		LENS,LED	YKSM	FD-SLM800
O	PLATE		8A-CV2-019-010		LENS,LED	YEZSM	FD-SLM801
O	PLATE		8A-CV2-019-010	--	LENS,LED	YKSM	FD-SLM800
O	PLATE		8A-CV2-019-010	--	LENS,LED	YEZSM	FD-SLM801
O	POWER	C 0761	87-010-381-010		CAP,E 330-16 M SME	YKSM	FD-SLM800
O	POWER	C 0761	87-010-381-010		CAP,E 330-16 M SME	YEZSM	FD-SLM801
O	POWER	C 0761	87-010-381-010	0E	CAP,E 330-16 M SME	YKSM	FD-SLM800
O	POWER	C 0761	87-010-381-010	0E	CAP,E 330-16 M SME	YEZSM	FD-SLM801
O	POWER	C 0762	87-010-101-010	0E	CAP,E 220-16 M SME	YKSM	FD-SLM800
O	POWER	C 0762	87-010-101-010	0E	CAP,E 220-16 M SME	YEZSM	FD-SLM801
X	POWER	C 0762	87-010-101-010		CAP,E 220-16 M SME	YKSM	FD-SLM800
X	POWER	C 0762	87-010-101-010		CAP,E 220-16 M SME	YEZSM	FD-SLM801
O	POWER	C 0763	87-016-044-040		CAP,E 100-16 M 5L MA	YKSM	FD-SLM800
O	POWER	C 0763	87-016-044-040		CAP,E 100-16 M 5L MA	YEZSM	FD-SLM801
O	POWER	C 0763	87-016-044-040	0E	CAP,E 100-16 M 5L MA	YKSM	FD-SLM800
O	POWER	C 0763	87-016-044-040	0E	CAP,E 100-16 M 5L MA	YEZSM	FD-SLM801
O	POWER	C 0764	87-016-044-040		CAP,E 100-16 M 5L MA	YKSM	FD-SLM800
O	POWER	C 0764	87-016-044-040		CAP,E 100-16 M 5L MA	YEZSM	FD-SLM801
O	POWER	C 0764	87-016-044-040	0E	CAP,E 100-16 M 5L MA	YKSM	FD-SLM800
O	POWER	C 0764	87-016-044-040	0E	CAP,E 100-16 M 5L MA	YEZSM	FD-SLM801
S	POWER	Q 0761	87-A30-083-080		TR,CSD1489B	YKSM	FD-SLM800
S	POWER	Q 0761	87-A30-083-080		TR,CSD1489B	YEZSM	FD-SLM801
S	POWER	Q 0761	87-A30-083-080	0E	TR,CSD1489B	YKSM	FD-SLM800
S	POWER	Q 0761	87-A30-083-080	0E	TR,CSD1489B	YEZSM	FD-SLM801
X	POWER	R 0761	88-118-101-080		C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	POWER	R 0761	88-118-101-080		C-RES,S 100-1/10W J	YEZSM	FD-SLM801
X	POWER	R 0761	88-118-101-080	0E	C-RES,S 100-1/10W J	YKSM	FD-SLM800
X	POWER	R 0761	88-118-101-080	0E	C-RES,S 100-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	POWER	R 0762	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	POWER	R 0762	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	POWER	R 0762	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	POWER	R 0762	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
O	Q SURROUND	C 0551	87-010-495-040		CAP,E 2.2-50 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0551	87-010-495-040		CAP,E 2.2-50 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0551	87-010-495-040	OE	CAP,E 2.2-50 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0551	87-010-495-040	OE	CAP,E 2.2-50 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0552	87-010-495-040		CAP,E 2.2-50 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0552	87-010-495-040		CAP,E 2.2-50 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0552	87-010-495-040	OE	CAP,E 2.2-50 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0552	87-010-495-040	OE	CAP,E 2.2-50 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0553	87-010-553-040		CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0553	87-010-553-040		CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0553	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0553	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0554	87-010-498-040		CAP,E 10-16 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0554	87-010-498-040		CAP,E 10-16 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0554	87-010-498-040	OE	CAP,E 10-16 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0554	87-010-498-040	OE	CAP,E 10-16 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0555	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	Q SURROUND	C 0555	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	Q SURROUND	C 0555	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	Q SURROUND	C 0555	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	Q SURROUND	C 0556	87-016-044-040		CAP,E 100-16 M 5L MA	YKSM	FD-SLM800
O	Q SURROUND	C 0556	87-016-044-040		CAP,E 100-16 M 5L MA	YEZSM	FD-SLM801
O	Q SURROUND	C 0556	87-016-044-040	OE	CAP,E 100-16 M 5L MA	YKSM	FD-SLM800
O	Q SURROUND	C 0556	87-016-044-040	OE	CAP,E 100-16 M 5L MA	YEZSM	FD-SLM801
O	Q SURROUND	C 0557	87-010-498-040		CAP,E 10-16 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0557	87-010-498-040		CAP,E 10-16 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0557	87-010-498-040	OE	CAP,E 10-16 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0557	87-010-498-040	OE	CAP,E 10-16 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0558	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	Q SURROUND	C 0558	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	Q SURROUND	C 0558	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	Q SURROUND	C 0558	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	Q SURROUND	C 0559	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	Q SURROUND	C 0559	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	Q SURROUND	C 0559	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	Q SURROUND	C 0559	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	Q SURROUND	C 0560	87-010-494-040		CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0560	87-010-494-040		CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0560	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0560	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0561	87-010-494-040		CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0561	87-010-494-040		CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	Q SURROUND	C 0561	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	Q SURROUND	C 0561	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
S	Q SURROUND	IC 0502	87-A21-103-040	1E	C-IC,MM1454XFBE	YKSM	FD-SLM800
S	Q SURROUND	IC 0502	87-A21-103-040	1E	C-IC,MM1454XFBE	YEZSM	FD-SLM801
O	S Q SURROUND	IC 0502	87-A21-103-040		C-IC,MM1454XFBE	YKSM	FD-SLM800
O	S Q SURROUND	IC 0502	87-A21-103-040		C-IC,MM1454XFBE	YEZSM	FD-SLM801
X	Q SURROUND	JR 0555	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	Q SURROUND	JR 0555	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	Q SURROUND	JR 0555	88-118-000-080	OE	C-JUMPER,S	YKSM	FD-SLM800
X	Q SURROUND	JR 0555	88-118-000-080	OE	C-JUMPER,S	YEZSM	FD-SLM801
X	Q SURROUND	R 0551	88-121-101-080		RES,100-1/8W J	YKSM	FD-SLM800
X	Q SURROUND	R 0551	88-121-101-080		RES,100-1/8W J	YEZSM	FD-SLM801
X	Q SURROUND	R 0551	88-121-101-080	OE	RES,100-1/8W J	YKSM	FD-SLM800
X	Q SURROUND	R 0551	88-121-101-080	OE	RES,100-1/8W J	YEZSM	FD-SLM801
X	Q SURROUND	R 0552	88-121-103-080		RES,10K-1/8W J	YKSM	FD-SLM800
X	Q SURROUND	R 0552	88-121-103-080		RES,10K-1/8W J	YEZSM	FD-SLM801
X	Q SURROUND	R 0552	88-121-103-080	OE	RES,10K-1/8W J	YKSM	FD-SLM800
X	Q SURROUND	R 0552	88-121-103-080	OE	RES,10K-1/8W J	YEZSM	FD-SLM801
X	Q SURROUND	R 0553	88-118-183-080		C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X	Q SURROUND	R 0553	88-118-183-080		C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X	Q SURROUND	R 0553	88-118-183-080	OE	C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X	Q SURROUND	R 0553	88-118-183-080	OE	C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X	Q SURROUND	R 0554	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	Q SURROUND	R 0554	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X Q	SURROUND	R 0554	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0554	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X Q	SURROUND	R 0556	88-118-183-080		C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0556	88-118-183-080		C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X Q	SURROUND	R 0556	88-118-183-080	0E	C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0556	88-118-183-080	0E	C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X Q	SURROUND	R 0557	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0557	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X Q	SURROUND	R 0557	88-118-103-080	0E	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0557	88-118-103-080	0E	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X Q	SURROUND	R 0558	88-118-183-080		C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0558	88-118-183-080		C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X Q	SURROUND	R 0558	88-118-183-080	0E	C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0558	88-118-183-080	0E	C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X Q	SURROUND	R 0559	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0559	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X Q	SURROUND	R 0559	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0559	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X Q	SURROUND	R 0560	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0560	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X Q	SURROUND	R 0560	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X Q	SURROUND	R 0560	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
O SCREW			87-067-579-010		BVT2+3-8 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-067-579-010		BVT2+3-8 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-067-579-010	0E	BVT2+3-8 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-067-579-010	0E	BVT2+3-8 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-067-584-010		BVT2+3-6 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-067-584-010		BVT2+3-6 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-067-584-010	0E	BVT2+3-6 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-067-584-010	0E	BVT2+3-6 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-067-703-010		BVT2+3-10 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-067-703-010		BVT2+3-10 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-067-703-010	0E	BVT2+3-10 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-067-703-010	0E	BVT2+3-10 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-067-758-010		BVT2+3-12 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-067-758-010		BVT2+3-12 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-067-758-010	0E	BVT2+3-12 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-067-758-010	0E	BVT2+3-12 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-261-094-410		V+3-6	YKSM	FD-SLM800
O SCREW			87-261-094-410		V+3-6	YEZSM	FD-SLM801
O SCREW			87-721-095-410		QT2+3-8 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-721-095-410		QT2+3-8 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-721-095-410	0E	QT2+3-8 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-721-095-410	0E	QT2+3-8 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-761-096-410		VFT2+3-10 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-761-096-410		VFT2+3-10 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-761-096-410		VFT2+3-10 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-761-096-410		VFT2+3-10 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-761-096-410	0E	VFT2+3-10 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-761-096-410	0E	VFT2+3-10 W/O SLOT	YKSM	FD-SLM800
O SCREW			87-761-096-410	0E	VFT2+3-10 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-761-096-410	0E	VFT2+3-10 W/O SLOT	YEZSM	FD-SLM801
O SCREW			87-B10-230-010		BVT2+3-10 W/O SLOT SILVER CR	YKSM	FD-SLM800
O SCREW			87-B10-230-010		BVT2+3-10 W/O SLOT SILVER CR	YEZSM	FD-SLM801
O SCREW			87-B10-230-010	0E	BVT2+3-10 W/O SLOT SILVER CR	YKSM	FD-SLM800
O SCREW			87-B10-230-010	0E	BVT2+3-10 W/O SLOT SILVER CR	YEZSM	FD-SLM801
X TAPE DECK			8A-CV2-632-010		PWB,COMB DECK	YKSM	FD-SLM800
X TAPE DECK			8A-CV2-632-010		PWB,COMB DECK	YEZSM	FD-SLM801
X TAPE DECK			8A-CV2-632-010	1C	PWB,COMB DECK	YKSM	FD-SLM800
X TAPE DECK			8A-CV2-632-010	1C	PWB,COMB DECK	YEZSM	FD-SLM801
X TAPE DECK			8A-CV2-633-010		PWB,FRONT	YKSM	FD-SLM800
X TAPE DECK			8A-CV2-633-010		PWB,FRONT	YEZSM	FD-SLM801
X TAPE DECK			8A-CV2-633-010	--	PWB,FRONT	YKSM	FD-SLM800
X TAPE DECK			8A-CV2-633-010	--	PWB,FRONT	YEZSM	FD-SLM801
X TAPE DECK			8A-CV2-634-010		PWB,MAIN	YKSM	FD-SLM800
X TAPE DECK			8A-CV2-634-010		PWB,MAIN	YEZSM	FD-SLM801
X TAPE DECK			8A-CV2-634-010	--	PWB,MAIN	YKSM	FD-SLM800
X TAPE DECK			8A-CV2-634-010	--	PWB,MAIN	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	TAPE DECK		8A-CV2-635-010		PWB,LED3	YKSM	FD-SLM800
X	TAPE DECK		8A-CV2-635-010		PWB,LED3	YEZSM	FD-SLM801
X	TAPE DECK		8A-CV2-635-010	--	PWB,LED3	YKSM	FD-SLM800
X	TAPE DECK		8A-CV2-635-010	--	PWB,LED3	YEZSM	FD-SLM801
X	TAPE DECK		8A-CV2-636-010		PWB,LED-L	YKSM	FD-SLM800
X	TAPE DECK		8A-CV2-636-010		PWB,LED-L	YEZSM	FD-SLM801
X	TAPE DECK		8A-CV2-636-010	--	PWB,LED-L	YKSM	FD-SLM800
X	TAPE DECK		8A-CV2-636-010	--	PWB,LED-L	YEZSM	FD-SLM801
X	TAPE DECK		8A-CV2-637-010		PWB,LED-R	YKSM	FD-SLM800
X	TAPE DECK		8A-CV2-637-010		PWB,LED-R	YEZSM	FD-SLM801
X	TAPE DECK		8A-CV2-637-010	--	PWB,LED-R	YKSM	FD-SLM800
X	TAPE DECK		8A-CV2-637-010	--	PWB,LED-R	YEZSM	FD-SLM801
X	TAPE DECK		8A-CV2-638-010		PWB, RM	YKSM	FD-SLM800
X	TAPE DECK		8A-CV2-638-010		PWB, RM	YEZSM	FD-SLM801
X	TAPE DECK		8A-CV2-638-010	--	PWB, RM	YKSM	FD-SLM800
X	TAPE DECK		8A-CV2-638-010	--	PWB, RM	YEZSM	FD-SLM801
O	TAPE DECK	C 0803	87-012-157-080		C-CAP,S 330P-50 J CH GRM	YKSM	FD-SLM800
O	TAPE DECK	C 0803	87-012-157-080		C-CAP,S 330P-50 J CH GRM	YEZSM	FD-SLM801
O	TAPE DECK	C 0803	87-012-157-080	OE	C-CAP,S 330P-50 J CH GRM	YKSM	FD-SLM800
O	TAPE DECK	C 0803	87-012-157-080	OE	C-CAP,S 330P-50 J CH GRM	YEZSM	FD-SLM801
O	TAPE DECK	C 0804	87-012-157-080		C-CAP,S 330P-50 J CH GRM	YKSM	FD-SLM800
O	TAPE DECK	C 0804	87-012-157-080		C-CAP,S 330P-50 J CH GRM	YEZSM	FD-SLM801
O	TAPE DECK	C 0804	87-012-157-080	OE	C-CAP,S 330P-50 J CH GRM	YKSM	FD-SLM800
O	TAPE DECK	C 0804	87-012-157-080	OE	C-CAP,S 330P-50 J CH GRM	YEZSM	FD-SLM801
O	TAPE DECK	C 0807	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0807	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0807	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0807	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0811	87-010-198-080		C-CAP,S 0.022-25 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0811	87-010-198-080		C-CAP,S 0.022-25 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0811	87-010-198-080	OE	C-CAP,S 0.022-25 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0811	87-010-198-080	OE	C-CAP,S 0.022-25 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0812	87-010-198-080		C-CAP,S 0.022-25 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0812	87-010-198-080		C-CAP,S 0.022-25 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0812	87-010-198-080	OE	C-CAP,S 0.022-25 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0812	87-010-198-080	OE	C-CAP,S 0.022-25 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0815	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0815	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0815	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0815	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0816	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0816	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0816	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0816	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
X	TAPE DECK	C 0817	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	C 0817	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	C 0817	88-118-000-080	OE	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	C 0817	88-118-000-080	OE	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	C 0818	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	C 0818	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	C 0818	88-118-000-080	OE	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	C 0818	88-118-000-080	OE	C-JUMPER,S	YEZSM	FD-SLM801
O	TAPE DECK	C 0821	87-A10-201-080		C-CAP,S 0.33-16 K B	YKSM	FD-SLM800
O	TAPE DECK	C 0821	87-A10-201-080		C-CAP,S 0.33-16 K B	YEZSM	FD-SLM801
O	TAPE DECK	C 0821	87-A10-201-080	OE	C-CAP,S 0.33-16 K B	YKSM	FD-SLM800
O	TAPE DECK	C 0821	87-A10-201-080	OE	C-CAP,S 0.33-16 K B	YEZSM	FD-SLM801
O	TAPE DECK	C 0822	87-A10-201-080		C-CAP,S 0.33-16 K B	YKSM	FD-SLM800
O	TAPE DECK	C 0822	87-A10-201-080		C-CAP,S 0.33-16 K B	YEZSM	FD-SLM801
O	TAPE DECK	C 0822	87-A10-201-080	OE	C-CAP,S 0.33-16 K B	YKSM	FD-SLM800
O	TAPE DECK	C 0822	87-A10-201-080	OE	C-CAP,S 0.33-16 K B	YEZSM	FD-SLM801
O	TAPE DECK	C 0824	87-010-553-040		CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0824	87-010-553-040		CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0824	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0824	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0825	87-A10-759-040		CAP,E 330-6.3 SRM	YKSM	FD-SLM800
O	TAPE DECK	C 0825	87-A10-759-040		CAP,E 330-6.3 SRM	YEZSM	FD-SLM801
O	TAPE DECK	C 0825	87-A10-759-040	OE	CAP,E 330-6.3 SRM	YKSM	FD-SLM800
O	TAPE DECK	C 0825	87-A10-759-040	OE	CAP,E 330-6.3 SRM	YEZSM	FD-SLM801
O	TAPE DECK	C 0827	87-010-491-040		CAP,E 0.22-50 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0827	87-010-491-040		CAP,E 0.22-50 M 5L SRE	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	TAPE DECK	C 0827	87-010-491-040	OE	CAP,E 0.22-50 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0827	87-010-491-040	OE	CAP,E 0.22-50 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0828	87-010-491-040		CAP,E 0.22-50 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0828	87-010-491-040		CAP,E 0.22-50 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0828	87-010-491-040	OE	CAP,E 0.22-50 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0828	87-010-491-040	OE	CAP,E 0.22-50 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0832	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0832	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0832	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0832	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0835	87-010-494-040		CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0835	87-010-494-040		CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0835	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0835	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0836	87-010-494-040		CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0836	87-010-494-040		CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0836	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0836	87-010-494-040	OE	CAP,E 1-50 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0837	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0837	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0837	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0837	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0839	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0839	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0839	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0839	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0840	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0840	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0840	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0840	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0847	87-010-319-080		C-CAP,S 56P-50 J CH	YKSM	FD-SLM800
O	TAPE DECK	C 0847	87-010-319-080		C-CAP,S 56P-50 J CH	YEZSM	FD-SLM801
O	TAPE DECK	C 0847	87-010-319-080	OE	C-CAP,S 56P-50 J CH	YKSM	FD-SLM800
O	TAPE DECK	C 0847	87-010-319-080	OE	C-CAP,S 56P-50 J CH	YEZSM	FD-SLM801
O	TAPE DECK	C 0848	87-010-319-080		C-CAP,S 56P-50 J CH	YKSM	FD-SLM800
O	TAPE DECK	C 0848	87-010-319-080		C-CAP,S 56P-50 J CH	YEZSM	FD-SLM801
O	TAPE DECK	C 0848	87-010-319-080	OE	C-CAP,S 56P-50 J CH	YKSM	FD-SLM800
O	TAPE DECK	C 0848	87-010-319-080	OE	C-CAP,S 56P-50 J CH	YEZSM	FD-SLM801
O	TAPE DECK	C 0851	87-012-140-080		C-CAP,S 470P-50 J CH	YKSM	FD-SLM800
O	TAPE DECK	C 0851	87-012-140-080		C-CAP,S 470P-50 J CH	YEZSM	FD-SLM801
O	TAPE DECK	C 0851	87-012-140-080	OE	C-CAP,S 470P-50 J CH	YKSM	FD-SLM800
O	TAPE DECK	C 0851	87-012-140-080	OE	C-CAP,S 470P-50 J CH	YEZSM	FD-SLM801
O	TAPE DECK	C 0852	87-012-140-080		C-CAP,S 470P-50 J CH	YKSM	FD-SLM800
O	TAPE DECK	C 0852	87-012-140-080		C-CAP,S 470P-50 J CH	YEZSM	FD-SLM801
O	TAPE DECK	C 0852	87-012-140-080	OE	C-CAP,S 470P-50 J CH	YKSM	FD-SLM800
O	TAPE DECK	C 0852	87-012-140-080	OE	C-CAP,S 470P-50 J CH	YEZSM	FD-SLM801
O	TAPE DECK	C 0854	87-010-175-080		C-CAP,S 560P-50 J SL	YKSM	FD-SLM800
O	TAPE DECK	C 0854	87-010-175-080		C-CAP,S 560P-50 J SL	YEZSM	FD-SLM801
O	TAPE DECK	C 0854	87-010-175-080	OE	C-CAP,S 560P-50 J SL	YKSM	FD-SLM800
O	TAPE DECK	C 0854	87-010-175-080	OE	C-CAP,S 560P-50 J SL	YEZSM	FD-SLM801
O	TAPE DECK	C 0855	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0855	87-010-178-080		C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0855	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0855	87-010-178-080	OE	C-CAP,S 1000P-50 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0856	87-010-553-040		CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0856	87-010-553-040		CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0856	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YKSM	FD-SLM800
O	TAPE DECK	C 0856	87-010-553-040	OE	CAP,E 47-16 M 5L SRE	YEZSM	FD-SLM801
O	TAPE DECK	C 0857	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0857	87-010-197-080		C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0857	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0857	87-010-197-080	OE	C-CAP,S 0.01-25 K B C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0858	87-010-183-080		C-CAP,S 2700P-50 K B GRM	YKSM	FD-SLM800
O	TAPE DECK	C 0858	87-010-183-080		C-CAP,S 2700P-50 K B GRM	YEZSM	FD-SLM801
O	TAPE DECK	C 0858	87-010-183-080	OE	C-CAP,S 2700P-50 K B GRM	YKSM	FD-SLM800
O	TAPE DECK	C 0858	87-010-183-080	OE	C-CAP,S 2700P-50 K B GRM	YEZSM	FD-SLM801
O	TAPE DECK	C 0859	87-010-183-080		C-CAP,S 2700P-50 K B GRM	YKSM	FD-SLM800
O	TAPE DECK	C 0859	87-010-183-080		C-CAP,S 2700P-50 K B GRM	YEZSM	FD-SLM801
O	TAPE DECK	C 0859	87-010-183-080	OE	C-CAP,S 2700P-50 K B GRM	YKSM	FD-SLM800
O	TAPE DECK	C 0859	87-010-183-080	OE	C-CAP,S 2700P-50 K B GRM	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	TAPE DECK	C 0860	87-010-183-080		C-CAP,S 2700P-50 K B GRM	YKSM	FD-SLM800
O	TAPE DECK	C 0860	87-010-183-080		C-CAP,S 2700P-50 K B GRM	YEZSM	FD-SLM801
O	TAPE DECK	C 0860	87-010-183-080	OE	C-CAP,S 2700P-50 K B GRM	YKSM	FD-SLM800
O	TAPE DECK	C 0860	87-010-183-080	OE	C-CAP,S 2700P-50 K B GRM	YEZSM	FD-SLM801
X	TAPE DECK	C 0863	88-700-730-810		CAP,M 5600P-50 J AMZV	YKSM	FD-SLM800
X	TAPE DECK	C 0863	88-700-730-810		CAP,M 5600P-50 J AMZV	YEZSM	FD-SLM801
X	TAPE DECK	C 0863	88-700-730-810	OE	CAP,M 5600P-50 J AMZV	YKSM	FD-SLM800
X	TAPE DECK	C 0863	88-700-730-810	OE	CAP,M 5600P-50 J AMZV	YEZSM	FD-SLM801
O	TAPE DECK	C 0870	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0870	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0870	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0870	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0873	87-016-083-080		C-CAP,S 0.15-16 K R	YKSM	FD-SLM800
O	TAPE DECK	C 0873	87-016-083-080		C-CAP,S 0.15-16 K R	YEZSM	FD-SLM801
O	TAPE DECK	C 0873	87-A11-747-080	--	C-CAP,S 0.15-25 Z F	YKSM	FD-SLM800
O	TAPE DECK	C 0873	87-A11-747-080	--	C-CAP,S 0.15-25 Z F	YEZSM	FD-SLM801
O	TAPE DECK	C 0874	87-016-083-080		C-CAP,S 0.15-16 K R	YKSM	FD-SLM800
O	TAPE DECK	C 0874	87-016-083-080		C-CAP,S 0.15-16 K R	YEZSM	FD-SLM801
O	TAPE DECK	C 0874	87-A11-747-080	--	C-CAP,S 0.15-25 Z F	YKSM	FD-SLM800
O	TAPE DECK	C 0874	87-A11-747-080	--	C-CAP,S 0.15-25 Z F	YEZSM	FD-SLM801
O	TAPE DECK	C 0886	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0886	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0886	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0886	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0888	87-010-170-080		C-CAP,S 220P-50 J SL	YKSM	FD-SLM800
O	TAPE DECK	C 0888	87-010-170-080		C-CAP,S 220P-50 J SL	YEZSM	FD-SLM801
O	TAPE DECK	C 0888	87-010-170-080	OE	C-CAP,S 220P-50 J SL	YKSM	FD-SLM800
O	TAPE DECK	C 0888	87-010-170-080	OE	C-CAP,S 220P-50 J SL	YEZSM	FD-SLM801
O	TAPE DECK	C 0901	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0901	87-010-196-080		C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
O	TAPE DECK	C 0901	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YKSM	FD-SLM800
O	TAPE DECK	C 0901	87-010-196-080	OE	C-CAP,S 0.1-25 Z F C2012	YEZSM	FD-SLM801
X	TAPE DECK	CLP0802	87-A60-884-010		PIN,DIAL COATING-SHS	YKSM	FD-SLM800
X	TAPE DECK	CLP0802	87-A60-884-010		PIN,DIAL COATING-SHS	YEZSM	FD-SLM801
X	TAPE DECK	CLP0802	87-A60-884-010	OE	PIN,DIAL COATING-SHS	YKSM	FD-SLM800
X	TAPE DECK	CLP0802	87-A60-884-010	OE	PIN,DIAL COATING-SHS	YEZSM	FD-SLM801
O	TAPE DECK	CN 0701	87-A60-622-010		CONN,5P V 2MM JMT	YKSM	FD-SLM800
O	TAPE DECK	CN 0701	87-A60-622-010		CONN,5P V 2MM JMT	YEZSM	FD-SLM801
O	TAPE DECK	CN 0701	87-A60-622-010	OE	CONN,5P V 2MM JMT	YKSM	FD-SLM800
O	TAPE DECK	CN 0701	87-A60-622-010	OE	CONN,5P V 2MM JMT	YEZSM	FD-SLM801
O	TAPE DECK	CN 0702	87-A60-623-010		CONN,6P V 2MM JMT	YKSM	FD-SLM800
O	TAPE DECK	CN 0702	87-A60-623-010		CONN,6P V 2MM JMT	YEZSM	FD-SLM801
O	TAPE DECK	CN 0702	87-A60-623-010	OE	CONN,6P V 2MM JMT	YKSM	FD-SLM800
O	TAPE DECK	CN 0702	87-A60-623-010	OE	CONN,6P V 2MM JMT	YEZSM	FD-SLM801
O	TAPE DECK	CN 0703	87-A60-422-010		CONN,8P V TOC-B	YKSM	FD-SLM800
O	TAPE DECK	CN 0703	87-A60-422-010		CONN,8P V TOC-B	YEZSM	FD-SLM801
!	TAPE DECK	CN 0703	87-A60-422-010	OE	CONN,8P V TOC-B	YKSM	FD-SLM800
!	TAPE DECK	CN 0703	87-A60-422-010	OE	CONN,8P V TOC-B	YEZSM	FD-SLM801
O	TAPE DECK	CN 0704	87-A60-109-010		CONN,2P V S2M-2W	YKSM	FD-SLM800
O	TAPE DECK	CN 0704	87-A60-109-010		CONN,2P V S2M-2W	YEZSM	FD-SLM801
!	TAPE DECK	CN 0704	87-A60-109-010	OE	CONN,2P V S2M-2W	YKSM	FD-SLM800
!	TAPE DECK	CN 0704	87-A60-109-010	OE	CONN,2P V S2M-2W	YEZSM	FD-SLM801
O	TAPE DECK	CN 0705	87-A60-109-010		CONN,2P V S2M-2W	YKSM	FD-SLM800
O	TAPE DECK	CN 0705	87-A60-109-010		CONN,2P V S2M-2W	YEZSM	FD-SLM801
!	TAPE DECK	CN 0705	87-A60-109-010	OE	CONN,2P V S2M-2W	YKSM	FD-SLM800
!	TAPE DECK	CN 0705	87-A60-109-010	OE	CONN,2P V S2M-2W	YEZSM	FD-SLM801
O	TAPE DECK	CN 0705	87-A60-109-010	OE	CONN,2P V S2M-2W	YKSM	FD-SLM800
O	TAPE DECK	CN 0705	87-A60-109-010	OE	CONN,2P V S2M-2W	YEZSM	FD-SLM801
O	TAPE DECK	CN 0851	87-A60-625-010		CONN,8P V 2MM JMT	YKSM	FD-SLM800
O	TAPE DECK	CN 0851	87-A60-625-010		CONN,8P V 2MM JMT	YEZSM	FD-SLM801
O	TAPE DECK	CN 0851	87-A60-625-010	OE	CONN,8P V 2MM JMT	YKSM	FD-SLM800
O	TAPE DECK	CN 0851	87-A60-625-010	OE	CONN,8P V 2MM JMT	YEZSM	FD-SLM801
O	TAPE DECK	CN 0901	87-A60-671-010		CONN,7P H 2MM JMT	YKSM	FD-SLM800
O	TAPE DECK	CN 0901	87-A60-671-010		CONN,7P H 2MM JMT	YEZSM	FD-SLM801
O	TAPE DECK	CN 0901	87-A60-671-010	OE	CONN,7P H 2MM JMT	YKSM	FD-SLM800
O	TAPE DECK	CN 0901	87-A60-671-010	OE	CONN,7P H 2MM JMT	YEZSM	FD-SLM801
O	TAPE DECK	CNA0901	8A-CV2-666-010		CONN ASSY,7P 2MM	YKSM	FD-SLM800
O	TAPE DECK	CNA0901	8A-CV2-666-010		CONN ASSY,7P 2MM	YEZSM	FD-SLM801
O	TAPE DECK	CNA0901	8A-CV2-666-010	--	CONN ASSY,7P 2MM	YKSM	FD-SLM800
O	TAPE DECK	CNA0901	8A-CV2-666-010	--	CONN ASSY,7P 2MM	YEZSM	FD-SLM801
S	TAPE DECK	D 0852	87-A40-269-080		C-DIODE,MC2836	YKSM	FD-SLM800
S	TAPE DECK	D 0852	87-A40-269-080		C-DIODE,MC2836	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	S TAPE DECK	D 0852	87-A40-269-080	0E	C-DIODE,MC2836	YKSM	FD-SLM800
	S TAPE DECK	D 0852	87-A40-269-080	0E	C-DIODE,MC2836	YEZSM	FD-SLM801
	S TAPE DECK	IC 0801	87-017-915-080	1B	C-IC,BU4094BCF	YKSM	FD-SLM800
	S TAPE DECK	IC 0801	87-017-915-080	1B	C-IC,BU4094BCF	YEZSM	FD-SLM801
O	S TAPE DECK	IC 0801	87-017-915-080		C-IC,BU4094BCF	YKSM	FD-SLM800
O	S TAPE DECK	IC 0801	87-017-915-080		C-IC,BU4094BCF	YEZSM	FD-SLM801
	S TAPE DECK	IC 0803	87-A20-783-040	1D	C-IC,BA7762AFS	YKSM	FD-SLM800
	S TAPE DECK	IC 0803	87-A20-783-040	1D	C-IC,BA7762AFS	YEZSM	FD-SLM801
O	S TAPE DECK	IC 0803	87-A20-783-040		C-IC,BA7762AFS	YKSM	FD-SLM800
O	S TAPE DECK	IC 0803	87-A20-783-040		C-IC,BA7762AFS	YEZSM	FD-SLM801
	S TAPE DECK	IC 0901	87-017-915-080	1B	C-IC,BU4094BCF	YKSM	FD-SLM800
	S TAPE DECK	IC 0901	87-017-915-080	1B	C-IC,BU4094BCF	YEZSM	FD-SLM801
O	S TAPE DECK	IC 0901	87-017-915-080		C-IC,BU4094BCF	YKSM	FD-SLM800
O	S TAPE DECK	IC 0901	87-017-915-080		C-IC,BU4094BCF	YEZSM	FD-SLM801
X	TAPE DECK	JR 0002	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0002	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0002	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0002	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0801	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0801	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0801	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0801	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0802	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0802	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0802	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0802	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0803	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0803	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0803	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0803	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0804	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0804	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0804	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0804	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0805	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0805	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0805	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0805	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0806	88-129-000-080		C-JUMPER,3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0806	88-129-000-080		C-JUMPER,3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0806	88-129-000-080	0E	C-JUMPER,3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0806	88-129-000-080	0E	C-JUMPER,3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0807	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0807	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0807	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0807	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0808	88-129-000-080		C-JUMPER,3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0808	88-129-000-080		C-JUMPER,3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0808	88-129-000-080	0E	C-JUMPER,3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0808	88-129-000-080	0E	C-JUMPER,3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0809	88-129-000-080		C-JUMPER,3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0809	88-129-000-080		C-JUMPER,3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0809	88-129-000-080	0E	C-JUMPER,3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0809	88-129-000-080	0E	C-JUMPER,3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0810	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0810	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0810	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0810	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0811	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0811	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0811	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0811	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0812	88-118-000-080		C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0812	88-118-000-080		C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0812	88-118-000-080	0E	C-JUMPER,S	YKSM	FD-SLM800
X	TAPE DECK	JR 0812	88-118-000-080	0E	C-JUMPER,S	YEZSM	FD-SLM801
X	TAPE DECK	JR 0813	88-129-000-080		C-JUMPER,3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0813	88-129-000-080		C-JUMPER,3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0813	88-129-000-080	0E	C-JUMPER,3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0813	88-129-000-080	0E	C-JUMPER,3216	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	TAPE DECK	JR 0814	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0814	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0814	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0814	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0815	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0815	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0815	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0815	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0816	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0816	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0816	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0816	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0817	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0817	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0817	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0817	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0818	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0818	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0818	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0818	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0820	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0820	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0820	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0820	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0821	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0821	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0821	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0821	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0822	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0822	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0822	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0822	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0823	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0823	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0823	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0823	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0824	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0824	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0824	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0824	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0825	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0825	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0825	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0825	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0826	88-129-000-080		C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0826	88-129-000-080		C-JUMPER, 3216	YEZSM	FD-SLM801
X	TAPE DECK	JR 0826	88-129-000-080	OE	C-JUMPER, 3216	YKSM	FD-SLM800
X	TAPE DECK	JR 0826	88-129-000-080	OE	C-JUMPER, 3216	YEZSM	FD-SLM801
O	TAPE DECK	L 0801	87-A50-049-010		COIL, TRAP 85K (COI)	YKSM	FD-SLM800
O	TAPE DECK	L 0801	87-A50-049-010		COIL, TRAP 85K (COI)	YEZSM	FD-SLM801
O	TAPE DECK	L 0801	87-A50-049-010	OE	COIL, TRAP 85K (COI)	YKSM	FD-SLM800
O	TAPE DECK	L 0801	87-A50-049-010	OE	COIL, TRAP 85K (COI)	YEZSM	FD-SLM801
O	TAPE DECK	L 0802	87-A50-049-010		COIL, TRAP 85K (COI)	YKSM	FD-SLM800
O	TAPE DECK	L 0802	87-A50-049-010		COIL, TRAP 85K (COI)	YEZSM	FD-SLM801
O	TAPE DECK	L 0802	87-A50-049-010	OE	COIL, TRAP 85K (COI)	YKSM	FD-SLM800
O	TAPE DECK	L 0802	87-A50-049-010	OE	COIL, TRAP 85K (COI)	YEZSM	FD-SLM801
O	TAPE DECK	L 0851	87-007-342-010		COIL, OSC 85KHZ BIAS	YKSM	FD-SLM800
O	TAPE DECK	L 0851	87-007-342-010		COIL, OSC 85KHZ BIAS	YEZSM	FD-SLM801
O	TAPE DECK	L 0851	87-007-342-010	OE	COIL, OSC 85KHZ BIAS	YKSM	FD-SLM800
O	TAPE DECK	L 0851	87-007-342-010	OE	COIL, OSC 85KHZ BIAS	YEZSM	FD-SLM801
O	TAPE DECK	LED0901	87-A40-228-080		LED, SLR-342MG TB7 GREEN	YKSM	FD-SLM800
O	TAPE DECK	LED0901	87-A40-228-080		LED, SLR-342MG TB7 GREEN	YEZSM	FD-SLM801
O	TAPE DECK	LED0901	87-A40-228-080	OE	LED, SLR-342MG TB7 GREEN	YKSM	FD-SLM800
O	TAPE DECK	LED0901	87-A40-228-080	OE	LED, SLR-342MG TB7 GREEN	YEZSM	FD-SLM801
O	TAPE DECK	LED0902	87-A40-229-080		LED, SLR-342VR TB7 RED	YKSM	FD-SLM800
O	TAPE DECK	LED0902	87-A40-229-080		LED, SLR-342VR TB7 RED	YEZSM	FD-SLM801
O	TAPE DECK	LED0902	87-A40-229-080	OE	LED, SLR-342VR TB7 RED	YKSM	FD-SLM800
O	TAPE DECK	LED0902	87-A40-229-080	OE	LED, SLR-342VR TB7 RED	YEZSM	FD-SLM801
O	TAPE DECK	LED0903	87-A40-228-080		LED, SLR-342MG TB7 GREEN	YKSM	FD-SLM800
O	TAPE DECK	LED0903	87-A40-228-080		LED, SLR-342MG TB7 GREEN	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	TAPE DECK	LED0903	87-A40-228-080	0E	LED,SLR-342MG TB7 GREEN	YKSM	FD-SLM800
O	TAPE DECK	LED0903	87-A40-228-080	0E	LED,SLR-342MG TB7 GREEN	YEZSM	FD-SLM801
O	TAPE DECK	LED0904	87-A40-228-080		LED,SLR-342MG TB7 GREEN	YKSM	FD-SLM800
O	TAPE DECK	LED0904	87-A40-228-080		LED,SLR-342MG TB7 GREEN	YEZSM	FD-SLM801
O	TAPE DECK	LED0904	87-A40-228-080	0E	LED,SLR-342MG TB7 GREEN	YKSM	FD-SLM800
O	TAPE DECK	LED0904	87-A40-228-080	0E	LED,SLR-342MG TB7 GREEN	YEZSM	FD-SLM801
O	TAPE DECK	LED0905	87-A40-228-080		LED,SLR-342MG TB7 GREEN	YKSM	FD-SLM800
O	TAPE DECK	LED0905	87-A40-228-080		LED,SLR-342MG TB7 GREEN	YEZSM	FD-SLM801
O	TAPE DECK	LED0905	87-A40-228-080	0E	LED,SLR-342MG TB7 GREEN	YKSM	FD-SLM800
O	TAPE DECK	LED0905	87-A40-228-080	0E	LED,SLR-342MG TB7 GREEN	YEZSM	FD-SLM801
O	TAPE DECK	LED0906	87-A40-228-080		LED,SLR-342MG TB7 GREEN	YKSM	FD-SLM800
O	TAPE DECK	LED0906	87-A40-228-080		LED,SLR-342MG TB7 GREEN	YEZSM	FD-SLM801
O	TAPE DECK	LED0906	87-A40-228-080	0E	LED,SLR-342MG TB7 GREEN	YKSM	FD-SLM800
O	TAPE DECK	LED0906	87-A40-228-080	0E	LED,SLR-342MG TB7 GREEN	YEZSM	FD-SLM801
O	TAPE DECK	LED0907	87-A40-678-010		LED,SELU1E10CXM BLUE-DEF	YKSM	FD-SLM800
O	TAPE DECK	LED0907	87-A40-678-010		LED,SELU1E10CXM BLUE-DEF	YEZSM	FD-SLM801
O	TAPE DECK	LED0907	87-A40-678-010	1D	LED,SELU1E10CXM BLUE-DEF	YKSM	FD-SLM800
O	TAPE DECK	LED0907	87-A40-678-010	1D	LED,SELU1E10CXM BLUE-DEF	YEZSM	FD-SLM801
O	TAPE DECK	LED0908	87-A40-678-010		LED,SELU1E10CXM BLUE-DEF	YKSM	FD-SLM800
O	TAPE DECK	LED0908	87-A40-678-010		LED,SELU1E10CXM BLUE-DEF	YEZSM	FD-SLM801
O	TAPE DECK	LED0908	87-A40-678-010	1D	LED,SELU1E10CXM BLUE-DEF	YKSM	FD-SLM800
O	TAPE DECK	LED0908	87-A40-678-010	1D	LED,SELU1E10CXM BLUE-DEF	YEZSM	FD-SLM801
S	TAPE DECK	Q 0801	87-A30-073-080		C-TR,RT1N 141C	YKSM	FD-SLM800
S	TAPE DECK	Q 0801	87-A30-073-080		C-TR,RT1N 141C	YEZSM	FD-SLM801
S	TAPE DECK	Q 0801	87-A30-073-080	0E	C-TR,RT1N 141C	YKSM	FD-SLM800
S	TAPE DECK	Q 0801	87-A30-073-080	0E	C-TR,RT1N 141C	YEZSM	FD-SLM801
S	TAPE DECK	Q 0802	87-A30-073-080		C-TR,RT1N 141C	YKSM	FD-SLM800
S	TAPE DECK	Q 0802	87-A30-073-080		C-TR,RT1N 141C	YEZSM	FD-SLM801
S	TAPE DECK	Q 0802	87-A30-073-080	0E	C-TR,RT1N 141C	YKSM	FD-SLM800
S	TAPE DECK	Q 0802	87-A30-073-080	0E	C-TR,RT1N 141C	YEZSM	FD-SLM801
S	TAPE DECK	Q 0851	87-A30-087-080		C-FET,2SK2158	YKSM	FD-SLM800
S	TAPE DECK	Q 0851	87-A30-087-080		C-FET,2SK2158	YEZSM	FD-SLM801
S	TAPE DECK	Q 0851	87-A30-087-080	0E	C-FET,2SK2158	YKSM	FD-SLM800
S	TAPE DECK	Q 0851	87-A30-087-080	0E	C-FET,2SK2158	YEZSM	FD-SLM801
S	TAPE DECK	Q 0853	87-A30-087-080		C-FET,2SK2158	YKSM	FD-SLM800
S	TAPE DECK	Q 0853	87-A30-087-080		C-FET,2SK2158	YEZSM	FD-SLM801
S	TAPE DECK	Q 0853	87-A30-087-080	0E	C-FET,2SK2158	YKSM	FD-SLM800
S	TAPE DECK	Q 0853	87-A30-087-080	0E	C-FET,2SK2158	YEZSM	FD-SLM801
S	TAPE DECK	Q 0854	87-A30-087-080		C-FET,2SK2158	YKSM	FD-SLM800
S	TAPE DECK	Q 0854	87-A30-087-080		C-FET,2SK2158	YEZSM	FD-SLM801
S	TAPE DECK	Q 0854	87-A30-087-080	0E	C-FET,2SK2158	YKSM	FD-SLM800
S	TAPE DECK	Q 0854	87-A30-087-080	0E	C-FET,2SK2158	YEZSM	FD-SLM801
S	TAPE DECK	Q 0855	87-A30-105-080		C-TR,RT1P 441C	YKSM	FD-SLM800
S	TAPE DECK	Q 0855	87-A30-105-080		C-TR,RT1P 441C	YEZSM	FD-SLM801
S	TAPE DECK	Q 0855	87-A30-105-080	0E	C-TR,RT1P 441C	YKSM	FD-SLM800
S	TAPE DECK	Q 0855	87-A30-105-080	0E	C-TR,RT1P 441C	YEZSM	FD-SLM801
S	TAPE DECK	Q 0856	87-026-610-080		TR,KTC3198GR	YKSM	FD-SLM800
S	TAPE DECK	Q 0856	87-026-610-080		TR,KTC3198GR	YEZSM	FD-SLM801
S	TAPE DECK	Q 0856	87-026-610-080	0E	TR,KTC3198GR	YKSM	FD-SLM800
S	TAPE DECK	Q 0856	87-026-610-080	0E	TR,KTC3198GR	YEZSM	FD-SLM801
S	TAPE DECK	Q 0857	87-026-610-080		TR,KTC3198GR	YKSM	FD-SLM800
S	TAPE DECK	Q 0857	87-026-610-080		TR,KTC3198GR	YEZSM	FD-SLM801
S	TAPE DECK	Q 0857	87-026-610-080	0E	TR,KTC3198GR	YKSM	FD-SLM800
S	TAPE DECK	Q 0857	87-026-610-080	0E	TR,KTC3198GR	YEZSM	FD-SLM801
S	TAPE DECK	Q 0858	87-026-610-080		TR,KTC3198GR	YKSM	FD-SLM800
S	TAPE DECK	Q 0858	87-026-610-080		TR,KTC3198GR	YEZSM	FD-SLM801
S	TAPE DECK	Q 0858	87-026-610-080	0E	TR,KTC3198GR	YKSM	FD-SLM800
S	TAPE DECK	Q 0858	87-026-610-080	0E	TR,KTC3198GR	YEZSM	FD-SLM801
S	TAPE DECK	Q 0859	87-026-610-080		TR,KTC3198GR	YKSM	FD-SLM800
S	TAPE DECK	Q 0859	87-026-610-080		TR,KTC3198GR	YEZSM	FD-SLM801
S	TAPE DECK	Q 0859	87-026-610-080	0E	TR,KTC3198GR	YKSM	FD-SLM800
S	TAPE DECK	Q 0859	87-026-610-080	0E	TR,KTC3198GR	YEZSM	FD-SLM801
S	TAPE DECK	Q 0907	87-A30-073-080		C-TR,RT1N 141C	YKSM	FD-SLM800
S	TAPE DECK	Q 0907	87-A30-073-080		C-TR,RT1N 141C	YEZSM	FD-SLM801
S	TAPE DECK	Q 0907	87-A30-073-080	0E	C-TR,RT1N 141C	YKSM	FD-SLM800
S	TAPE DECK	Q 0907	87-A30-073-080	0E	C-TR,RT1N 141C	YEZSM	FD-SLM801
S	TAPE DECK	Q 0908	87-A30-073-080		C-TR,RT1N 141C	YKSM	FD-SLM800
S	TAPE DECK	Q 0908	87-A30-073-080		C-TR,RT1N 141C	YEZSM	FD-SLM801
S	TAPE DECK	Q 0908	87-A30-073-080		C-TR,RT1N 141C	YKSM	FD-SLM800
S	TAPE DECK	Q 0908	87-A30-073-080		C-TR,RT1N 141C	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
S	TAPE DECK	Q 0908	87-A30-073-080	OE	C-TR,RT1N 141C	YKSM	FD-SLM800
S	TAPE DECK	Q 0908	87-A30-073-080	OE	C-TR,RT1N 141C	YKSM	FD-SLM800
S	TAPE DECK	Q 0908	87-A30-073-080	OE	C-TR,RT1N 141C	YEZSM	FD-SLM801
S	TAPE DECK	Q 0908	87-A30-073-080	OE	C-TR,RT1N 141C	YEZSM	FD-SLM801
X	TAPE DECK	R 0801	88-118-224-080		C-RES,S 220K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0801	88-118-224-080		C-RES,S 220K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0801	88-118-224-080	OE	C-RES,S 220K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0801	88-118-224-080	OE	C-RES,S 220K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0802	88-118-224-080		C-RES,S 220K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0802	88-118-224-080		C-RES,S 220K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0802	88-118-224-080	OE	C-RES,S 220K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0802	88-118-224-080	OE	C-RES,S 220K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0805	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0805	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0805	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0805	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0806	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0806	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0806	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0806	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0807	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0807	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0807	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0807	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0808	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0808	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0808	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0808	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0809	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0809	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0809	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0809	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0810	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0810	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0810	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0810	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0811	88-118-562-080		C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0811	88-118-562-080		C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0811	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0811	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0812	88-118-562-080		C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0812	88-118-562-080		C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0812	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0812	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0814	88-118-223-080		C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0814	88-118-223-080		C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0814	88-118-223-080	OE	C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0814	88-118-223-080	OE	C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0815	88-121-562-080		RES,5.6K-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0815	88-121-562-080		RES,5.6K-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0815	88-121-562-080	OE	RES,5.6K-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0815	88-121-562-080	OE	RES,5.6K-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0816	88-121-562-080		RES,5.6K-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0816	88-121-562-080		RES,5.6K-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0816	88-121-562-080	OE	RES,5.6K-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0816	88-121-562-080	OE	RES,5.6K-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0817	88-118-562-080		C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0817	88-118-562-080		C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0817	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0817	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0818	88-118-562-080		C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0818	88-118-562-080		C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0818	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0818	88-118-562-080	OE	C-RES,S 5.6K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0819	88-118-183-080		C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0819	88-118-183-080		C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0819	88-118-183-080	OE	C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0819	88-118-183-080	OE	C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0820	88-118-183-080		C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0820	88-118-183-080		C-RES,S 18K-1/10W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	TAPE DECK	R 0820	88-118-183-080	OE	C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0820	88-118-183-080	OE	C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0823	88-121-222-080		RES,2.2K-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0823	88-121-222-080		RES,2.2K-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0823	88-121-222-080	OE	RES,2.2K-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0823	88-121-222-080	OE	RES,2.2K-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0824	88-121-222-080		RES,2.2K-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0824	88-121-222-080		RES,2.2K-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0824	88-121-222-080	OE	RES,2.2K-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0824	88-121-222-080	OE	RES,2.2K-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0828	88-118-473-080		C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0828	88-118-473-080		C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0828	88-118-473-080	OE	C-RES,S 47K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0828	88-118-473-080	OE	C-RES,S 47K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0831	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0831	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0831	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0831	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0837	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0837	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0837	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0837	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0838	88-118-104-080		C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0838	88-118-104-080		C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0838	88-118-104-080	OE	C-RES,S 100K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0838	88-118-104-080	OE	C-RES,S 100K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0850	88-121-180-080		RES,18-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0850	88-121-180-080		RES,18-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0850	88-121-180-080	OE	RES,18-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0850	88-121-180-080	OE	RES,18-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0851	88-118-105-080		C-RES,S 1M-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0851	88-118-105-080		C-RES,S 1M-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0851	88-118-105-080	OE	C-RES,S 1M-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0851	88-118-105-080	OE	C-RES,S 1M-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0853	88-118-393-080		C-RES,S 39K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0853	88-118-393-080		C-RES,S 39K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0853	88-118-393-080	OE	C-RES,S 39K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0853	88-118-393-080	OE	C-RES,S 39K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0854	88-118-393-080		C-RES,S 39K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0854	88-118-393-080		C-RES,S 39K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0854	88-118-393-080	OE	C-RES,S 39K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0854	88-118-393-080	OE	C-RES,S 39K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0855	88-121-829-080		RES,8.2-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0855	88-121-829-080		RES,8.2-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0855	88-121-829-080	OE	RES,8.2-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0855	88-121-829-080	OE	RES,8.2-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0856	88-118-183-080		C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0856	88-118-183-080		C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0856	88-118-183-080	OE	C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0856	88-118-183-080	OE	C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0857	88-118-183-080		C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0857	88-118-183-080		C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0857	88-118-183-080	OE	C-RES,S 18K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0857	88-118-183-080	OE	C-RES,S 18K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0859	88-118-100-080		C-RES,S 10-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0859	88-118-100-080		C-RES,S 10-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0859	88-118-100-080	OE	C-RES,S 10-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0859	88-118-100-080	OE	C-RES,S 10-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0860	88-121-332-080		RES,3.3K-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0860	88-121-332-080		RES,3.3K-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0860	88-121-332-080	OE	RES,3.3K-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0860	88-121-332-080	OE	RES,3.3K-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0862	88-118-472-080		C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0862	88-118-472-080		C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0862	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0862	88-118-472-080	OE	C-RES,S 4.7K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0863	88-121-221-080		RES,220-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0863	88-121-221-080		RES,220-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0863	88-121-221-080	OE	RES,220-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0863	88-121-221-080	OE	RES,220-1/8W J	YEZSM	FD-SLM801

PARTS LIST

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	TAPE DECK	R 0864	88-118-333-080		C-RES,S 33K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0864	88-118-333-080		C-RES,S 33K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0864	88-118-333-080	OE	C-RES,S 33K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0864	88-118-333-080	OE	C-RES,S 33K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0865	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0865	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0865	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0865	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0871	88-121-390-080		RES,39-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0871	88-121-390-080		RES,39-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0871	88-121-390-080	OE	RES,39-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0871	88-121-390-080	OE	RES,39-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0872	88-121-390-080		RES,39-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0872	88-121-390-080		RES,39-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0872	88-121-390-080	OE	RES,39-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0872	88-121-390-080	OE	RES,39-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0873	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0873	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0873	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0873	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0874	88-118-471-080		C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0874	88-118-471-080		C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0874	88-118-471-080	OE	C-RES,S 470-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0874	88-118-471-080	OE	C-RES,S 470-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0890	88-118-332-080		C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0890	88-118-332-080		C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0890	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0890	88-118-332-080	OE	C-RES,S 3.3K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0891	88-118-103-080		C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0891	88-118-103-080		C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0891	88-118-103-080	OE	C-RES,S 10K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0891	88-118-103-080	OE	C-RES,S 10K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0892	88-118-182-080		C-RES,S 1.8K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0892	88-118-182-080		C-RES,S 1.8K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0892	88-118-182-080	OE	C-RES,S 1.8K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0892	88-118-182-080	OE	C-RES,S 1.8K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0893	88-118-182-080		C-RES,S 1.8K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0893	88-118-182-080		C-RES,S 1.8K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0893	88-118-182-080	OE	C-RES,S 1.8K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0893	88-118-182-080	OE	C-RES,S 1.8K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0894	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0894	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0894	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0894	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0895	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0895	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0895	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0895	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0896	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0896	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0896	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0896	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0897	88-118-223-080		C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0897	88-118-223-080		C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0897	88-118-223-080	OE	C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0897	88-118-223-080	OE	C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0901	88-128-561-080		C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0901	88-128-561-080		C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0901	88-128-561-080	OE	C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0901	88-128-561-080	OE	C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0902	88-128-561-080		C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0902	88-128-561-080		C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0902	88-128-561-080	OE	C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0902	88-128-561-080	OE	C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0903	88-128-561-080		C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0903	88-128-561-080		C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0903	88-128-561-080	OE	C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0903	88-128-561-080	OE	C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0904	88-128-561-080		C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0904	88-128-561-080		C-RES, 560-1/8W J	YEZSM	FD-SLM801

PARTS LIST

! =  SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	TAPE DECK	R 0904	88-128-561-080	OE	C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0904	88-128-561-080	OE	C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0905	88-128-561-080		C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0905	88-128-561-080		C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0905	88-128-561-080	OE	C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0905	88-128-561-080	OE	C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0906	88-128-561-080		C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0906	88-128-561-080		C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0906	88-128-561-080	OE	C-RES, 560-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0906	88-128-561-080	OE	C-RES, 560-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0907	88-121-101-080		RES,100-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0907	88-121-101-080		RES,100-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0907	88-121-101-080	OE	RES,100-1/8W J	YKSM	FD-SLM800
X	TAPE DECK	R 0907	88-121-101-080	OE	RES,100-1/8W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0908	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0908	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0908	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0908	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0909	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0909	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0909	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0909	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0910	88-118-102-080		C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0910	88-118-102-080		C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0910	88-118-102-080	OE	C-RES,S 1K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0910	88-118-102-080	OE	C-RES,S 1K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0911	88-118-223-080		C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0911	88-118-223-080		C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0911	88-118-223-080	OE	C-RES,S 22K-1/10W J	YKSM	FD-SLM800
X	TAPE DECK	R 0911	88-118-223-080	OE	C-RES,S 22K-1/10W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0912	88-130-101-080		RES,100-1/4W J	YKSM	FD-SLM800
X	TAPE DECK	R 0912	88-130-101-080		RES,100-1/4W J	YEZSM	FD-SLM801
X	TAPE DECK	R 0912	88-130-101-080	OE	RES,100-1/4W J	YKSM	FD-SLM800
X	TAPE DECK	R 0912	88-130-101-080	OE	RES,100-1/4W J	YEZSM	FD-SLM801
X	TAPE DECK	W 0801	8Z-CL1-668-010		WIRE,FASTON ASSY CL1	YKSM	FD-SLM800
X	TAPE DECK	W 0801	8Z-CL1-668-010		WIRE,FASTON ASSY CL1	YEZSM	FD-SLM801
X	TAPE DECK	W 0801	8Z-CL1-668-010	1A	WIRE,FASTON ASSY CL1	YKSM	FD-SLM800
X	TAPE DECK	W 0801	8Z-CL1-668-010	1A	WIRE,FASTON ASSY CL1	YEZSM	FD-SLM801
X	TAPE DECK	W 0802	8A-CJ4-654-010		WIRE ASSY,FASTEN 115 BLK	YKSM	FD-SLM800
X	TAPE DECK	W 0802	8A-CJ4-654-010		WIRE ASSY,FASTEN 115 BLK	YEZSM	FD-SLM801
X	TAPE DECK	W 0802	8A-CJ4-654-010	OE	WIRE ASSY,FASTEN 115 BLK	YKSM	FD-SLM800
X	TAPE DECK	W 0802	8A-CJ4-654-010	OE	WIRE ASSY,FASTEN 115 BLK	YEZSM	FD-SLM801
X	TAPE TRANSPORT		M8-AZM-195-030		AZM-1 A2NM	YKSM	FD-SLM800
X	TAPE TRANSPORT		M8-AZM-195-030		AZM-1 A2NM	YEZSM	FD-SLM801
X	TAPE TRANSPORT		M8-AZM-195-030	--	AZM-1 A2NM	YKSM	FD-SLM800
X	TAPE TRANSPORT		M8-AZM-195-030	--	AZM-1 A2NM	YEZSM	FD-SLM801

ELECTRICAL MAIN PARTS LIST - 1 / 3 (ZZA - 1 YZRDSRPNC / YEZKGRPNC)

NOTE: The characters in the suffix column indicate the part usage.

ZRDS	XX	F
EZKG	XX	G
		KANRI			
REF.NO	PARTS NO.	NO.	DESCRIPTION	SUFFIX	
C	701	87-010-381-080	0E CAP, ELECT 330-16V	ABCDEFGH
C	702	87-010-404-080	0E CAP, ELECT 4.7-50V	ABCDEFGH
C	711	87-010-260-080	0E CAP, ELECT 47-25V	ABCD.FGH
C	711	87-010-553-080	0E CAP, E 47-16E
C	712	87-010-831-080	0E C-CAP, U, 0.1-16F	ABCDEFGH
C	718	87-012-179-080	0E C-CAP, U 20P-50 CH	.BCD
C	727	87-010-196-080	0E CHIP CAPACITOR, 0.1-25	ABCDEFGH
C	728	87-010-248-080	0E CAP, ELECT 220-10V	ABCDEFGH
C	722	87-012-176-080	0E CAP 15P	ABCDEFGH
C	721	87-012-176-080	0E CAP 15P	ABCDEFGH
C	720	87-012-195-080	0E C-CAP, U 100P-50CH	ABCDEFGH
C	729	87-012-274-080	0E CHIP CAP, U 1000P-50B	ABCDEFGH
C	725	87-018-131-080	0E CAP, CER 1000P-50VFG
C	806	87-012-286-080	0E CAP, U 0.01-25	ABCDEFGH
C	805	87-012-286-080	0E CAP, U 0.01-25	ABCDEFGH
CN	701	87-A60-650-010	1A CONN, 16P H GRY TUC-P16X-C1F
CN	701	87-A60-700-010	0E CONN, 13P H GRY TUC-P13X-C1	ABCDE.FGH
D	721	87-017-149-080	0E ZENER, HZS6A2L	.BCDEFGH
D	722	87-020-465-080	0E DIODE, 1SS133 (110MA)FG
D	721	87-A40-234-080	0E ZENER, MTZJ5.6A	A
IC	721	87-070-127-110	1C IC, LC72131 D	ABCDEFGH
Q	712	87-A30-072-080	0E C-TR, RT1P 144CE
Q	713	87-A30-072-080	0E C-TR, RT1P 144CE
Q	711	87-A30-196-080	0E TR, 2SC4115SRS	A
Q	711	87-A30-234-080	0E TR, CSC4115BC	.BCDEFGH
X	721	87-A70-061-010	1A VIB, XTAL 4.500MHZ CSA-309	ABCDEFGH
C	872	87-010-400-080	0E CAP, ELECT 0.47-50V	AB.....H
C	873	87-010-404-080	0E CAP, ELECT 4.7-50V	AB.....H
C	878	87-012-278-080	0E C-CAP, U 2200P-50 B	AB.....H
C	877	87-012-278-080	0E C-CAP, U 2200P-50 B	AB.....H
C	889	87-010-248-080	0E CAP, ELECT 220-10V	AB.....H
C	884	87-010-260-080	0E CAP, ELECT 47-25V	AB.....H
C	883	87-010-404-080	0E CAP, ELECT 4.7-50V	AB.....H
C	885	87-010-545-080	0E CAP, ELECT 0.22-50V	A.....H
C	886	87-010-545-080	0E CAP, ELECT 0.22-50V	A.....H
C	888	87-010-787-080	0E CAP, U 0.022-25	AB.....H
C	881	87-012-141-080	0E CHIP-CAPACITOR, 0.22-16F	AB.....H
C	882	87-012-172-080	0E CAPACITOR CHIP U 10P CH	AB.....H
C	887	87-012-286-080	0E CAP, U 0.01-25	AB.....H
C	886	87-016-460-080	0E C-CAP, S 0.22-16 B	.B
C	885	87-016-460-080	0E C-CAP, S 0.22-16 B	.B
IC	871	87-070-060-040	1F IC, TA2040AF	AB.....H
Q	873	87-026-226-080	0E CHIP-TR, DTA143EK	AB.....H
X	891	87-030-394-010	1B VIB, CER CSA3.6MGF228	AB.....H
C	705	87-010-213-080	0E C-CAP, S 0.015-50 B
C	706	87-010-213-080	0E C-CAP, S 0.015-50 B
C	705	87-A10-592-080	0E C-CAP, S 0.015-50 J B	.BCDE
C	706	87-A10-592-080	0E C-CAP, S 0.015-50 J B	.BCDE
C	734	87-010-180-080	0E C-CER 1500P
C	738	87-010-180-080	0E C-CER 1500P
C	737	87-010-180-080	0E C-CER 1500P
C	733	87-010-180-080	0E C-CER 1500P	ABCDEFGH
C	735	87-010-213-080	0E C-CAP, S 0.015-50 B
C	736	87-010-213-080	0E C-CAP, S 0.015-50 B
C	733	87-010-987-080	0E C-CAP, S 1500P-50 CH	.BCDE
C	735	87-010-987-080	0E C-CAP, S 1500P-50 CH	.BCDE
C	734	87-010-987-080	0E C-CAP, S 1500P-50 CH	.BCDE
C	736	87-010-987-080	0E C-CAP, S 1500P-50 CH	.BCDE
C	734	87-012-280-080	0E CAP, U 3300P-50FG
C	733	87-012-280-080	0E CAP, U 3300P-50FG
C	738	87-A10-592-080	0E C-CAP, S 0.015-50 J B	.BCDE
C	737	87-A10-592-080	0E C-CAP, S 0.015-50 J B	.BCDE
C	752	87-010-220-080	0E C-CAP, S 0.018-25 B	.B..E
C	751	87-010-220-080	0E C-CAP, S 0.018-25 B	.B..E
C	758	87-012-167-080	0E C-CAP, U 5P-50 CH	ABCDEFGH
C	757	87-012-188-080	0E C-CAP, U 47P-50 CH	ABCDEFGH
C	753	87-012-195-080	0E C-CAP, U 100P-50CHFG
C	752	87-012-282-080	0E CAP, U 4700P-50FG
C	756	87-012-286-080	0E CAP, U 0.01-25	ABCDEFGH
C	751	87-012-365-080	0E C-CAP, S 0.027-25VBK	..CD
C	752	87-012-365-080	0E C-CAP, S 0.027-25VBK	..CD
C	766	87-010-197-080	0E CAP, CHIP 0.01 DMFG
C	769	87-010-260-080	0E CAP, ELECT 47-25V	ABCDEFGH
C	765	87-012-286-080	0E CAP, U 0.01-25	ABCDEFGH
C	768	87-012-286-080	0E CAP, U 0.01-25	ABCDEFGH
C	764	87-012-337-080	0E C-CAP, U 56P-50 CH	ABCDE..H
C	774	87-010-263-080	0E CAP, ELECT 100-10V	ABCDEFGH
C	771	87-010-383-080	0E CAP, ELECT 33-25V	ABCDEFGH
C	777	87-010-400-080	0E CAP, ELECT 0.47-50V	ABCDE..H
C	775	87-010-404-080	0E CAP, ELECT 4.7-50V	ABCDEFGH


ELECTRICAL MAIN PARTS LIST - 2 / 3 (ZZA - 1 YZRDSRPNC / YEZKGRPNC)

C	777	87-010-493-040	OE	CAP,E 0.47-50 GAS
C	777	87-010-493-080	OE	CAP,E 0.47-50 GASFG
C	770	87-010-829-080	OE	CAP, U 0.047-16	ABCDEFGH.....
C	780	87-010-196-080	OE	CHIP CAPACITOR,0.1-25	ABCDEFGH.....
C	786	87-010-401-080	OE	CAP, ELECT 1-50V	ABCDEFGH.....
C	785	87-010-401-080	OE	CAP, ELECT 1-50V	ABCDEFGH.....
C	785	87-010-405-080	OE	CAP, ELECT 10-50V	ABCDEFGH.....
C	786	87-010-405-080	OE	CAP, ELECT 10-50V	ABCDEFGH.....
C	786	87-010-494-080	OE	CAP, ELECT GAS 1/50E.....
C	785	87-010-494-080	OE	CAP, ELECT GAS 1/50E.....
C	788	87-012-275-080	OE	C-CAP,U 1200P-50 B	ABCDEFGH.....
C	787	87-012-275-080	OE	C-CAP,U 1200P-50 B	ABCDEFGH.....
C	784	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	796	87-010-403-080	OE	CAP, ELECT 3.3-50V	ABCDEFGH.....
C	794	87-010-406-080	OE	CAP, ELECT 22-50	ABCDEFGH.....
C	795	87-010-596-080	OE	CAP, S 0.047-16	..CDEFG.....
C	793	87-012-273-080	OE	C-CAP,U 820P-50 B	ABCDEFGH.....
C	798	87-012-276-080	OE	CAP, CHIP SS 1500 PBK	A....FGH.....
C	797	87-012-276-080	OE	CAP, CHIP SS 1500 PBK	A....FGH.....
D	771	87-020-465-080	OE	DIODE,1SS133 (110MA)	ABCDEFGH.....
D	773	87-A40-291-080	OE	DIODE,1N4148 (CPT)
IC	771	87-A20-913-010	1D	IC,LA1837NL	ABCDEFGH.....
L	771	87-A50-266-010	1A	COIL,FM DET-2N(TOK)	ABCDEFGH.....
L	772	87-A90-052-010	1C	FLTR,CFMT-450A(TOK)E.....
L	772	87-A90-053-010	1C	FLTR,PCFMT-060(TOK)	AB.....H.....
L	772	87-A90-733-010	1A	FLTR,PCFAZH-450 (TOK)
L	772	87-A91-110-010	1B	FLTR,PCFJZH-450 (TOK)	..CD.FG.....
L	781	87-005-847-080	OE	COIL,2.2UH(CECS)FG.....
L	792	87-A50-027-010	1A	COIL,1 POLE MPX(TOK)FG.....
L	791	87-A50-027-010	1A	COIL,1 POLE MPX(TOK)FG.....
X	771	87-030-354-010	1A	VIB,CF BFU 450CE.....
C	859	87-012-286-080	OE	CAP, U 0.01-25F.....
C	865	87-010-196-080	OE	CHIP CAPACITOR,0.1-25F.....
C	866	87-010-405-080	OE	CAP, ELECT 10-50VF.....
C	864	87-010-405-080	OE	CAP, ELECT 10-50VF.....
C	869	87-012-180-080	OE	C-CAP,U 22P-50 CHF.....
C	868	87-012-184-080	OE	C-CAP,U 33P-50 CHF.....
C	862	87-012-199-080	OE	CAP 220PF.....
C	861	87-012-199-080	OE	CAP 220PF.....
C	863	87-012-270-080	OE	CAP, U 470P-50F.....
C	867	87-012-286-080	OE	CAP, U 0.01-25F.....
IC	851	87-A20-440-040	1H	C-IC,BU1920FSF.....
L	851	87-005-847-080	OE	COIL,2.2UH(CECS)F.....
Q	853	87-A30-076-080	OE	C-TR,2SC3052FF.....
X	851	87-A70-091-010	1B	VIB,XTAL 4.332MHZ CSA-309F.....
C	808	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	809	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	801	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	803	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	807	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	804	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	802	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	810	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	820	87-010-260-080	OE	CAP, ELECT 47-25V	ABCDEFGH.....
C	893	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	894	87-012-286-080	OE	CAP, U 0.01-25	ABCDEFGH.....
C	942	87-012-168-080	OE	C-CAP,U 6P-50 CHFG.....
C	942	87-012-172-080	OE	CAPACITOR CHIP U 10P CHE.....
C	941	87-012-180-080	OE	C-CAP,U 22P-50 CH
C	944	87-014-049-080	OE	CAP,PP 470P-100 JE.....
C	944	87-014-051-080	OE	CAPACITOR (PP), 560PE.....
C	949	87-A10-039-080	OE	C-CAP,U 470P-50 J CHFG.....
C	958	87-010-197-080	OE	CAP, CHIP 0.01 DMFG.....
C	956	87-010-263-080	OE	CAP, ELECT 100-10VE.....
C	959	87-010-831-080	OE	C-CAP,U,0.1-16FEFG.....
C	954	87-012-358-080	OE	C-CAP,S 0.47-10 F ZE.....
C	950	87-014-073-080	OE	CAP,PP 4700P-100 JE.....
C	963	87-010-196-080	OE	CHIP CAPACITOR,0.1-25	ABCDEFGH.....
C	962	87-010-401-080	OE	CAP, ELECT 1-50VFG.....
C	964	87-012-170-080	OE	C-CAP,U 8P-50 CH	A.....
C	961	87-012-174-080	OE	CAP CHIP CERA SS 12P CHJ	..BCD...H.....
C	960	87-012-350-080	OE	C-CAP,1-25 FE.....
CF	802	82-785-747-010	1A	CF MS2 GHY RFG.....
CF	802	87-008-261-010	1A	FILTER, SFE10.7MA5-A	ABCDE..H.....
CF	801	87-008-261-010	1A	FILTER, SFE10.7MA5-A	ABCDE..H.....
CF	801	87-008-423-010	1A	CERAMIC FILTER, SFE10.7FG.....
D	944	87-020-465-080	OE	DIODE,1SS133 (110MA)EFG.....
D	942	87-A40-270-080	OE	C-DIODE,MC2838FG.....
D	981	87-A40-618-080	1B	VARI-CAP,SVC 348(S/T)E.....
FFE	801	A8-6ZA-190-030	OE	6ZA-1 FEUNM
FFE	801	A8-6ZA-191-130		6ZA-1 FEENMFG.....
FFE	801	A8-6ZA-192-030	2Y	6ZA-1 FEJNM	..B.....
FFE	801	A8-6ZA-193-130		6ZA-1 FEVNM
FFE	801	A8-6ZA-199-170		6ZA-1 FEENC
FFE	801	A8-6ZA-19A-070		6ZA-1 FEJNC
FFE	801	A8-6ZA-19D-070	1H	6ZA-1 YFEJNC	A.....H.....
FFE	801	A8-8ZA-190-030		8ZA-1 FEUNM	..C.E.....

ELECTRICAL MAIN PARTS LIST - 3 / 3 (ZZA - 1 YZRDSRPNC / YEZKGRPNC)

FFE	801	A8-8ZA-192-070	8ZA-1 FEUNC
FFE	801	A8-8ZA-193-070	1E 8ZA-1 YFEUNCD.....
J	801	87-033-241-010	1B TERMINAL, ANT AJ-2039FG.....
J	801	87-A60-702-010	1B TERMINAL, ANT 4P CJ-9036	ABCD...H.....
J	801	87-A60-703-010	1A TERMINAL, ANT 3P CJ-9037E.....
J	940	81-754-629-010	0E CONNECTOR, 2PE.....
L	832	87-005-847-080	0E COIL, 2.2UH (CECS)FG.....
L	943	87-005-372-080	0E COIL, S 1MHM
L	942	87-A50-019-010	0E COIL, OSC LW (COI)FG.....
L	941	87-A50-020-010	0E COIL, ANT LW (COI)FG.....
L	941	87-A50-022-010	0E COIL, ANT SW (COI)E.....
L	944	87-A50-159-010	0E COIL, 10MH K C2BE.....
L	942	87-A50-173-010	0E COIL, OSC SW-N (COI)E.....
L	943	87-A50-432-010	0E COIL, 1MH K CWE.....
L	981	87-A50-430-010	0E COIL, ANT MW (3BSW)E.....
L	982	87-A50-431-010	0E COIL, OSC MW (3BSW)E.....
L	981	87-NF4-650-010	1D COIL, AM PACK 4N (TOK)	A.....
L	981	87-NF4-651-010	1C COIL, AM PACK2N (TOM)
L	981	88-NF8-625-110	1D COIL, AM PACK3N (TOK)
L	981	8Z-ZA1-664-010	1D COIL, AM PACK 4 (TOK)	.BCD...H.....
L	981	8Z-ZA1-665-010	1E COIL, AM PACK 2 (TOK)FG.....
Q	712	87-A30-072-080	0E C-TR, RT1P 144C	ABCD.FGH.....
Q	805	89-327-143-080	0E TR, 2SC2714 (0.1W)	ABCDEFGH.....
Q	942	87-A30-075-080	0E C-TR, 2SA1235FE.....
Q	943	87-A30-075-080	0E C-TR, 2SA1235FE.....
Q	944	87-A30-076-080	0E C-TR, 2SC3052FE.....
Q	945	87-A30-076-080	0E C-TR, 2SC3052FE.....
Q	949	87-A30-076-080	0E C-TR, 2SC3052FE.....
Q	948	87-A30-086-070	0E C-TR, CSD1306EEFG.....
Q	947	89-503-602-080	1A C-FET, 2SK360EE.....
Q	947	89-505-434-540	0E C-FET, 2SK543 (4/5)FG.....
Q	951	87-A30-074-080	0E C-TR, RT1P 141CEFG.....
TC	942	87-011-164-010	0E CAPACITOR, TRIMMER 30PFG.....
TC	941	87-011-173-010	1A CERAMIC TRIMMER 20P
TC	941	87-011-220-080	1A TRIMMER CAP 20P VTCE.....
TC	943	87-011-221-080	1A CAP, TRIMMER 30PE.....

SCHEMATIC DIAGRAM-1 (RX-SLM800/801:MAIN)

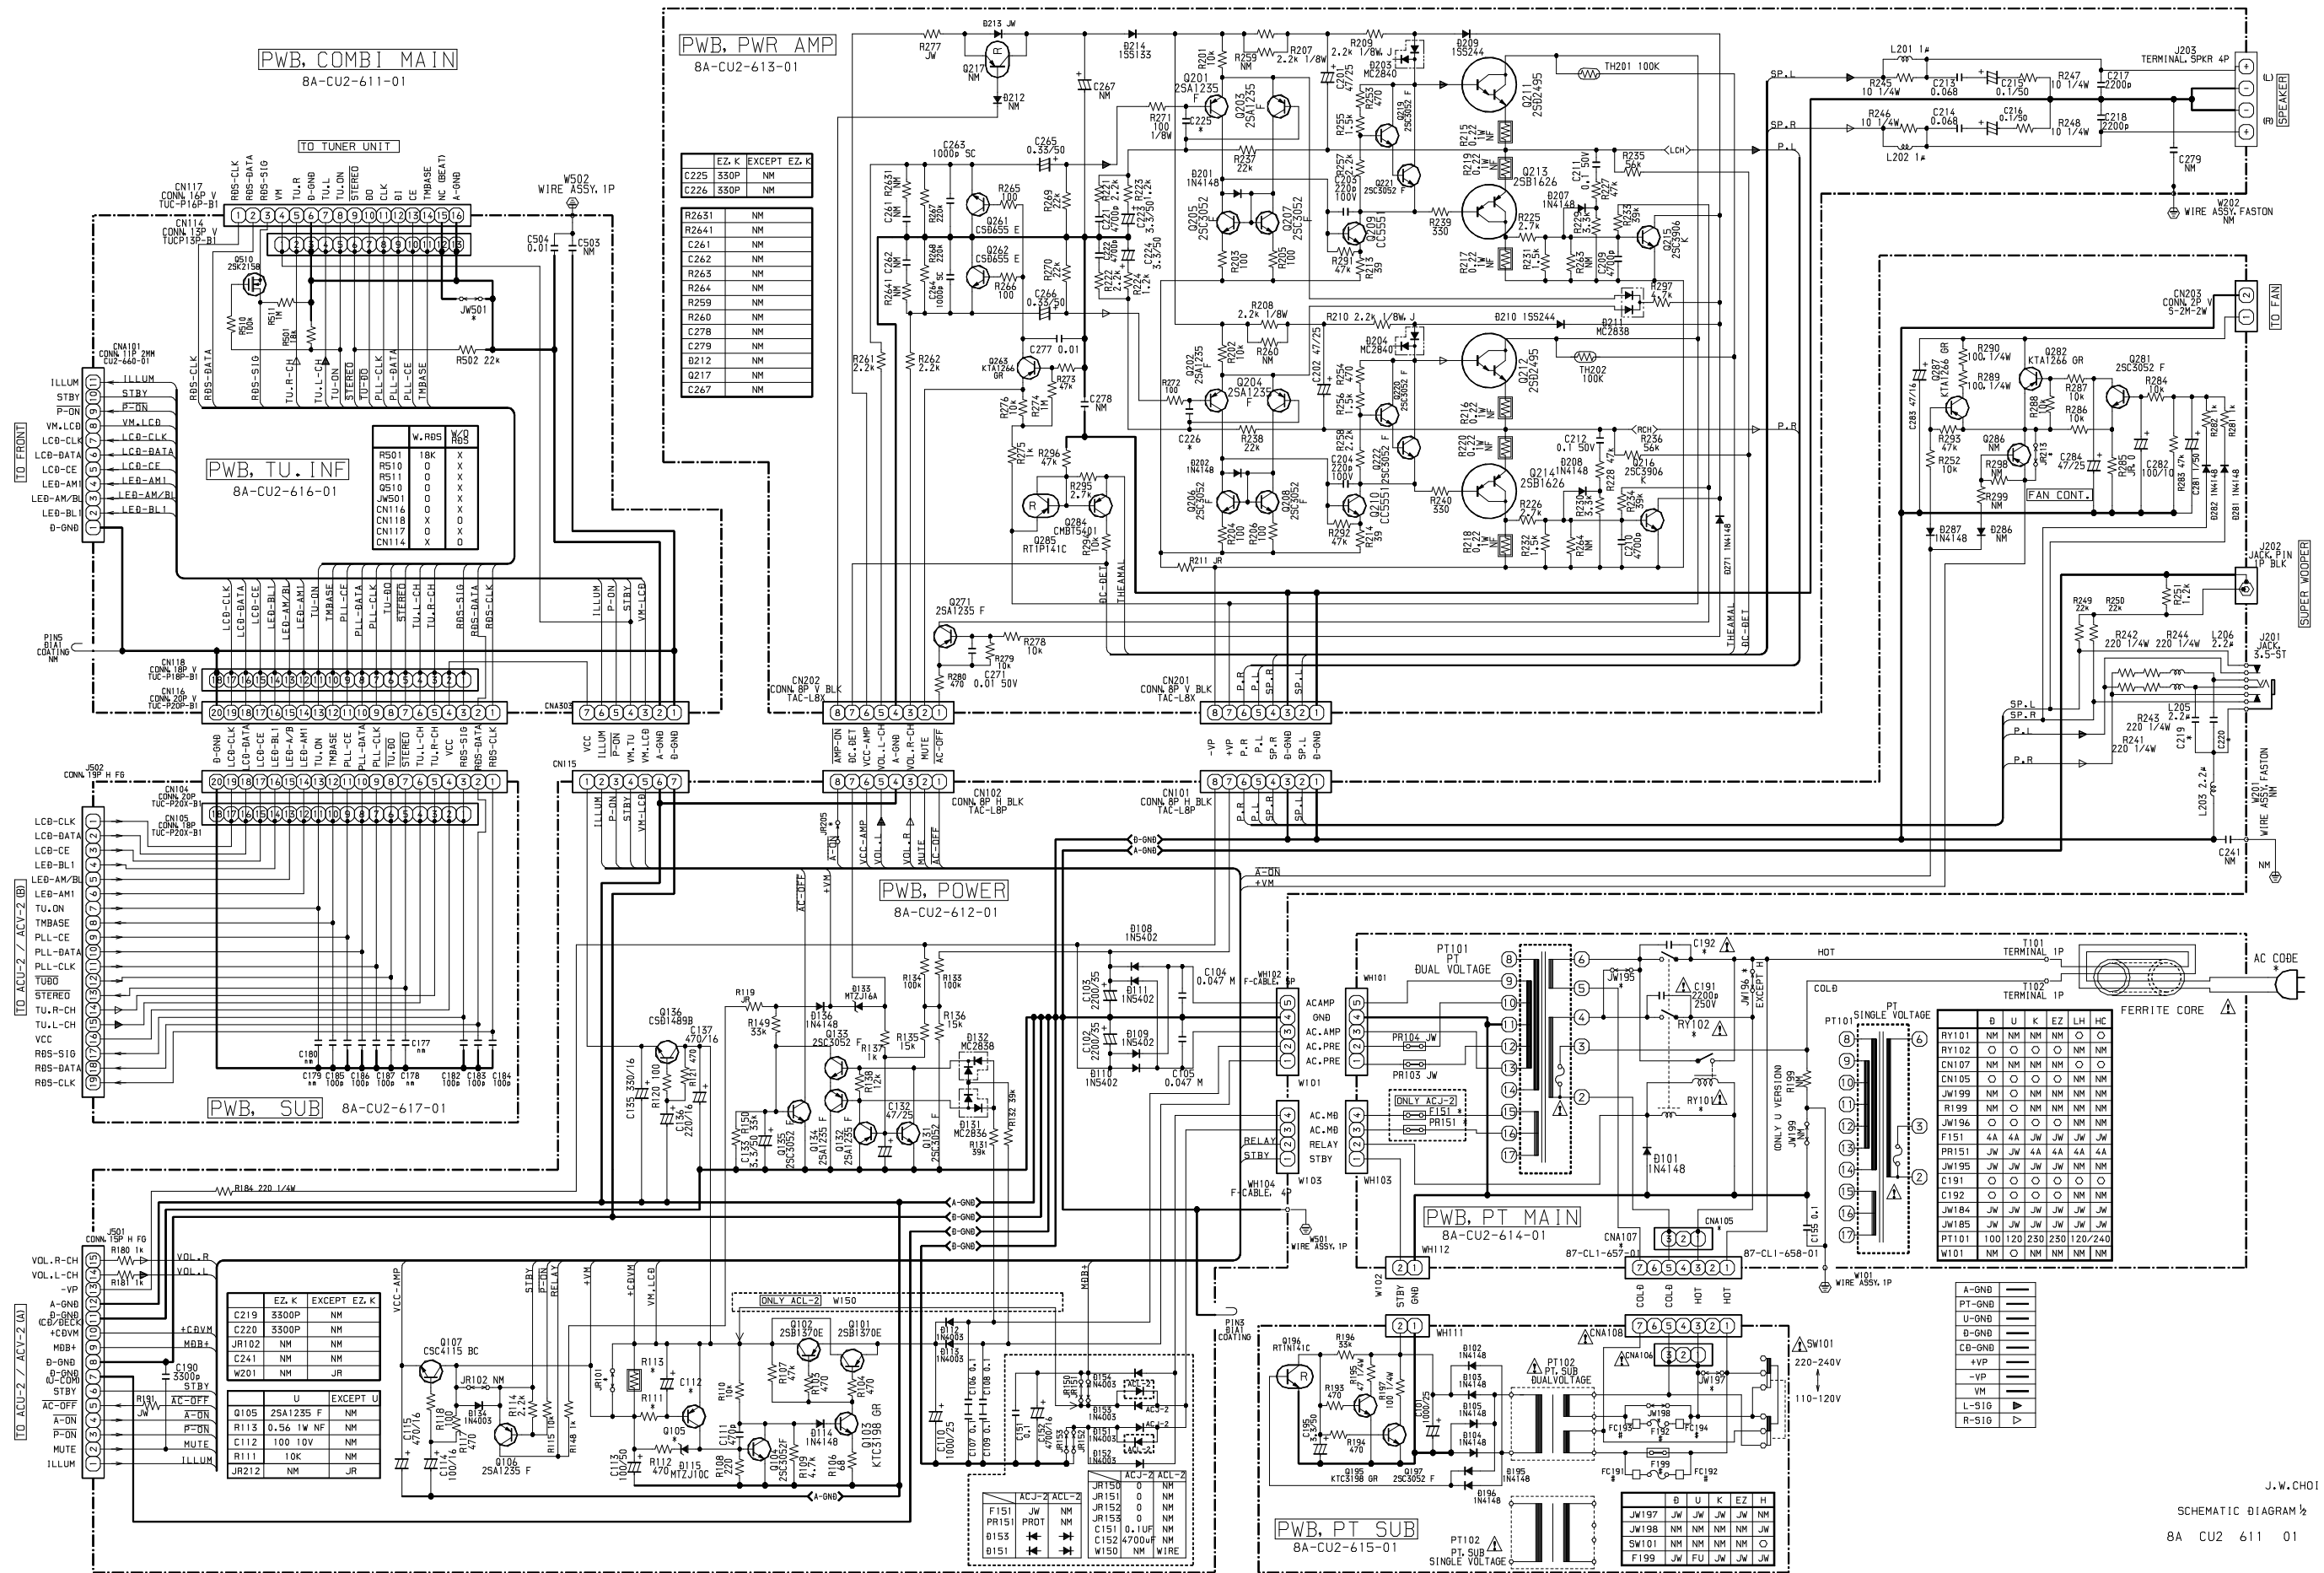

J. W. CHOI

SCHEMATIC DIAGRAM 1/2


8A CU2 611 01

ACU-C/ACU-2

ACU-C

2000 08 01

SCHEMATIC DIAGRAM – 2 (RX-SLM800 /801 : FRONT)

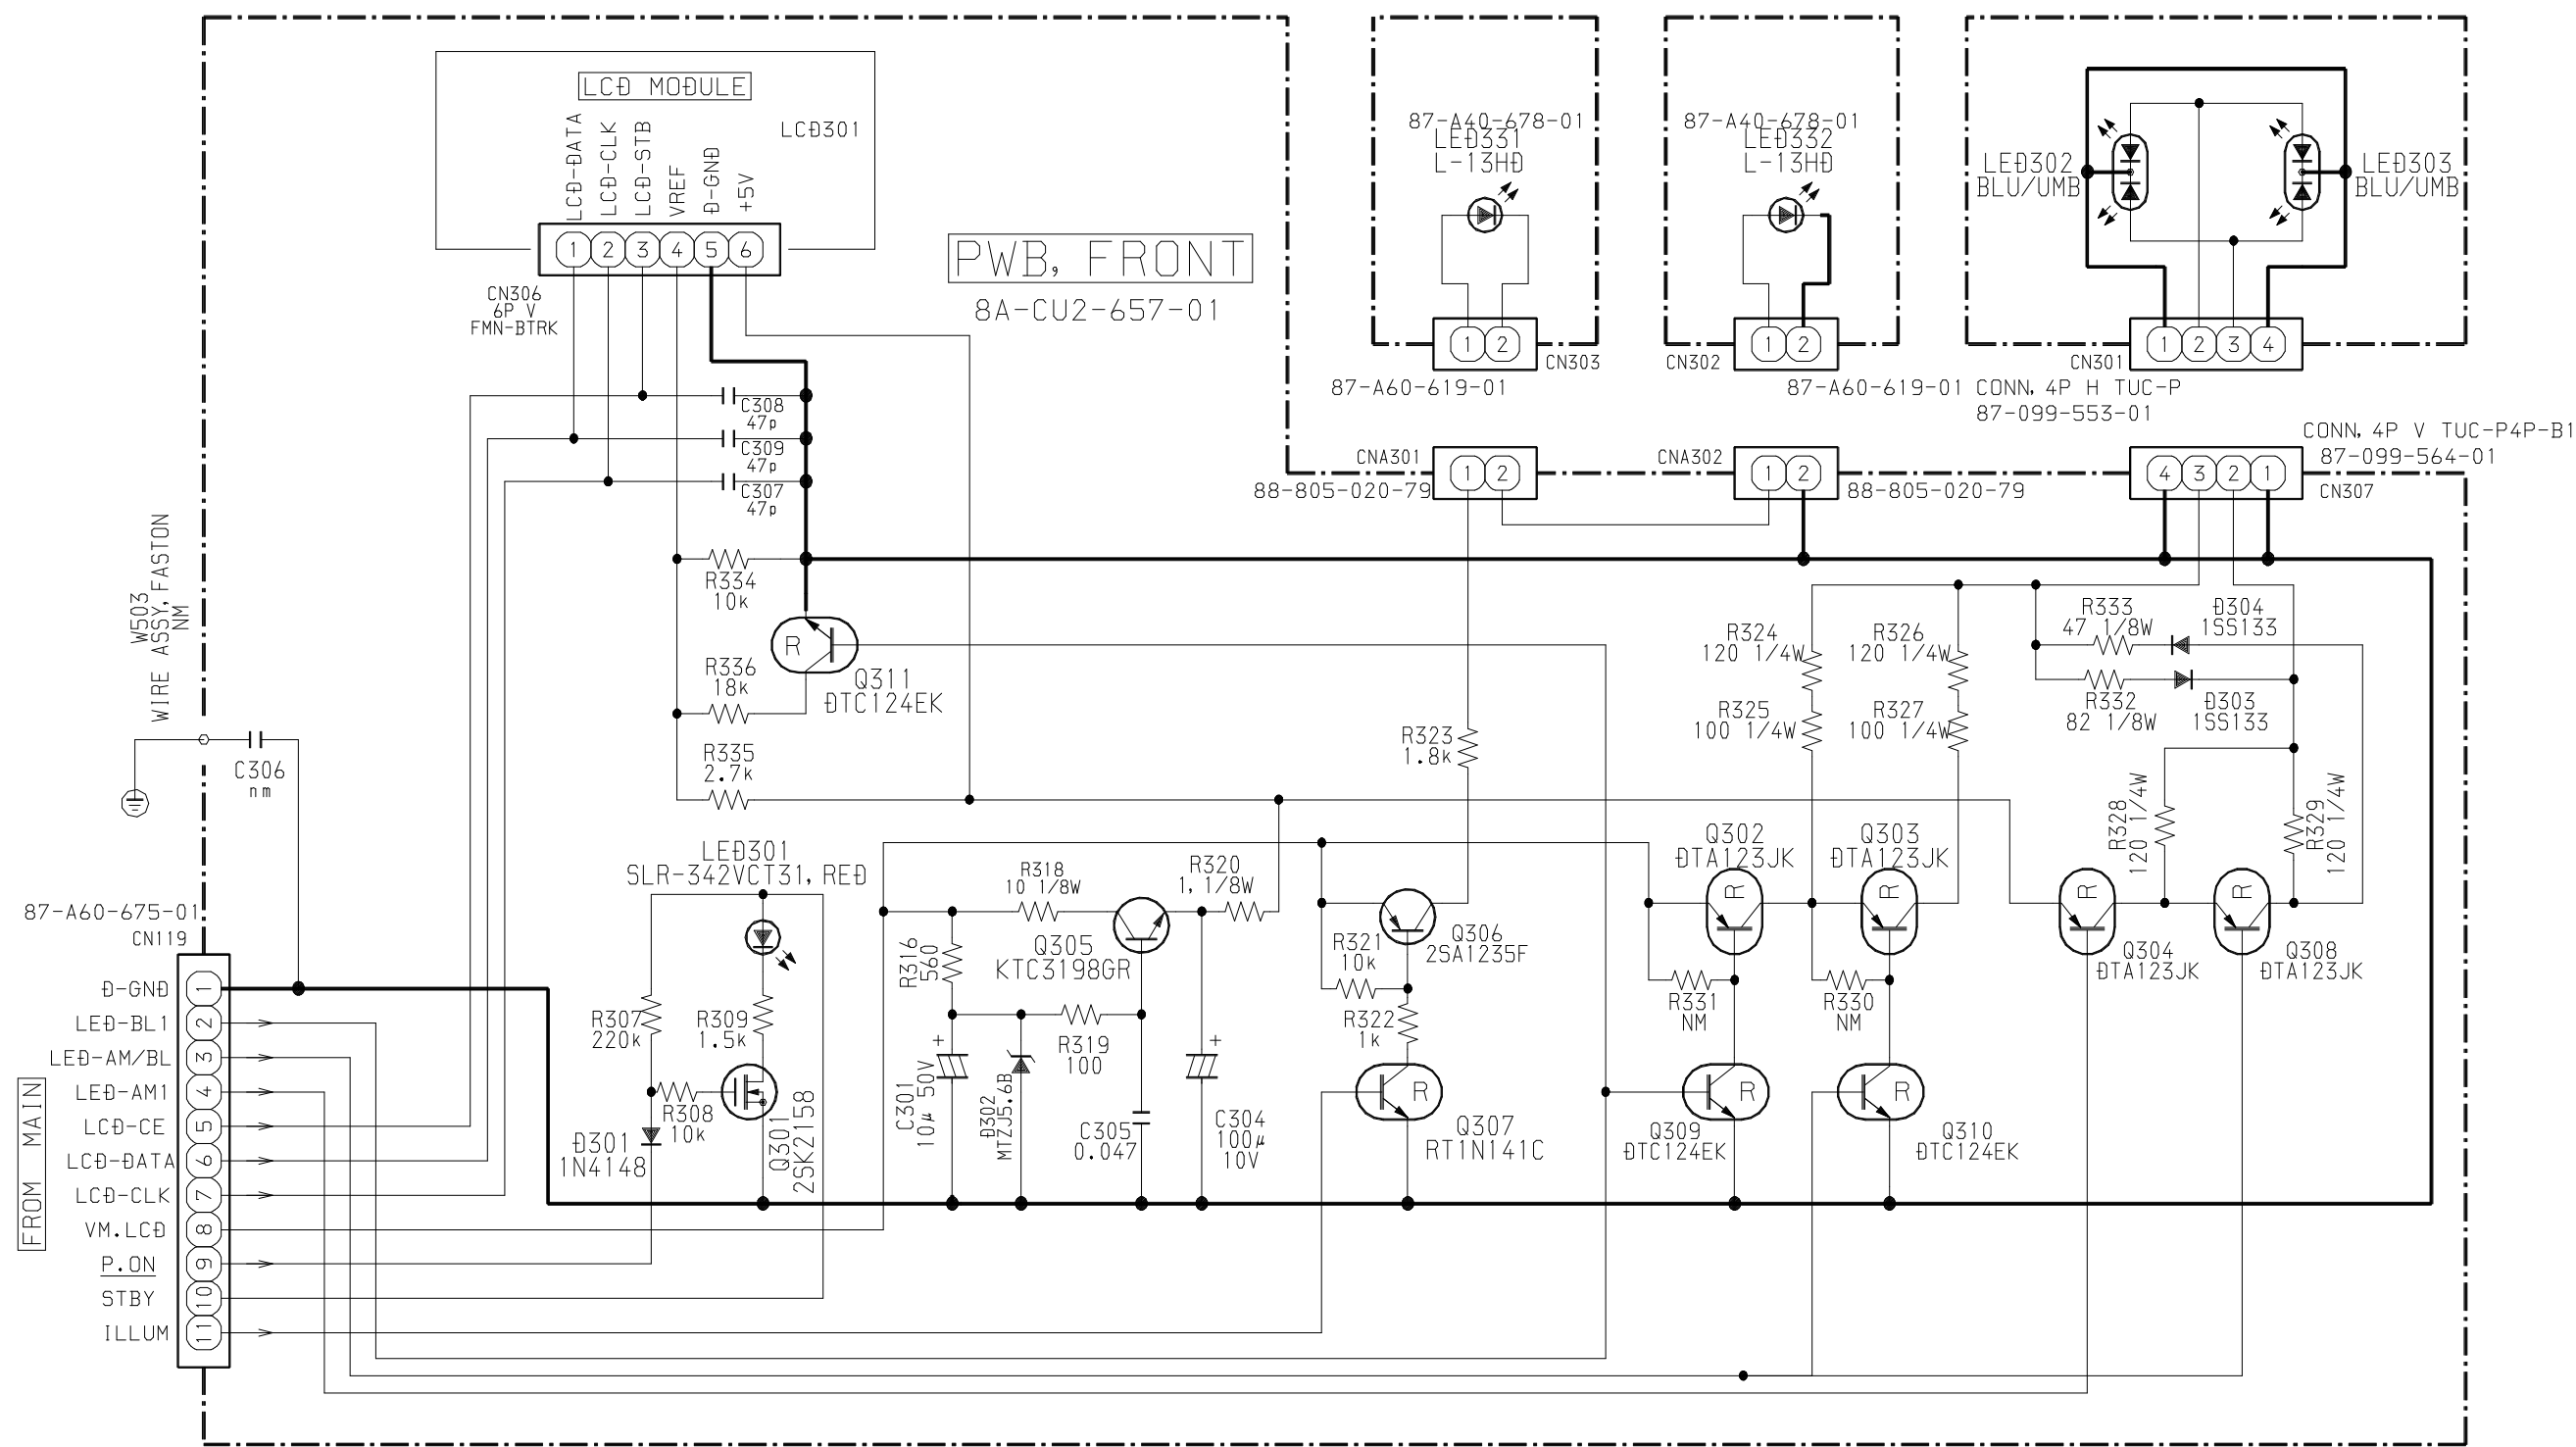

J.W.CHOI

SCHEMATIC DIAGRAM (FRONT) 2/2


8A CU2 611 01

ACU-C/ACU-2

ACU-C


2000 08 01

SCHEMATIC DIAGRAM – 3 (RX-SLM800 / 801 : ZZA-1 EZKG RPNM / ZRDS RPNM)

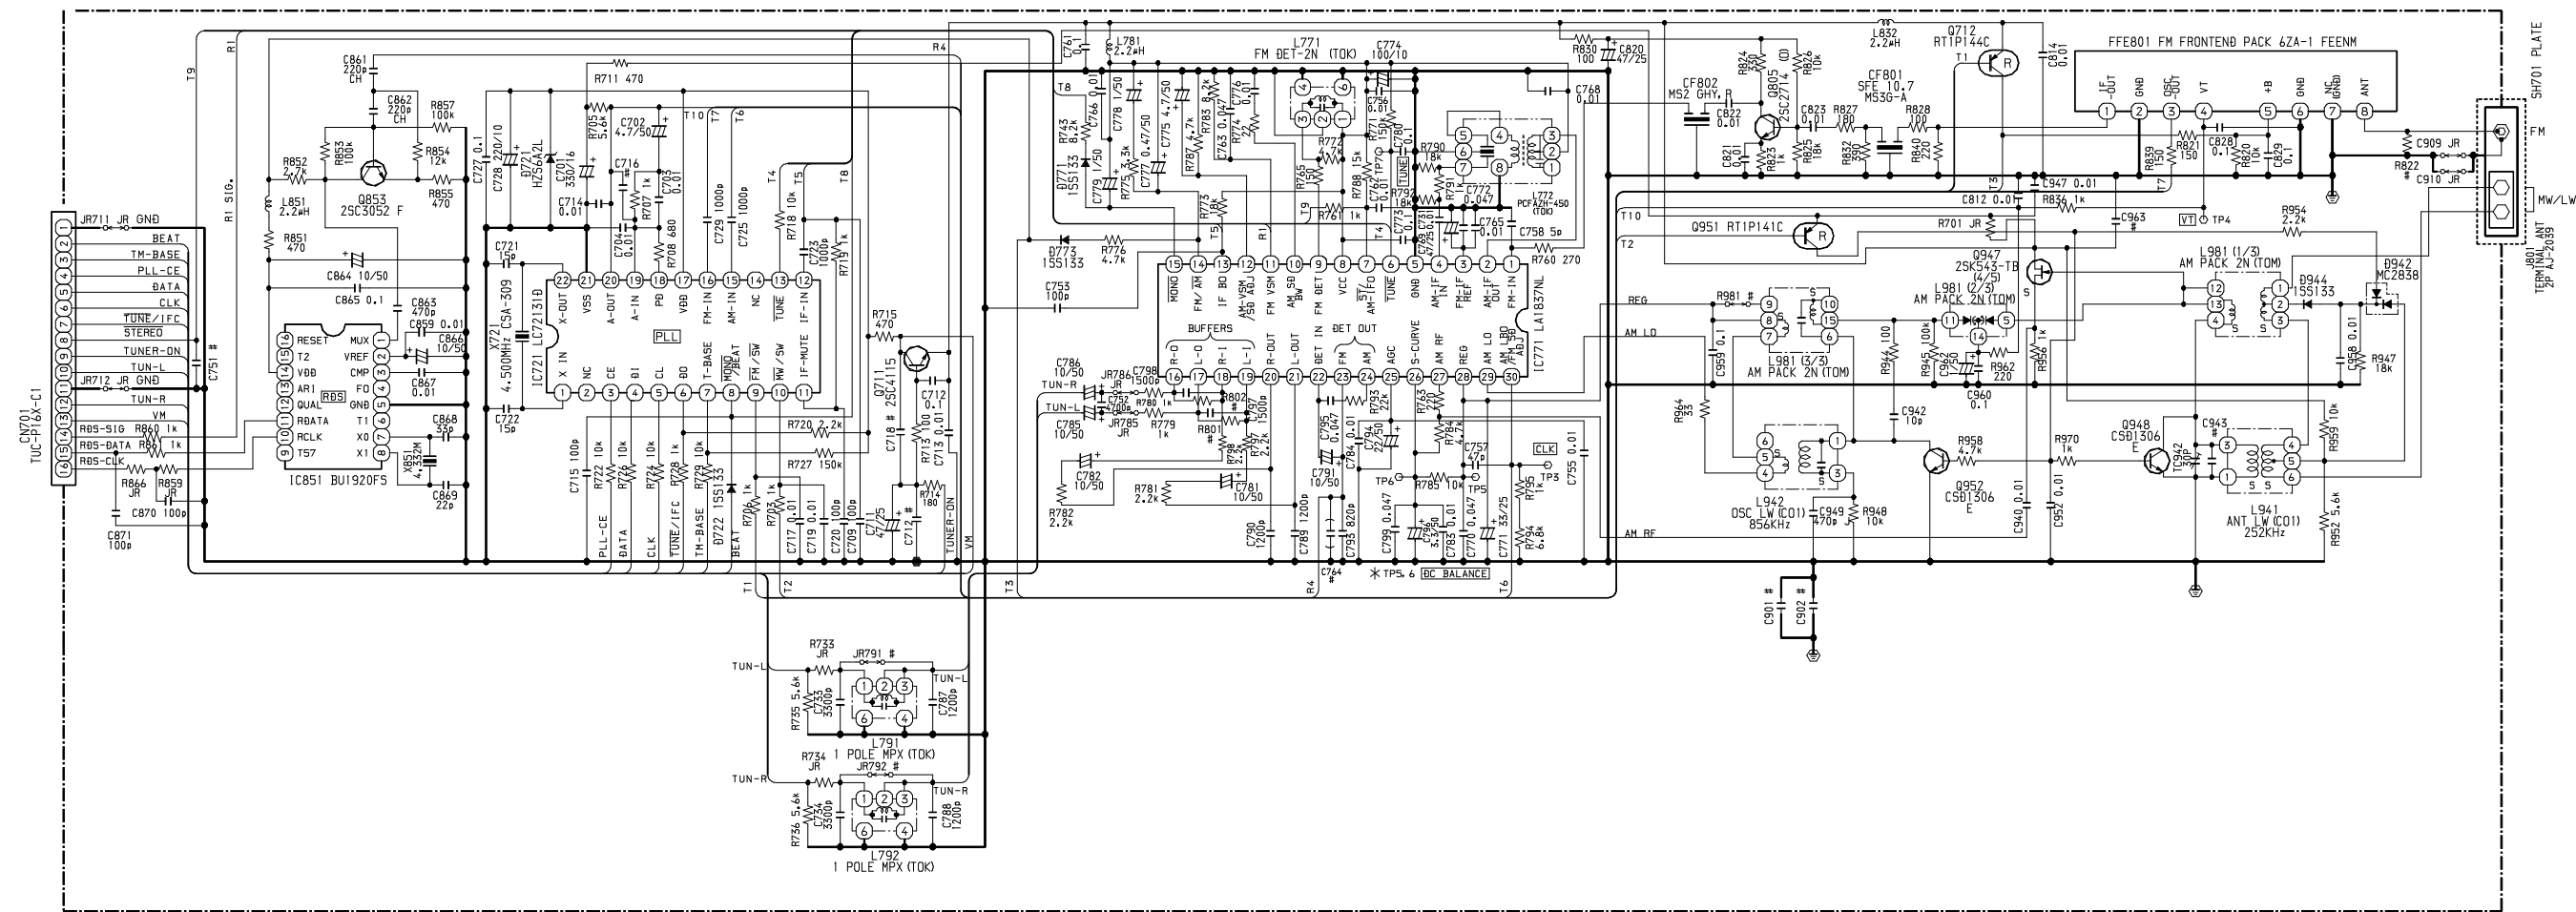


B-ZZA-1-EZR0S

94V0 1=1.6
HALOGEN FREE 130°C
BZ ZA1 613 01
QC-BZZA1-04-1

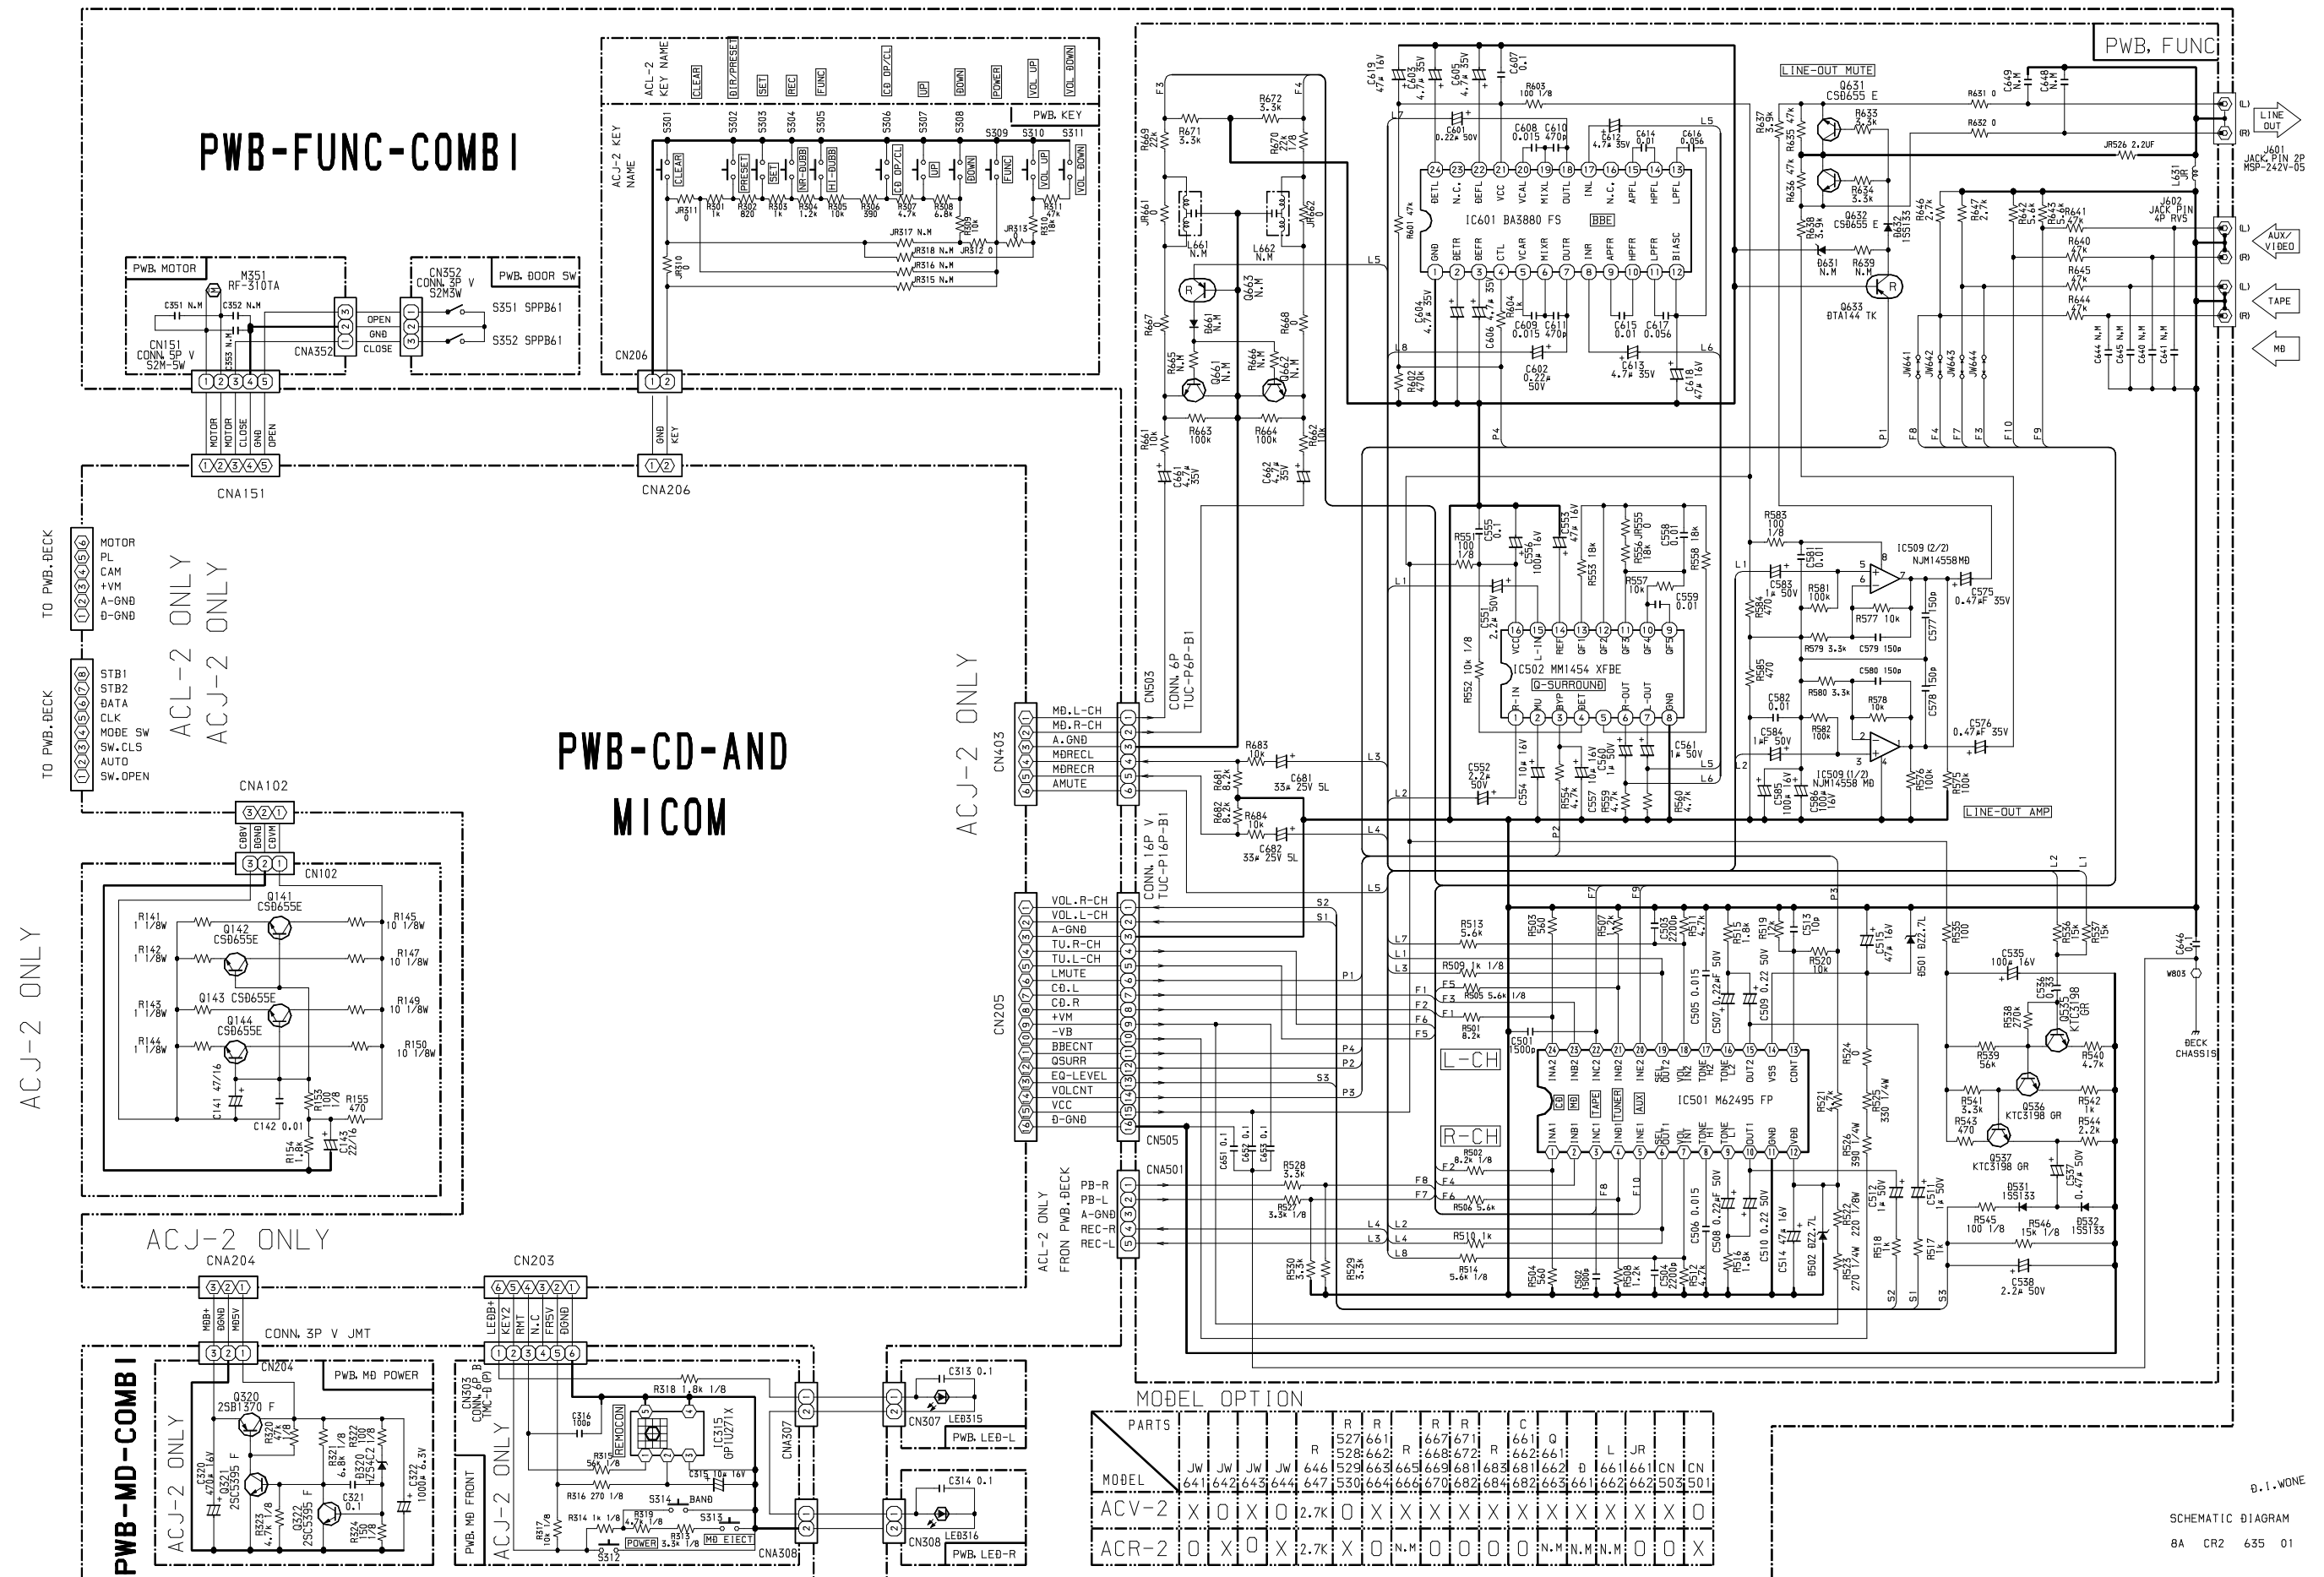

SCHEMATIC DIAGRAM – 5 (FD-SLM800 /801 : MICON)

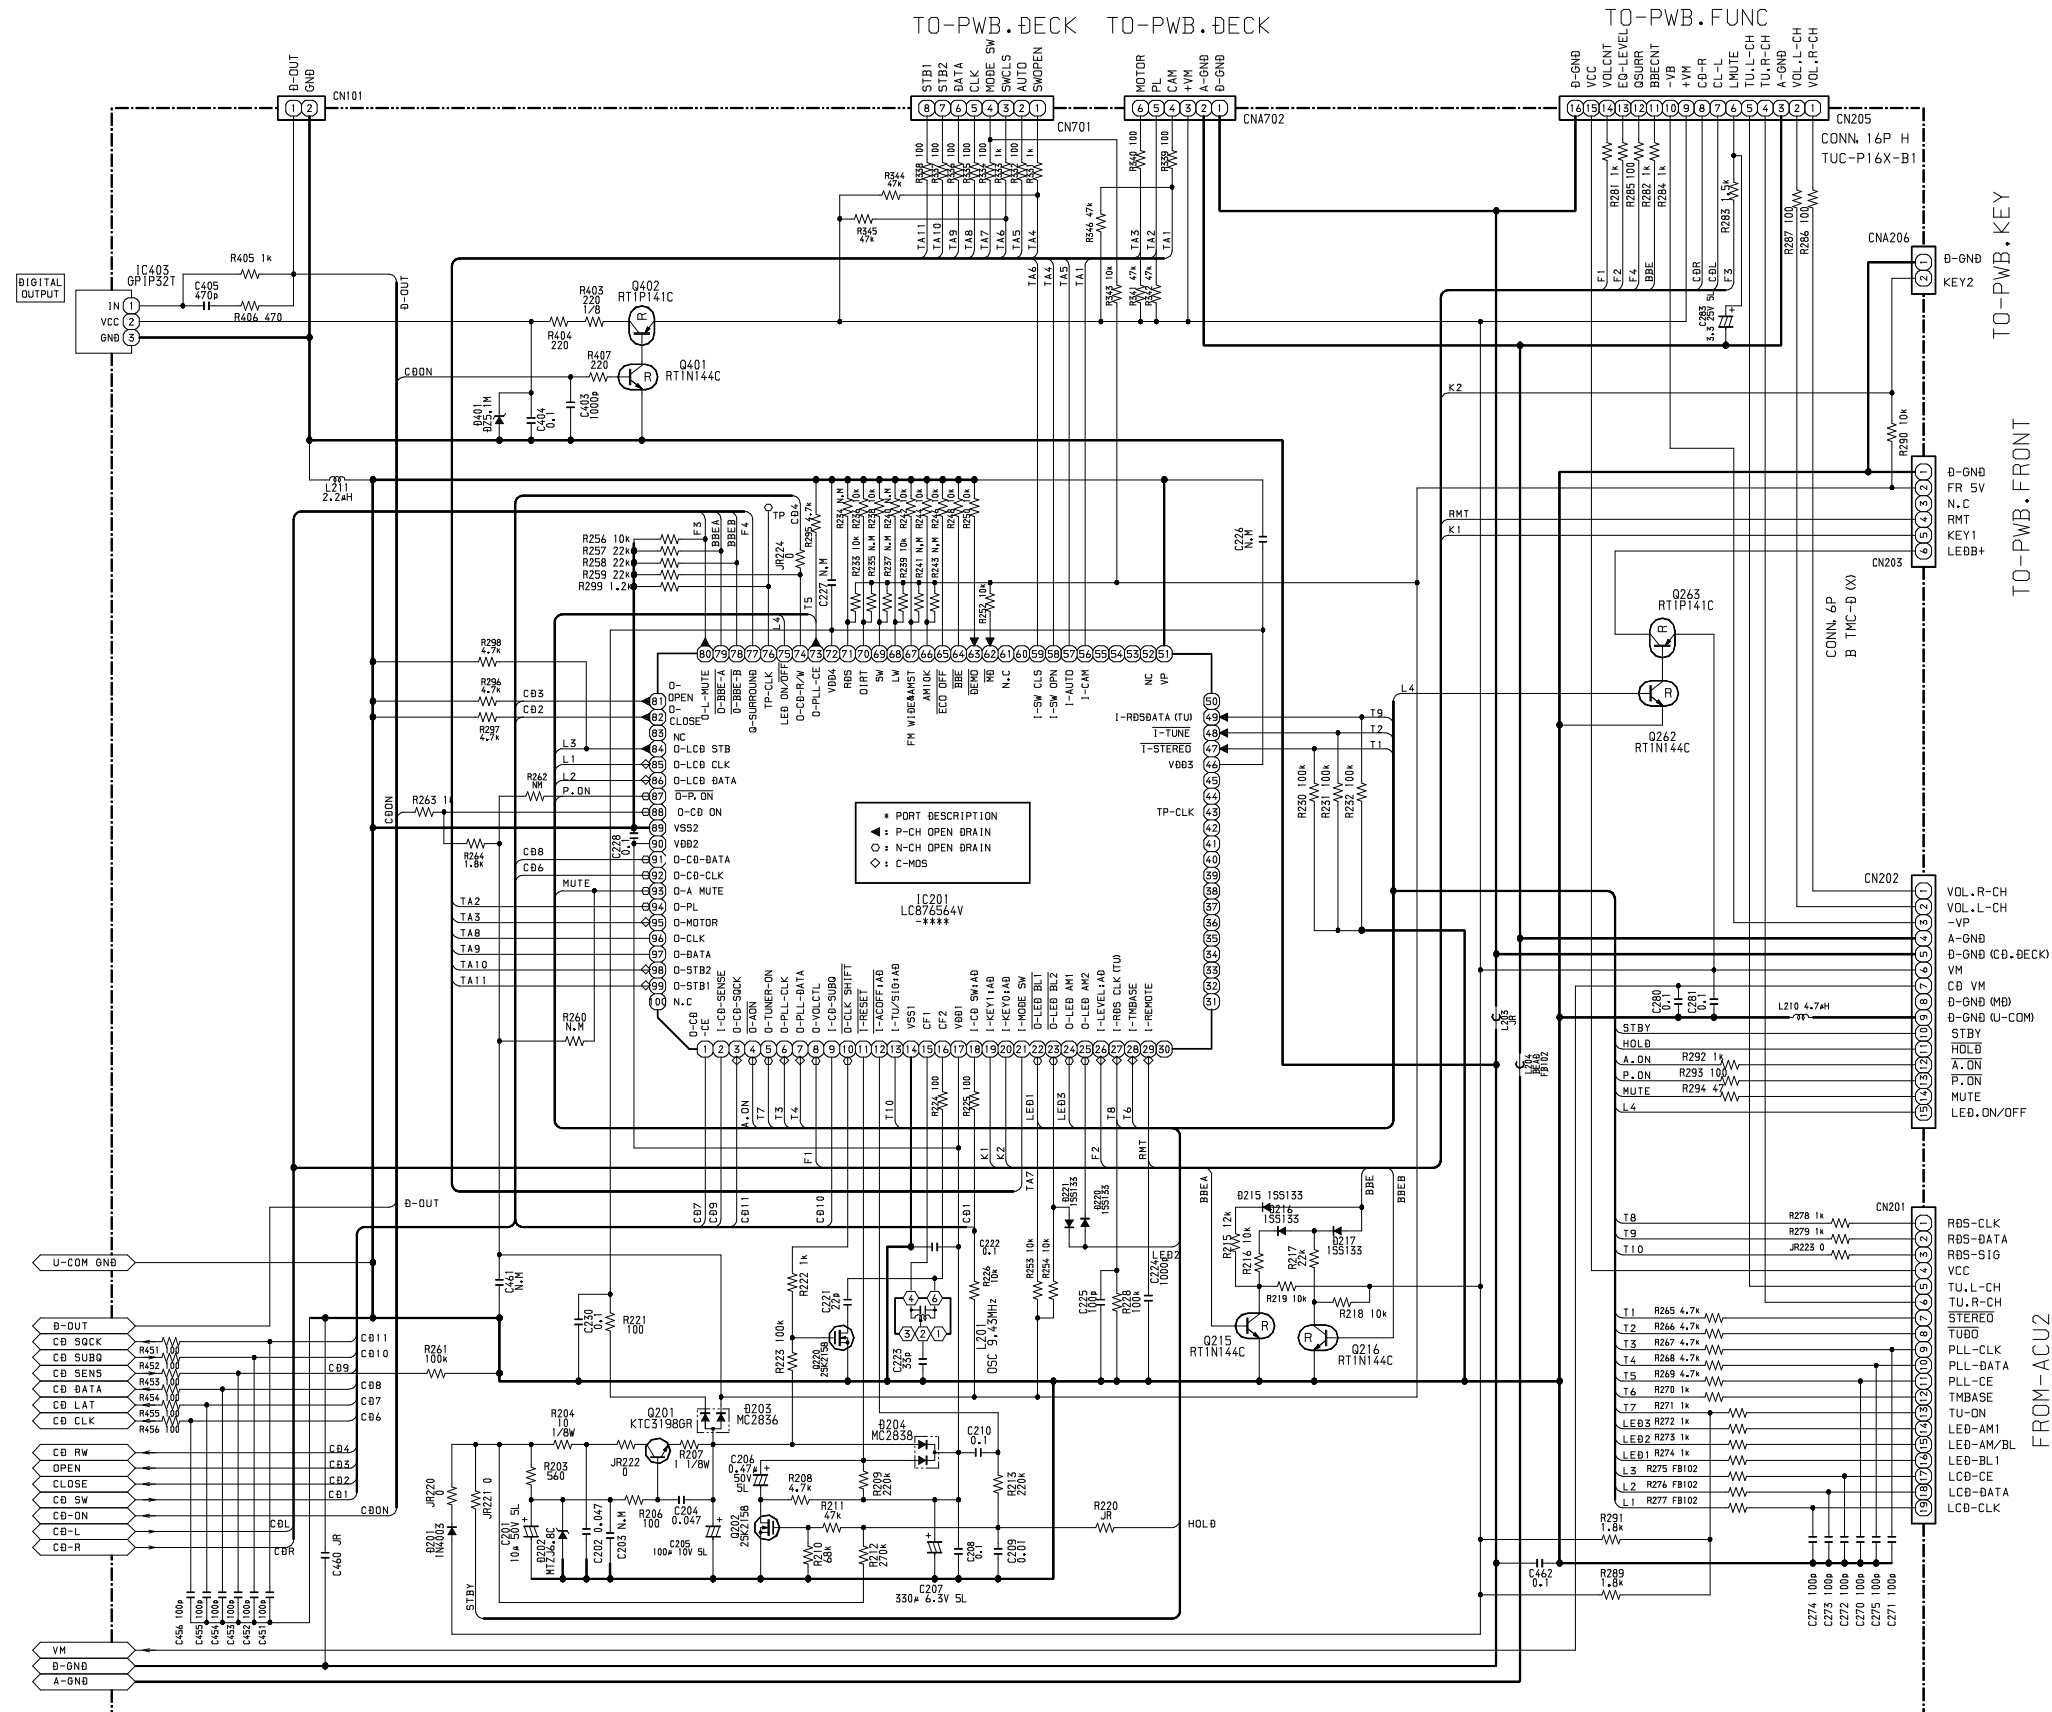[illegible]


	RBS	DIRT	SW	LW
	ACTIVE R23R234	HACTIVE R235R236	HACTIVE R237R238	HACTIVE R239R240
Ø	X	X	X	X
EZ	X	X	X	X
K	X	X	X	X
HC/HR	X	X	X	X
LK/LR	X	X	X	X
V	X	X	X	X

	AMST		AM10K	
	ACTIVE	INACTIVE	ACTIVE	INACTIVE
0	X	X	X	0
EZ	X	0	X	0
K	X	0	X	0
HC/HR	X	0	X	0
LH, U	X	0	0	X
v	X	0	X	0


D. I. WONE

SCHEMATIC DIAGRAM
(1/2)
8A CV2 631 01

SCHEMATIC DIAGRAM – 6 (FD-SLM800 /801 : CD)

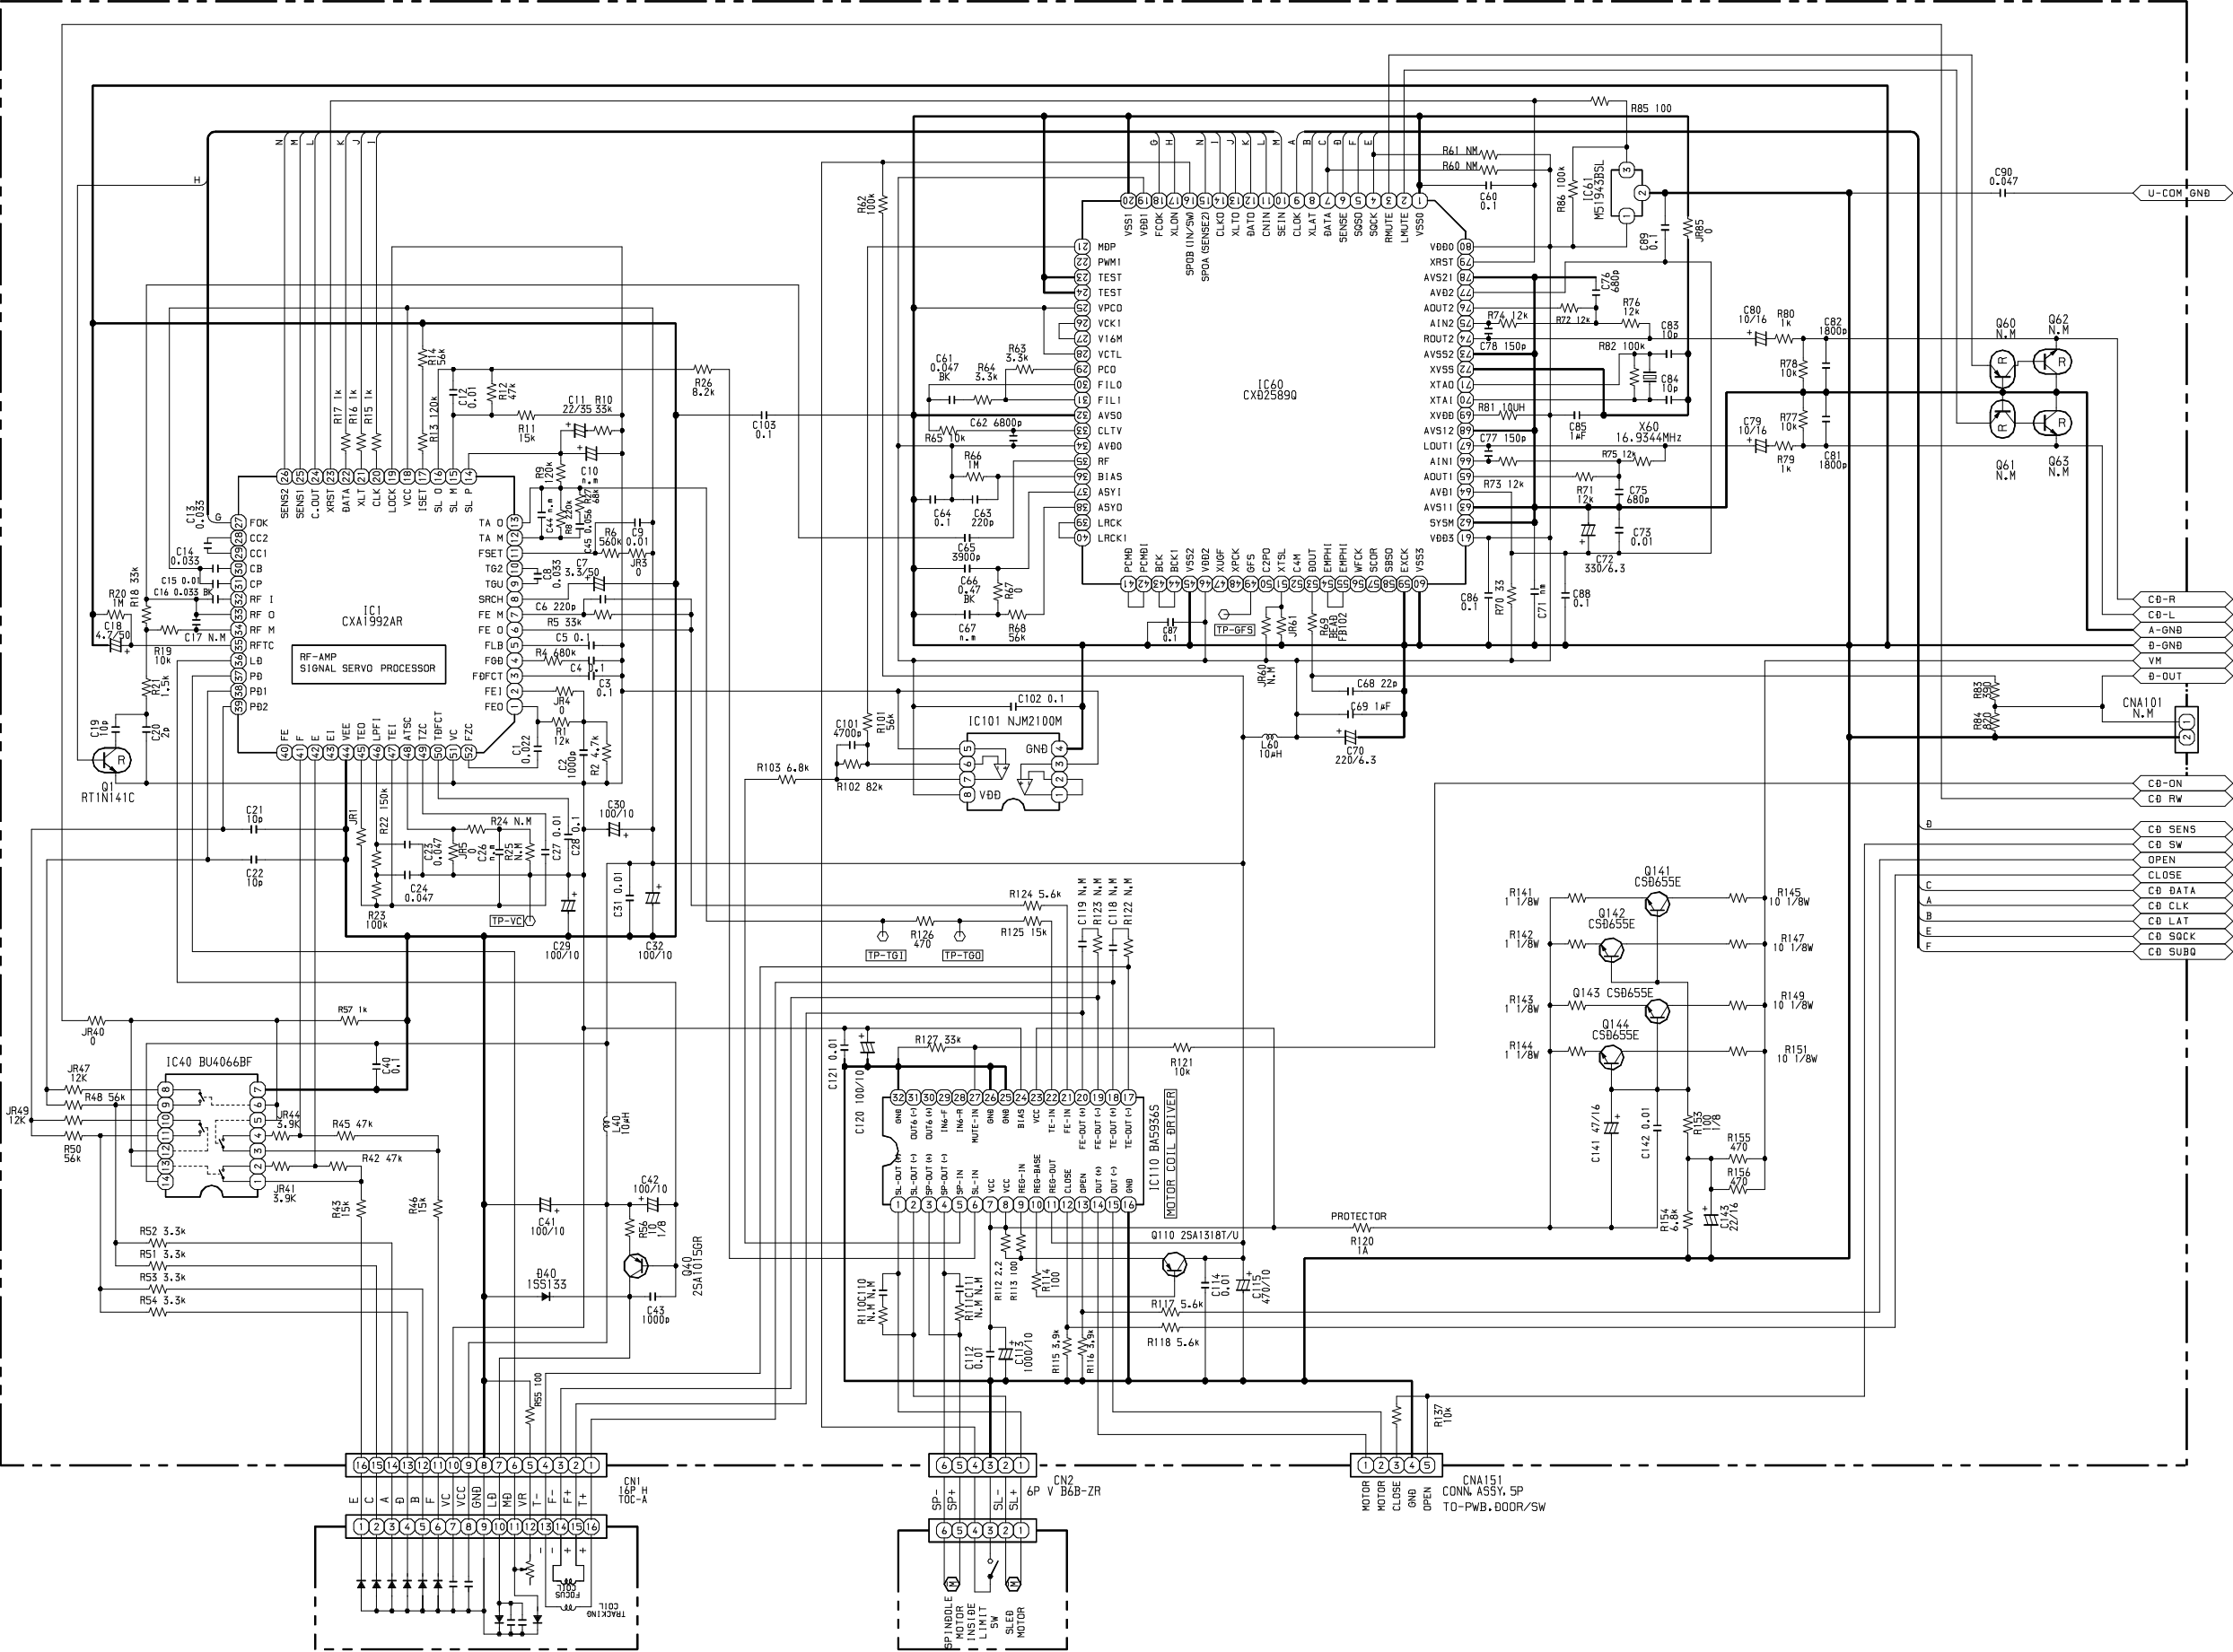

SCHEMATIC DIAGRAM – 7 (FD-SLM800 /801 : DECK)

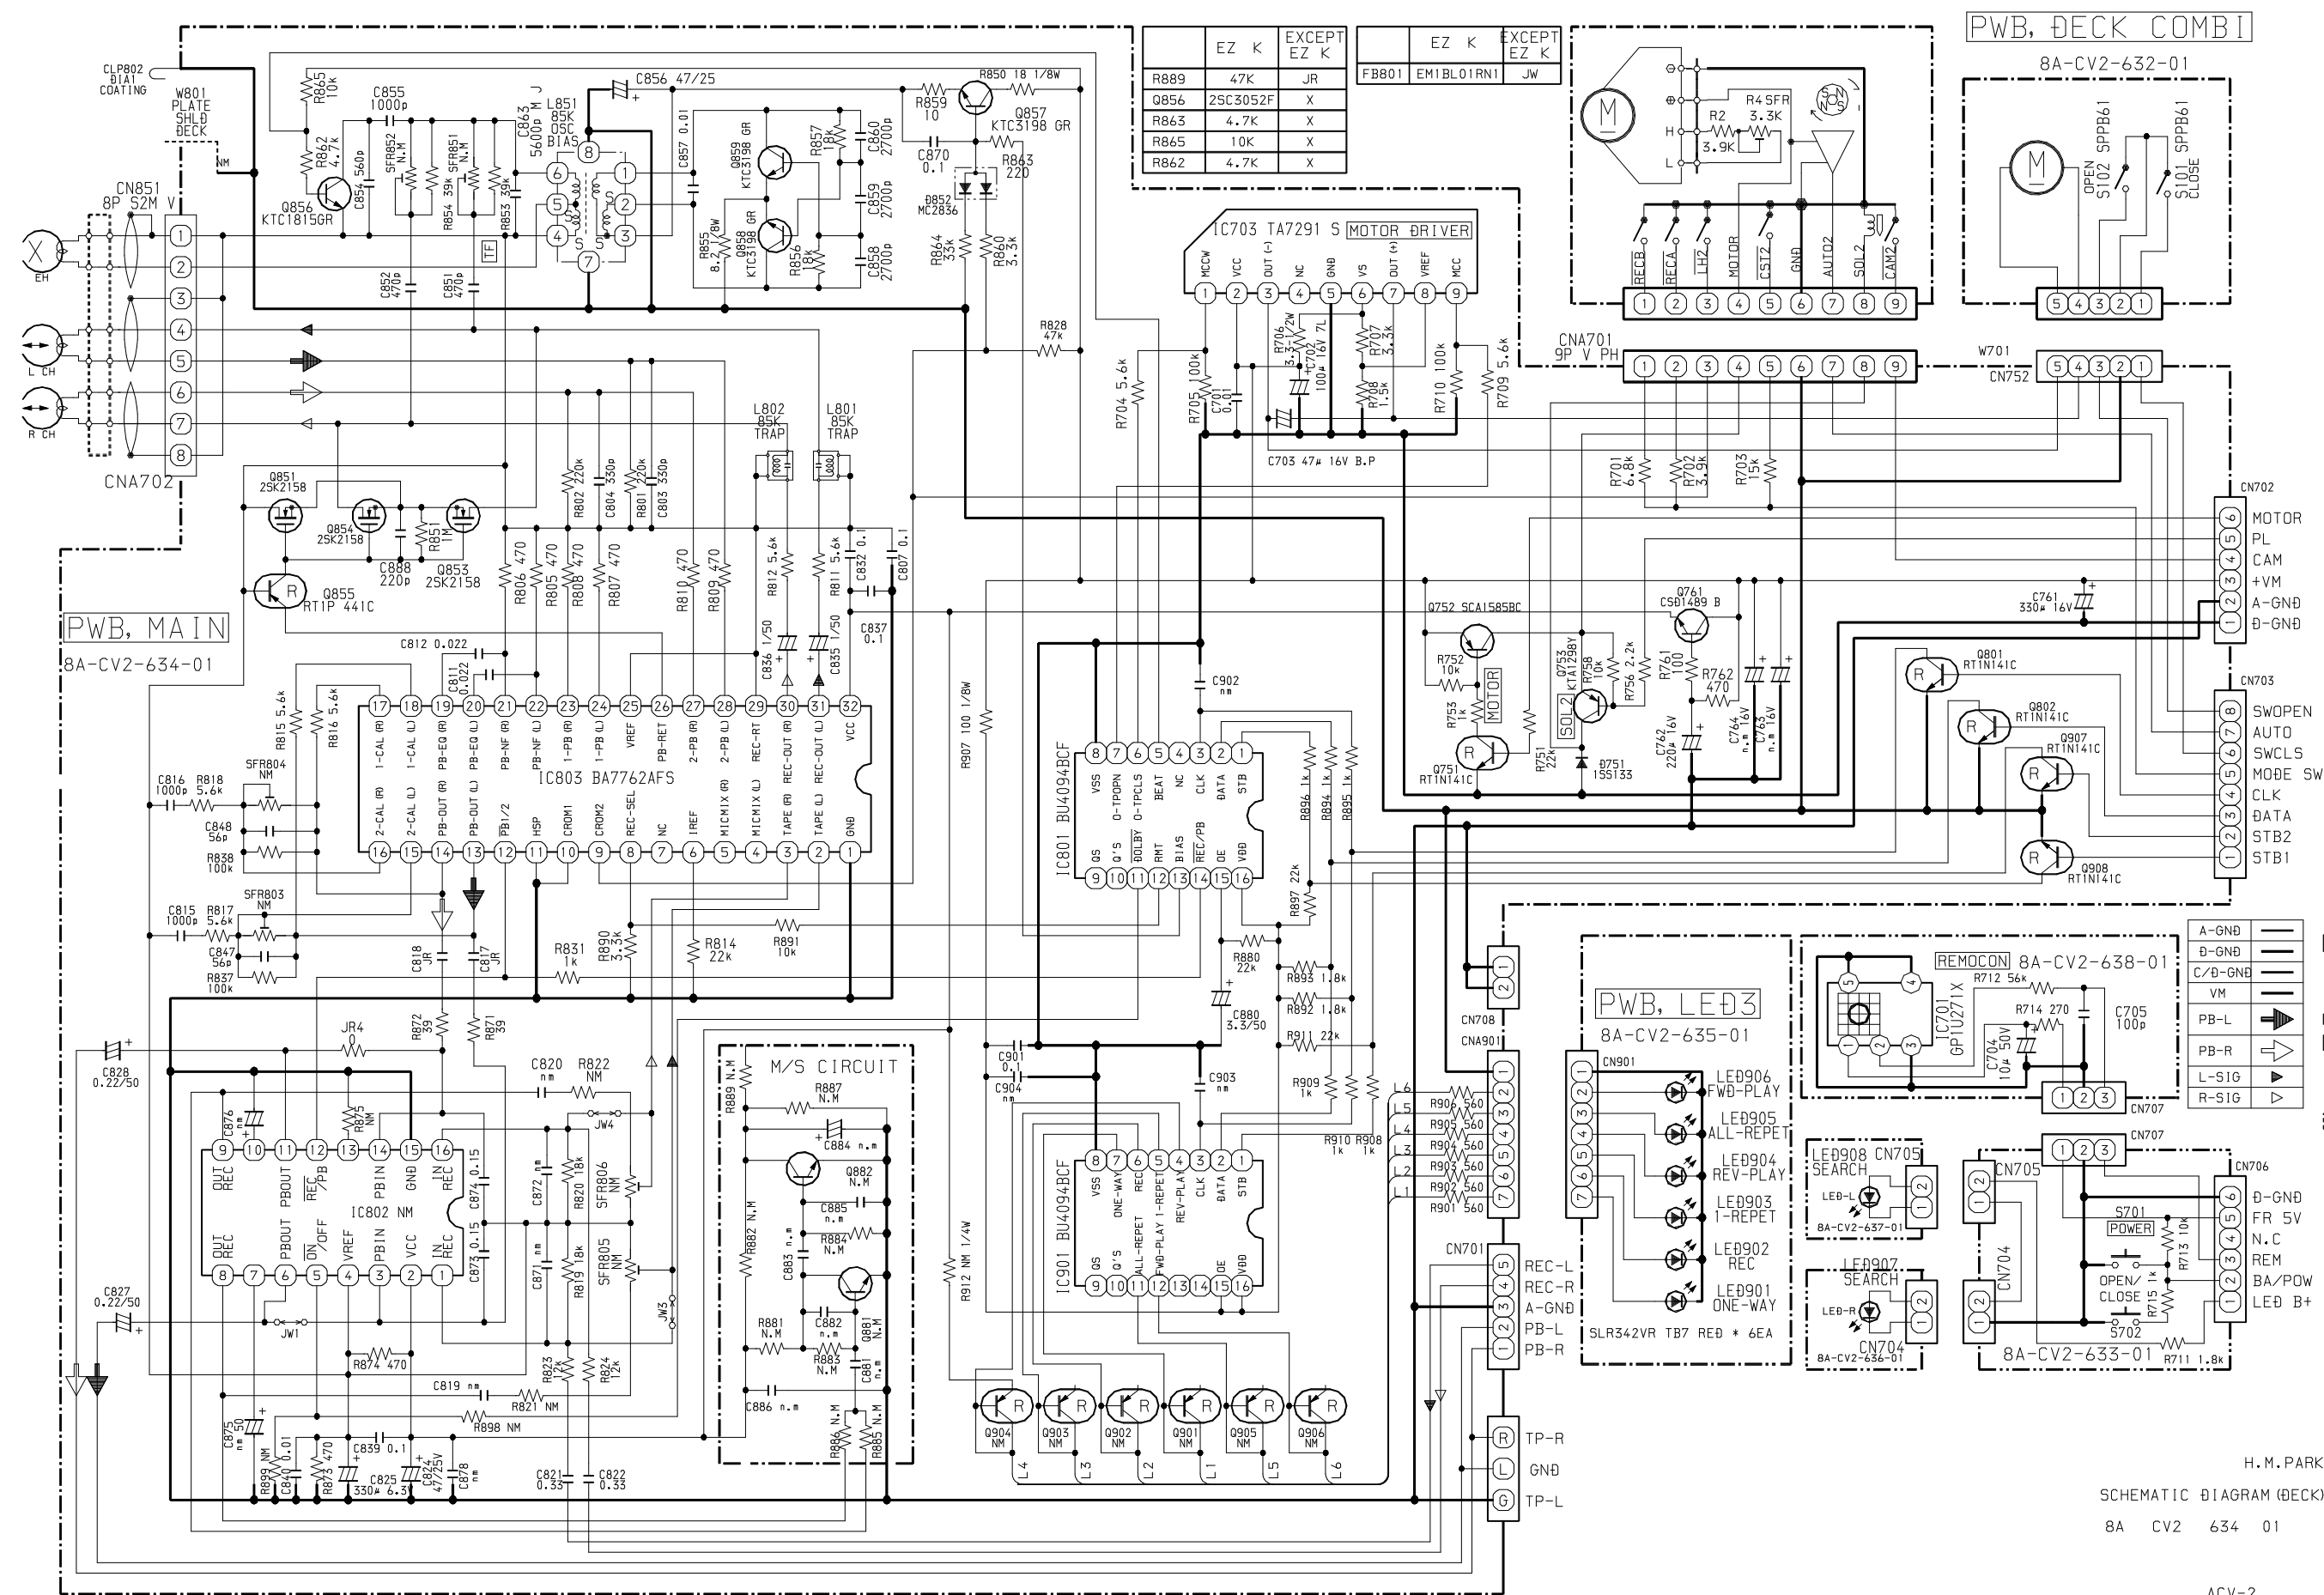

H.M.PARK
SCHEMATIC DIAGRAM (DECK)
8A CV2 634 01

アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111